# Service Manual Air Conditioner



Indoor Unit CS-Z25UFEAW CS-Z35UFEAW CS-Z50UFEAW

Outdoor Unit CU-Z25UBEA CU-Z35UBEA CU-Z50UBEA

> Destination Europe Turkey

Please file and use this manual together with the service manual for Model No. CU-2E12SBE, CU-2E15SBE, CU-2E18SBE, CU-2Z35TBE, CU-2Z41TBE, CU-2Z50TBE, Order No. PAPAMY1601015CE, PAPAMY1702035CE.

# 

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the products dealt with in this service information by anyone else could result in serious injury or death.

## IMPORTANT SAFETY NOTICE =

There are special components used in this equipment which are important for safety. These parts are marked by  $\triangle$  in the Schematic Diagrams, Circuit Board Diagrams, Exploded Views and Replacement Parts List. It is essential that these critical parts should be replaced with manufacturer's specified parts to prevent shock, fire or other hazards. Do not modify the original design without permission of manufacturer.

#### PRECAUTION OF LOW TEMPERATURE

In order to avoid frostbite, be assured of no refrigerant leakage during the installation or repairing of refrigerant circuit.

## 

**R32 REFRIGERANT** – This Air Conditioner contains and operates with refrigerant R32. **THIS PRODUCT MUST ONLY BE INSTALLED OR SERVICED BY QUALIFIED PERSONNEL.** Refer to Commonwealth, State, Territory and local legislation, regulations, codes, installation & operation manuals, before the installation, maintenance and/or service of this product.



# TABLE OF CONTENTS

		PA	GE
1.	Safe	ety Precautions	4
2.	Prec	caution for Using R32 Refrigerant	7
3.	Spe	cifications	.11
4.		tures	
5.		ation of Controls and Components	
-	<b>LUU</b>	Indoor Unit	
-	. 1 .2	Outdoor Unit	
-	.3	Remote Control	
6.	Dim	ensions	.21
6	.1	Indoor Unit	.21
6	.2	Outdoor Unit	.22
7.	Refr	rigeration Cycle Diagram	.24
7	.1	CS-Z25UFEAW CU-Z25UBEA	
		CS-Z35UFEAW CU-Z35UBEA	
-	.2	CS-Z50UFEAW CU-Z50UBEA	
8.	Bloc	ck Diagram	.26
8	.1	CS-Z25UFEAW CU-Z25UBEA	
_		CS-Z35UFEAW CU-Z35UBEA	
-	.2	CS-Z50UFEAW CU-Z50UBEA	
9.	Wiri	ng Connection Diagram	
-	.1	Indoor Unit	
•	.2	Outdoor Unit	
10.	Elec	tronic Circuit Diagram	.31
•	0.1	Indoor Unit	
-	0.2	Outdoor Unit	
11.	Prin	ted Circuit Board	.34
•	1.1	Indoor Unit	
	1.2	Outdoor Unit	
12.	Inst	allation Instruction	.38
		Indoor Unit	
1	2.2	Outdoor Unit	.46
13.		allation and Servicing Air Conditioner	
		ng R32	
	3.1 3.2	About R32 Refrigerant Characteristics of R32 Refrigerant	
	3.2 3.3	Refrigerant piping installation • Tools used	
	~ 4	in services	.52
1	3.4	New installation, Relocation, Repairing of Refrigerant Cycle System	
		The Procedures	.56
1	3.5	Piping installation of R32	
	3.6	Installation, Relocation, and Service	.58
1	3.7	Repairing of refrigerant cycle /	ດາ
1	3.8	Brazing point <reference> Analysis method for no error</reference>	
		code, no cooling / no warming	
14.	Ope	ration Control	.70
	4.1	Basic Function	
-	4.2	Indoor Fan Motor Operation	
	4.3	Outdoor Fan Motor Operation	.72
1	4.4	Airflow Direction	.73

PAGE

	Г	AGE
14.5	Quiet Operation (Cooling Mode/Cooling	70
14.6	Area of Dry Mode) Quiet Operation (Heating)	73 74
14.7	Powerful Mode Operation	
14.8	Timer Control	74
14.9	Auto Restart Control Indication Panel	
14.10		
14.12		76
	eration Control r Multi Split Connection)	78
15.1	Cooling operation	78
15.2	Soft Dry Operation	
15.3 15.4	Heating Operation Automatic Operation	
15.4	Indoor Fan Motor Operation	
15.6	Powerful Mode Operation	79
15.7	Auto Restart Control	
15.8	Indication Panel	
16. Pro	tection Control	
16.1 16.2	Protection Control for All Operations Protection Control for Cooling & Soft Dry	
16.3	Operation Protection Control for Heating Operation	83
	vicing Mode	
17.1	Auto OFF/ON Button	
17.2 17.3	Heat Only Operation Remote Control Button	86 87
-	ubleshooting Guide	
18.1 18.2	Refrigeration Cycle System Breakdown Self Diagnosis Function	90 92
18.3	Error Codes Table	
18.4	Self-diagnosis Method	95
19. Disa	assembly and Assembly Instructions	124
19.1	Remove the Front Panel	124
19.2	Remove the Front Grille	
19.3 19.4	Remove the Discharge Grille Remove the Control Board	
19.4	Remove the Drain Pan	
19.6	Remove the Cross Flow Fan and	
	Fan Motor	128
19.7	Outdoor Electronic Controller Removal Procedure	120
	hnical Data	
20.1 20.2	Cool Mode Performance Data Heat Mode Performance Data	
-		
		135
21.1	Cool Mode Outdoor Air Temperature Characteristic	125
21.2	Heat Mode Outdoor Air Temperature	100
	Characteristic	
21.3	Piping Length Correction Factor	141

# 22. Exploded View and Replacement PartsList14422.1Indoor Unit14422.2Outdoor Unit149

• Specifications, designs and contents in this Service Manual are subject to change without notice.

# 1. Safety Precautions

- Read the following "SAFETY PRECAUTIONS" carefully before perform any servicing.
- Electrical work must be installed or serviced by a licensed electrician. Be sure to use the correct rating of the power plug and main circuit for the model installed.
- The caution items stated here must be followed because these important contents are related to safety. The meaning of each indication used is as below. Incorrect installation or servicing due to ignoring of the instruction will cause harm or damage, and the seriousness is classified by the following indications.

	WARNING	This indication shows the possibility of causing death or serious injury.
$\triangle$	CAUTION	This indication shows the possibility of causing injury or damage to properties.

• The items to be followed are classified by the symbols:

This symbol denotes item that is PROHIBITTED from doing.
--

• Explanation of symbols displayed on the indoor unit or outdoor unit.

	WARNING This symbol shows that this equipment uses a flammable refrigerant. If the refrigerant is leaked, together with an external ignition source, there is a possibility of ignition.	
	CAUTION This symbol shows that the Operation Manual should be read carefully.	
<b>CAUTION</b> This symbol shows that a service personnel should be handling this equipment with reference to the Installation Manual.		
ĺĺ	CAUTION	This symbol shows that there is information included in the Operation Manual and/or Installation Manual.

• Carry out test run to confirm that no abnormality occurs after the servicing. Then, explain to user the operation, care and maintenance as stated in instructions. Please remind the customer to keep the operating instructions for future reference.

1.	Do not use means to accelerate the defrosting process or to clean, other than those recommended by the manufacturer. Any unfit method or using incompatible material may cause product damage, burst and serious injury.	$\bigcirc$
2.	Do not install outdoor unit near handrail of veranda. When installing air-conditioner unit on veranda of a high rise building, child may climb up to outdoor unit and cross over the handrail causing an accident.	$\bigcirc$
3.	Do not use unspecified cord, modified cord, joint cord or extension cord for power supply cord. Do not share the single outlet with other electrical appliances. Poor contact, poor insulation or over current will cause electrical shock or fire.	$\oslash$
4.	The appliance shall be stored in a well ventilated room with floor area larger than A min (m <sup>2</sup> ) [refer Table A] and without any continuously operating ignition sources. Keep away from open flames, any operating gas appliances or any operating electric heater. Else, it may explode and cause injury or death.	$\bigotimes$
5.	Do not tie up the power supply cord into a bundle by band. Abnormal temperature rise on power supply cord may happen.	$\bigcirc$
6.	Do not insert your fingers or other objects into the unit, high speed rotating fan may cause injury.	$\bigcirc$
7.	Do not sit or step on the unit, you may fall down accidentally.	$\bigcirc$
8.	The appliance shall be installed, and/or operated in a room with floor area larger than A min (m <sup>2</sup> ) [refer Table A] and keep away from ignition sources, such as heat/sparks/open flame, or, hazardous areas, such as gas appliances, gas cooking, reticulated gas supply systems, or electric cooking appliances, etc.	$\Diamond$
9.	Keep plastic bag (packaging material) away from small children, it may cling to nose and mouth and prevent breathing.	$\bigcirc$
10.	When installing or relocating air conditioner, do not let any substance other than the specified refrigerant, eg. air etc mix into refrigeration cycle (piping). Mixing of air etc. will cause abnormal high pressure in refrigeration cycle and result in explosion, injury etc.	$\oslash$
11.	Do not pierce or burn as the appliance is pressurized. Do not expose the appliance to heat, flame, sparks, or other sources of ignition. Else, it may explode and cause injury or death.	$\oslash$
12.	Do not add or replace refrigerant other than specified type. It may cause product damage, burst and injury etc.	$\bigcirc$

13.	Do not perform flare connection inside a building or dwelling or room, when joining the heat exchanger of indoor unit with interconnecting piping. Refrigerant connection inside a building or dwelling or room must be made by brazing or welding. Joint connection of indoor unit by flaring method can only be made at outdoor or at outside of a building or dwelling or room. Flare connection may cause gas leak and flammable atmosphere.
14.	<ul> <li>For R32 model, use piping, flare nut and tools which is specified for R32 refrigerant. Using of existing (R22) piping, flare nut and tools may cause abnormally high pressure in the refrigerant cycle (piping), and possibly result in explosion and injury.</li> <li>Thickness or copper pipes used with R32 must be more than 0.8 mm. Never use copper pipes thinner than 0.8 mm.</li> <li>It is desirable that the amount of residual oil less than 40 mg/10 m.</li> </ul>
15.	Engage authorized dealer or specialist for installation and servicing. If installation or servicing done by the user is defective, it will cause water leakage, electrical shock or fire.
16.	For refrigeration system work, Install according to this installation instructions strictly. If installation is defective, it will cause water leakage, electrical shock or fire.
17.	Use the attached accessories parts and specified parts for installation and servicing. Otherwise, it will cause the set to fall, water leakage, fire or electrical shock.
18.	Install at a strong and firm location which is able to withstand weight of the set. If the strength is not enough or installation is not properly done, the set will drop and cause injury.
19.	For electrical work, follow the national regulation, legistration and this installation instructions. An independent circuit and single outlet must be used. If electrical circuit capacity is not enough or defect found in the electrical work, it will cause electrical shock or fire.
20.	Do not use joint cable for indoor/outdoor connection cable. Use the specified indoor/outdoor connection cable, refer to instruction <b>CONNECT THE CABLE TO THE INDOOR UNIT</b> and connect tightly for indoor/outdoor connection. Clamp the cable so that no external force will have impact on the terminal. If connection or fixing is not perfect, it will cause heat up or fire at the connection.
21.	Wire routing must be properly arranged so that control board cover is fixed properly. If control board cover is not fixed perfectly, it will cause heat-up or fire at connection point of terminal, fire or electrical shock.
22.	This equipment is strongly recommended to be installed with Earth Leakage Circuit Breaker (ELCB) or Residual Current Device (RCD), with sensitivity of 30mA at 0.1 sec or less. Otherwise, it may cause electrical shock and fire in case of equipment breakdown or insulation breakdown.
23.	During installation, install the refrigerant piping properly before running the compressor. Operation of compressor without fixing refrigeration piping and valves at opened position will cause suck-in of air, abnormal high pressure in refrigeration cycle and result in explosion, injury etc.
24.	During pump down operation, stop the compressor before removing the refrigeration piping. Removal of refrigeration piping while compressor is operating and valves are opened will cause suck-in of air, abnormal high pressure in refrigeration cycle and result in explosion, injury etc.
25.	Tighten the flare nut with torque wrench according to specified method. If the flare nut is over-tightened, after a long period, the flare may break and cause refrigerant gas leakage.
26.	After completion of installation or service, confirm there is no leakage of refrigerant gas. It may generate toxic gas when the refrigerant contacts with fire.
27.	Ventilate if there is refrigerant gas leakage during operation. It may cause toxic gas when the refrigerant contacts with fire.
28.	Be aware that refrigerants may not contain an odour.
29.	This equipment must be properly earthed. Earth line must not be connected to gas pipe, water pipe, earth of lightning rod and telephone. Otherwise, it may cause electrical shock in case of equipment breakdown or insulation breakdown.
30.	Do not modify the machine, part, material during repairing service.
31.	If wiring unit is supplied as repairing part, do not repair or connect the wire even only partial wire break. Exchange the whole wiring unit.
32.	Do not wrench the fasten terminal. Pull it out or insert it straightly.
33.	Must not use other parts except original parts describe in catalog and manual.

1.	Do not install the unit in a place where leakage of flammable gas may occur. In case gas leaks and accumulates at surrounding of the unit, it may cause fire.	$\bigcirc$
2.	Prevent liquid or vapor from entering sumps or sewers since vapor is heavier than air and may form suffocating atmospheres.	$\bigcirc$
3.	Do not release refrigerant during piping work for installation, servicing, reinstallation and during repairing a refrigerant parts. Take care of the liquid refrigerant, it may cause frostbite.	$\oslash$
4.	Do not install this appliance in a laundry room or other location where water may drip from the ceiling, etc.	$\Diamond$

5.	Do not touch the sharp aluminium fin, sharp parts may cause injury.			
6.	6. Carry out drainage piping as mentioned in installation instructions. If drainage is not perfect, water may enter the room and damage the furniture.			
7.	<ul> <li>Select an installation location which is easy for maintenance.</li> <li>7. Incorrect installation, service or repair of this air conditioner may increase the risk of rupture and this may result in loss damage or injury and/or property.</li> </ul>			
8.	<ul> <li>Power supply connection to the room air conditioner.</li> <li>Use power supply cord 3 x 1.5 mm<sup>2</sup> (3/4 ~ 1.5HP), 3 x 2.5 mm<sup>2</sup> (2.0HP) type designation 60245 IEC 57 or heavier cord.</li> <li>Connect the power supply cord of the air conditioner to the mains using one of the following method.</li> <li>Power supply point should be in easily accessible place for power disconnection in case of emergency.</li> <li>In some countries, permanent connection of this air conditioner to the power supply is prohibited.</li> <li>1) Power supply connection to the receptacle using power plug.</li> <li>Use an approved 15/16A (3/4 ~ 1.5HP), 16A (2.0HP) power plug with earth pin for the connection to the socket.</li> <li>2) Power supply connection to a circuit breaker for the permanent connection. It must be a double pole switch with a minimum 3.0 mm contact gap.</li> </ul>			
9.	Installation or servicing work: It may need two people to carry out the installation or servicing work.			
10	Pb free solder has a higher melting point than standard solder; typically the melting point is 50°F – 70°F (30°C – 40°C) higher. Please use a high temperature solder iron. In case of the soldering iron with temperature control, please set it to 700 ± 20°F (370 ± 10°C). (370 ± 10°C). Pb free solder will tend to splash when heated too high (about 1100°F / 600°C).			
11.	Do not touch the sharp aluminum fins or edges of metal parts. If you are required to handle sharp parts during installation or servicing, please wear hand glove. Sharp parts may cause injury.			
12.	Tighten the flare nut with torque wrench according to specified method. If the flare nut is over-tightened, after a long period, the flare may break and cause refrigerant gas leakage.			
13.	Do not touch outdoor unit air inlet and aluminium fin. It may cause injury.			

# 2. Precaution for Using R32 Refrigerant

• The basic installation work procedures are the same as conventional refrigerant (R410A, R22) models. However, pay careful attention to the following points:

1.	Since the working pressure is higher than that of refrigerant R22 models, some of the piping and installation and service tools are special. (See "2.1. Special tools for R32 (R410A)".) Especially, when replacing a refrigerant R22 model with a new refrigerant R32 model, always replace the conventional piping and flare nuts with the R32 and R410A piping and flare nuts on the outdoor unit side. For R32 and R410A, the same flare nut on the outdoor unit side and pipe can be used.		
2.	Models that use refrigerant R32 and R410A have a different charging port thread diameter to prevent erroneous charging with refrigerant R22 and for safety. Therefore, check beforehand. [The charging port thread diameter for R32 and R410A is 12.7 mm (1/2 inch).]		
3.	Be more careful than R22 so that foreign matter (oil, water, etc.) does not enter the piping. Also, when storing the piping, securely seal the opening by pinching, taping, etc. (Handling of R32 is similar to R410A.)		

1.	<ul> <li>Installation (Space)</li> <li>Must ensure the installation of pipe-work shall be kept to a minimum. Avoid use dented pipe and do not allow acute bending.</li> <li>Must ensure that pipe-work shall be protected from physical damage.</li> <li>Must comply with national gas regulations, state municipal rules and legislation. Notify relevant authorities in accordance with all applicable regulations.</li> <li>Must ensure mechanical connections be accessible for maintenance purposes.</li> <li>In cases that require mechanical ventilation, ventilation openings shall be kept clear of obstruction.</li> <li>When disposal of the product, do follow to the precautions in #12 and comply with national regulations.</li> <li>Always contact to local municipal offices for proper handling.</li> <li>Interconnecting refrigerant pipework, i.e. pipework external to the unitary components, should be marked with a Class label (see Figure 9.1 of Code of Practice) every two metres where the pipework is visible. This includes pipework located in a ceiling space or any void which a person may access for maintenance or repair work within that space.</li> </ul>		
2.	<ul> <li>Servicing</li> <li>2-1. Service personnel</li> <li>Any qualified person who is involved with working on or breaking into a refrigerant circuit should hold a current valid certificate from an industry-accredited assessment authority, which authorizes their competence to handle refrigerants safely in accordance with an industry recognised assessment specification.</li> <li>Servicing shall only be performed as recommended by the equipment manufacturer. Maintenance and repair requiring the assistance of other skilled personnel shall be carried out under the supervision of the person competent in the use of flammable refrigerants.</li> <li>Servicing shall be performed only as recommended by the manufacturer.</li> <li>2-2. Work</li> <li>Prior to beginning work on systems containing flammable refrigerants, safety checks are necessary to ensure that the risk of ignition is minimised.</li> <li>For repair to the refrigerating system, the precautions in #2-2 to #2-8 must be followed before conducting work on the system.</li> <li>Work shall be undertaken under a controlled procedure so as to minimize the risk of a flammable gas or vapor being present while the work is being performed.</li> <li>All maintenance staff and others working in the local area shall be instructed and supervised on the nature of work being carried out.</li> <li>Avoid working in confined spaces.</li> <li>Wear appropriate protective equipment, including respiratory protection, as conditions warrant.</li> <li>Ensure that the conditions within the area have been made safe by limit of use of any flammable material. Keep all sources of ignition and hor metal surfaces away.</li> <li>2-3. Checking for presence of refrigerant</li> <li>The area shall be checked with an appropriate refrigerant detector prior to and during work, to ensure the technician is aware of potentially flammable atmospheres.</li> <li>Ensure that the leak detection equipment being used is suitable for use with flammable refrigerants, i.e. non sparking, adequately sealed or intri</li></ul>		

		ON
	<ul> <li>2-5. No ignition sources</li> <li>No person carrying out work in relation to a refrigeration system contained flammable refrigerant shall use any sources of ignition</li> </ul>	
	removing and disposal, during which flammable refrigerant can p	be kept sufficiently far away from the site of installation, repairing, ossibly be released to the surrounding space. e surveyed to make sure that there are no flammable hazards or
	ignition risks. • "No Smoking" signs shall be displayed. 2-6. Ventilated area	
	<ul> <li>Ensure that the area is in the open or that it is adequately ventila</li> <li>A degree of ventilation shall continue during the period that the v</li> <li>The ventilation should safely disperse any released refrigerant a</li> </ul>	vork is carried out.
	<ul> <li>2-7. Checks to the refrigeration equipment</li> <li>Where electrical components are being changed, they shall be fi</li> <li>At all times the manufacturer's maintenance and service guidelin</li> <li>If in doubt consult the manufacturer's technical department for an another service and service and</li></ul>	es shall be followed.
	<ul> <li>The following checks shall be applied to installations using flamm</li> <li>The charge size is in accordance with the room size within</li> <li>The ventilation machinery and outlets are operating adequa</li> <li>If an indirect refrigerating circuit is being used, the seconda</li> <li>Marking to the equipment continues to be visible and legible</li> <li>Refrigeration pipe or components are installed in a position which may corrode refrigerant containing components, unle inherently resistant to being corroded or are properly protect.</li> </ul>	hable refrigerants. which the refrigerant containing parts are installed. htely and are not obstructed. ry circuit shall be checked for the presence of refrigerant. e. Markings and signs that are illegible shall be corrected. where they are unlikely to be exposed to any substance ss the components are constructed of materials which are
	<ul> <li>2-8. Checks to electrical devices</li> <li>Repair and maintenance to electrical components shall include in</li> <li>Initial safety checks shall include but not limit to:-</li> </ul>	nitial safety checks and component inspection procedures.
	<ul> <li>That capacitors are discharged: this shall be done in a safe</li> <li>That there is no live electrical components and wiring are e</li> <li>That there is continuity of earth bonding.</li> <li>At all times the manufacturer's maintenance and service guidelir</li> </ul>	xposed while charging, recovering or purging the system.
	• If in doubt consult the manufacturer's technical department for as	
	The owner of the equipment must be informed or reported so all	continue operation, an adequate temporary solution shall be used. parties are advised thereinafter.
	<ul> <li>Repairs to sealed components</li> <li>During repairs to sealed components, all electrical supplies shall any removal of sealed covers, etc.</li> <li>If it is absolutely necessary to have an electrical supply to equip</li> </ul>	be disconnected from the equipment being worked upon prior to
	<ul> <li>detection shall be located at the most critical point to warn of a p</li> <li>Particular attention shall be paid to the following to ensure that b</li> </ul>	otentially hazardous situation.
3.	<b>a a</b>	ng of glands, etc. nat they no longer serve the purpose of preventing the ingress of
	<ul><li>flammable atmospheres.</li><li>Replacement parts shall be in accordance with the manufacture</li></ul>	's specifications.
	NOTE: The use of silicon sealant may inhibit the effectiven Intrinsically safe components do not have to be iso	
4.	<ul> <li>Repair to intrinsically safe components</li> <li>Do not apply any permanent inductive or capacitance loads to the voltage and current permitted for the equipment in use.</li> <li>Intrinsically safe components are the only types that can be work</li> <li>The test apparatus shall be at the correct rating.</li> <li>Replace components only with parts specified by the manufactur refrigerant in the atmosphere from a leak.</li> </ul>	
5.	<ul> <li>Cabling</li> <li>Check that cabling will not be subject to wear, corrosion, excess environmental effects.</li> <li>The check shall also take into account the effects of aging or corrosion.</li> </ul>	
6.	<ul> <li>Detection of flammable refrigerants</li> <li>Under no circumstances shall potential sources of ignition be us</li> <li>A halide torch (or any other detector using a naked flame) shall refrigerants</li> </ul>	ed in the searching or detection of refrigerant leaks.

7.	<ul> <li>Leak detection methods</li> <li>Electronic leak detectors shall be used to detect flammable refrigerants, but the sensitivity may not be adequate, or may need recalibration. (Detection equipment shall be calibrated in a refrigerant-free area.)</li> <li>Ensure that the detector is not a potential source of ignition and is suitable for the refrigerant used.</li> <li>Leak detection equipment shall be set at a percentage of the LFL of the refrigerant and shall be calibrated to the refrigerant employed and the appropriate percentage of gas (25 % maximum) is confirmed.</li> <li>Leak detection fluids are suitable for use with most refrigerants but the use of detergents containing chlorine shall be avoided as the chlorine may react with the refrigerant and corrode the copper pipe-work.</li> <li>If a leak is suspected, all naked flames shall be removed/extinguished.</li> <li>If a leakage of refrigerant is found which requires brazing, all of the refrigerant shall be recovered from the system, or isolated (by means of shut off valves) in a part of the system remote from the leak. Oxygen free nitrogen (OFN) shall then be purged through the system both before and during the brazing process.</li> </ul>
	<ul> <li>Removal and evacuation</li> <li>When breaking into the refrigerant circuit to make repairs – or for any other purpose – conventional procedures shall be used. However, it is important that best practice is followed since flammability is a consideration. The following procedure shall be adhered to:</li> </ul>
	<ul> <li>remove refrigerant -&gt; • purge the circuit with inert gas -&gt; • evacuate -&gt; • purge again with inert gas -&gt;</li> <li>open the circuit by cutting or brazing</li> </ul>
8.	<ul> <li>The refrigerant charge shall be recovered into the correct recovery cylinders.</li> <li>The system shall be "flushed" with OFN to render the unit safe.</li> <li>This process may need to be repeated several times.</li> <li>Compressed air or oxygen shall not be used for this task.</li> </ul>
	<ul> <li>Flushing shall be achieved by breaking the vacuum in the system with OFN and continuing to fill until the working pressure is achieved, then venting to atmosphere, and finally pulling down to a vacuum.</li> <li>This process shall be repeated until no refrigerant is within the system.</li> <li>When the final OFN charge is used, the system shall be vented down to atmospheric pressure to enable work to take place.</li> <li>This operation is absolutely vital if brazing operations on the pipe work are to take place.</li> </ul>
	Ensure that the outlet for the vacuum pump is not close to any ignition sources and there is ventilation available.
9.	<ul> <li>Charging procedures</li> <li>In addition to conventional charging procedures, the following requirements shall be followed. <ul> <li>Ensure that contamination of different refrigerants does not occur when using charging equipment.</li> <li>Hoses or lines shall be as short as possible to minimize the amount of refrigerant contained in them.</li> <li>Cylinders shall be kept upright.</li> <li>Ensure that the refrigeration system is earthed prior to charging the system with refrigerant.</li> <li>Label the system when charging is complete (if not already).</li> <li>Extreme care shall be taken not to over fill the refrigeration system.</li> </ul> </li> <li>Prior to recharging the system it shall be pressure tested with OFN (refer to #7).</li> <li>The system shall be leak tested on completion of charging but prior to commissioning.</li> <li>A follow up leak test shall be carried out prior to leaving the site.</li> <li>Electrostatic charge may accumulate and create a hazardous condition when charging and discharging the refrigerant. To avoid fire or explosion, dissipate static electricity during transfer by grounding and bonding containers and equipment before charging/discharging.</li> </ul>
	<ul> <li>Decommissioning</li> <li>Before carrying out this procedure, it is essential that the technician is completely familiar with the equipment and all its details.</li> <li>It is recommended good practice that all refrigerants are recovered safely.</li> <li>Prior to the task being carried out, an oil and refrigerant sample shall be taken in case analysis is required prior to re-use of reclaimed refrigerant.</li> <li>It is essential that electrical power is available before the task is commenced. <ul> <li>a) Become familiar with the equipment and its operation.</li> <li>b) Isolate system electrically.</li> <li>c) Before attempting the procedure ensure that:</li> </ul> </li> </ul>
10.	<ul> <li>mechanical handling equipment is available, if required, for handling refrigerant cylinders;</li> <li>all personal protective equipment is available and being used correctly;</li> <li>the recovery process is supervised at all times by a competent person;</li> <li>recovery equipment and cylinders conform to the appropriate standards.</li> </ul>
	<ul> <li>d) Pump down refrigerant system, if possible.</li> <li>e) If a vacuum is not possible, make a manifold so that refrigerant can be removed from various parts of the system.</li> <li>f) Make sure that cylinder is situated on the scales before recovery takes place.</li> <li>g) Start the recovery machine and operate in accordance with manufacturer's instructions.</li> <li>h) Do not over fill cylinders. (No more than 80 % volume liquid charge).</li> <li>i) Do not exceed the maximum working pressure of the cylinder, even temporarily.</li> <li>j) When the cylinders have been filled correctly and the process completed, make sure that the cylinders and the equipment are removed from site promptly and all isolation valves on the equipment are closed off.</li> <li>k) Recovered refrigerant shall not be charged into another refrigeration system unless it has been cleaned and checked.</li> <li>Electrostatic charge may accumulate and create a hazardous condition when charging or discharging the refrigerant. To avoid fire or explosion, dissipate static electricity during transfer by grounding and bonding containers and equipment before charging/discharging.</li> </ul>

11.	<ul> <li>Labelling</li> <li>Equipment shall be labelled stating that it has been de-commissioned and emptied of refrigerant.</li> <li>The label shall be dated and signed.</li> <li>Ensure that there are labels on the equipment stating the equipment contains flammable refrigerant.</li> </ul>							
12.	<ul> <li>Recovery</li> <li>When removing refrigerant from a system, either for servicing or decommissioning, it is recommended good practice that all refrigerants are removed safely.</li> <li>When transferring refrigerant into cylinders, ensure that only appropriate refrigerant recovery cylinders are employed.</li> <li>Ensure that the correct number of cylinders for holding the total system charge are available.</li> <li>All cylinders to be used are designated for the recovered refrigerant and labelled for that refrigerant (i.e. special cylinders for the recovery of refrigerant).</li> <li>Cylinders shall be complete with pressure relief valve and associated shut-off valves in good working order.</li> <li>Recovery cylinders are evacuated and, if possible, cooled before recovery occurs.</li> <li>The recovery equipment shall be in good working order with a set of instructions concerning the equipment that is at hand and shall be suitable for the recovery of fammable refrigerants.</li> <li>In addition, a set of calibrated weighing scales shall be available and in good working order.</li> <li>Hoses shall be complete with leak-free disconnect couplings and in good condition.</li> <li>Before using the recovery machine, check that it is in satisfactory working order, has been properly maintained and that any associated electrical components are sealed to prevent ignition in the event of a refrigerant release. Consult manufacturer if in doubt.</li> <li>The recoverd refrigerant shall be returned to the refrigerant supplier in the correct recovery cylinder, and the relevant Waste Transfer Note arranged.</li> <li>Do not mix refrigerant in recovery units and especially not in cylinders.</li> <li>If compressors or compressor oils are to be removed, ensure that they have been evacuated to an acceptable level to make certain that flammable refrigerant does not remain within the lubricant.</li> <li>The evacuation process shall be carried out prior to returning the compressor to the suppliers.</li> <li>Only electric heating to t</li></ul>							

# 3. Specifications

Indoor		Indoor		CS-Z25UFEAW	I	CS-Z35UFEAW		
Model Outdoor				CU-Z25UBEA		CU-Z35UBEA		
Performance Test Condition			EUROVENT			EUROVENT		
Phase. Hz			Single, 50		Single, 50			
Po	wer Supply	V		230			230	
v			Min.	Mid.	Max.	Min.	Mid.	Max.
		kW	0.85	2.50	3.40	0.85	3.50	3.80
	Capacity	BTU/h	2900	8530	11600	2900	11900	13000
		kcal/h	730	2150	2920	730	3010	3270
Ru	Inning Current	А	_	2.50	_	_	3.90	_
	Input Power	W	240	520	900	240	860	1.02k
	ual Consumption	kWh	_	260	_	_	430	_
		W/W	3.54	4.81	3.78	3.54	4.07	3.73
	EER	BTU/hW	12.08	16.40	12.89	12.08	13.84	12.75
מ		kcal/hW	3.04	4.13	3.24	3.04	3.50	3.21
P	Pdesign	kW	0.01	2.5	0.21	0.01	3.5	0.21
	SEER	(W/W)		7.9			8.1	
ErP	Annual Consumption	kWh		111			151	
	Class			A++			A++	
F	Power Factor	%	_	90	_	_	96	_
		dB-A	38 / 25 / 20			39 / 26 / 20		
Indoor	Noise (H / L / QLo)	Power Level dB		54 / _ / _		55 / – / –		
		dB-A		46 / _ / _			48 / - / -	
Outdoor	Noise (H / L / QLo)	Power Level dB		61/-/-			63 / - / -	
		kW	0.85	3.40	5.00	0.85	4.30	6.00
	Capacity	BTU/h	2900	11600	17100	2900	14700	20500
		kcal/h	730	2920	4300	730	3700	5160
Ru	Inning Current	А	_	3.50	_	_	4.80	_
	Input Power	W	240	760	1.35k	240	1.08k	1.75k
		W/W	3.54	4.47	3.70	3.54	3.98	3.43
	COP	BTU/hW	12.08	15.26	12.67	12.08	13.61	11.71
		kcal/hW	3.04	3.84	3.19	3.04	3.43	2.95
מ	Pdesign	kW		2.7		3.2		
	Tbivalent	°C		-10		-10		
ErP	SCOP	(W/W)		4.6			4.6	
	Annual Consumption	kWh		822			974	
	Class			A++	1		A++	
F	Power Factor	%	_	94	_	_	98	_
Indoor	Noise (H / L / QLo)	dB-A		38 / 25 / 19			39 / 26 / 19	
		Power Level dB		54 /			55 /	
Outdoor	· Noise (H / L / QLo)	dB-A	47 / - / -				48 / - / -	
		Power Level dB	62 / - / -				63 /	
Low Tem	np. : Capacity (kW) /	I.Power (W) / COP	3.62 / 1.19k / 3.04			4	.35 / 1.55k / 2.8	31
xtr Low T	emp. : Capacity (kW)	/ I.Power (W) / COP	2.88 / 1.18k / 2.44			3	.37 / 1.41k / 2.3	9
Max	Current (A) / Max In	put Power (W)	6.2 / 1.35k				8.0 / 1.75k	
	Starting Curren	t (A)		3.50			4.80	

Model		Indoor	CS-Z25UFEAW	CS-Z35UFEAW						
		Outdoor	CU-Z25UBEA	CU-Z35UBEA						
		Т	уре		Hermetic Motor (Rotary)	Hermetic Motor (Rotary)				
Compressor		Moto	or Type		Brushless (6 poles)	Brushless (6 poles)				
		Outpu	it Power	W	700	700				
		Туре			Cross Flow Fan	Cross Flow Fan				
		Material			ASG33	ASG33				
	М	otor Typ	e		DC / Transistor (8-poles)	DC / Transistor (8-poles)				
	In	put Pow	er	W	44	44				
	Ou	tput Pov	ver	W	30	30				
			Cool	rpm	520	520				
8		QLo	Heat	rpm	520	520				
			Cool	rpm	610	630				
		Lo	Heat	rpm	620	640				
<b>C</b>	naad	Ма	Cool	rpm	790	810				
S	peed	Ме	Heat	rpm	820	840				
		Hi	Cool	rpm	990	1000				
			Heat	rpm	1030	1040				
		011	Cool	rpm	1040	1050				
		SHi	Heat	rpm	1080	1090				
	Туре				Propeller Fan	Propeller Fan				
	Material				PP	PP				
Lan	Motor Type			DC (8-poles)	DC (8-poles)					
0	Input Power		W	_	_					
	Ou	tput Pov	ver	W	40	40				
			Cool	rpm	820	850				
S	peed	Hi	Heat	rpm	780	830				
.	Moistu	re Remo	oval	L/h (Pt/h)	1.5 (3.2)	2.0 (4.2)				
		d	Cool	m <sup>3</sup> /min (ft <sup>3</sup> /min.)	5.0 (177)	5.0 (177)				
		QLo	Heat	m <sup>3</sup> /min (ft <sup>3</sup> /min.)	5.0 (177)	5.0 (177)				
			Cool	m <sup>3</sup> /min (ft <sup>3</sup> /min.)	5.8 (205)	6.0 (212)				
		Lo	Heat	m <sup>3</sup> /min (ft <sup>3</sup> /min.)	5.9 (208)	6.1 (215)				
Indo	oor		Cool	m <sup>3</sup> /min (ft <sup>3</sup> /min.)	7.5 (265)	7.7 (272)				
Airfl	ow	Me	Heat	m <sup>3</sup> /min (ft <sup>3</sup> /min.)	7.8 (275)	8.0 (283)				
			Cool	m <sup>3</sup> /min (ft <sup>3</sup> /min.)	9.60 (340)	9.90 (350)				
	Hi		Hi		Hi		Heat	m <sup>3</sup> /min (ft <sup>3</sup> /min.)	9.90 (350)	10.10 (355)
		o	Cool	m <sup>3</sup> /min (ft <sup>3</sup> /min.)	9.8 (346)	10.2 (360)				
		SHi	Heat	m <sup>3</sup> /min (ft <sup>3</sup> /min.)	10.2 (360)	10.5 (371)				
Outd	loor		Cool	m <sup>3</sup> /min (ft <sup>3</sup> /min.)	28.7 (1015)	34.3 (1210)				
Airfl		Hi	Heat	m <sup>3</sup> /min (ft <sup>3</sup> /min.)	27.2 (960)	33.5 (1185)				
		Contro	ol Device		Expansion Valve	Expansion Valve				
	eration	Refrig	erant Oil	cm <sup>3</sup>	FW50S (320)	FW50S (320)				
Сус		Refrige	rant Type	g (oz)	R32, 880 (31.1)	R32, 930 (32.8)				
		-		SWP	675	675				
F-G	as	Ma	CO2 (Precharg	eq (ton) jed Amount / narged Amount)	0.594 / 0.678	0.628 / 0.712				
		Height (	(I/D / O/D)	mm (inch)	600 (23-5/8) / 542 (21-11/32)	600 (23-5/8) / 619 (24-3/8)				
Dimer	nsion		//////////////////////////////////////	mm (inch)	750 (29-17/32) / 780 (30-23/32)	750 (29-17/32) / 824 (32-15/32)				
			, I/D / O/D)	mm (inch)	207 (8-5/32) / 289 (11-13/32)	207 (8-5/32) / 299 (11-25/32)				

Model		Indoor	CS-Z25U	IFEAW	CS-Z35U	FEAW
		Outdoor	CU-Z25	UBEA	CU-Z35UBEA	
Weight Net (I/D / O/D)		kg (lb)	13 (29) / 33 (73)		13 (29) / 35 (77)	
Pipe Dia	meter (Liquid / Gas)	mm (inch)	6.35 (1/4) /	9.52 (3/8)	6.35 (1/4) /	9.52 (3/8)
St	andard length	m (ft)	5.0 (1	6.4)	5.0 (1	6.4)
ව Length	range (min – max)	m (ft)	3 (9.8) ~ 2	0 (65.6)	3 (9.8) ~ 2	0 (65.6)
DuididLengthI/D & C	D/D Height different	m (ft)	15.0 (4	19.2)	15.0 (4	19.2)
Addit	onal Gas Amount	g/m (oz/ft)	10 (0	.1)	10 (0	.1)
Length	for Additional Gas	m (ft)	7.5 (2	4.6)	7.5 (24	4.6)
	Inner Diameter	mm	28.	5	28.	5
Drain Hose	Length	mm	27	0	270	)
	Fin Material		Aluminium (	Pre Coat)	Aluminium (	Pre Coat)
Indoor Heat	Fin Type		Slit F	Fin	Slit Fin	
Exchanger	Row × Stage × FPI		2 × 17 × 21		2 × 17 × 21	
	Size (W × H × L)	mm	554 × 357 × 25.4		554 × 357 × 25.4	
	Fin Material		Aluminium		Aluminium	
Outdoor Heat	Fin Type		Corrugated Fin		Corrugat	ed Fin
Exchanger	Row × Stage × FPI		2 × 24 × 19		2 × 28 × 17	
	Size (W × H × L)	mm	36.4 × 504 × 824.2:793.7		36.38 × 588 ×	856.3:827.7
Ain Filten	Material		Polypropelene		Polyprop	belene
Air Filter	Туре		One-touch		One-touch	
Po	wer Supply		Outdoor		Outdoor	
Powe	r Supply Cord	А	Nil		Nil	
Т	hermostat		Electronic	Control	Electronic Control	
Prote	ection Device		Electronic	Control	Electronic Control	
			Dry Bulb	Wet Bulb	Dry Bulb	Wet Bulb
	Cooling	Maximum °C	32	23	32	23
Indoor Operatio	Cooling	Minimum °C	16	11	16	11
Range		Maximum °C	30	-	30	_
	Heating	Minimum °C	16	-	16	_
	Cooling	Maximum °C	43	26	43	26
Outdoor Operatio	ů l	Minimum °C	-10	-	-10	_
Range	Heating	Maximum °C	24	18	24	18
	ricauity	Minimum °C	-15	-16	-15	-16

Cooling capacities are based on indoor temperature of 27°C Dry Bulb (80.6°F Dry Bulb), 19.0°C Wet Bulb (66.2°F Wet Bulb) and outdoor air temperature of 35°C DRY BULB (95°F Dry Bulb), 24°C Wet Bulb (75.2°F Wet Bulb). 1.

2. Heating capacities are based on indoor temperature of 20°C Dry Bulb (68°F Dry Bulb) and outdoor air temperature of 7°C Dry Bulb (44.6°F Dry Bulb), 6°C Wet Bulb (42.8°F Wet Bulb).

3.

Heating low temperature capacity, Input Power and COP measured at 230 V, indoor temperature 20°C, outdoor 2/1°C. Heating extreme low temperature capacity, Input Power and COP measured at 230 V, indoor temperature 20°C, outdoor -7/-8°C. 4.

5. 6. Standby power consumption ≤10.0w (when switched OFF by remote control, except under self protection control).

Specifications are subjected to change without prior notice for further improvement.

Model Indoor Outdoor		Indoor		CS-Z50UFEAW			
		CU-Z50UBEA					
Performance Test Condition Phase, Hz			EUROVENT				
				Single, 50			
	Power Supply	V		230			
			Min.	Mid.	Max.		
		kW	0.90	5.00	5.70		
	Capacity	BTU/h	3070	17100	19400		
		kcal/h	770	4300	4900		
	Running Current	A	_	6.20	_		
	Input Power	W	255	1.39k	1.81k		
A	Innual Consumption	kWh	_	695	_		
		W/W	3.53	3.60	3.15		
	EER	BTU/hW	12.04	12.30	10.72		
b		Kcal/hW	3.02	3.09	2.71		
Cooling	Pdesign	kW		5.0			
0	SEER	(W/W)		6.7			
ErF		kWh		261			
	Class			A++			
	Power Factor	%	_				
		dB-A		44 / 31 / 27			
Indo	oor Noise (H / L / QLo)	Power Level dB	60 /				
		dB-A	48 / - / -				
Outd	loor Noise (H / L / QLo)	Power Level dB	63 / - / -				
		kW	0.90	5.80	8.10		
	Capacity	BTU/h	3070	19800	27600		
		kcal/h	770	4990	6970		
	Running Current	A	_	7.00	_		
	Input Power	W	260	1.55k	2.60k		
		W/W	3.46	3.74	3.12		
	COP	BTU/hW	11.81	12.77	10.62		
		kcal/hW	2.96	3.22	2.68		
ing	Pdesign	kW		4.4			
Heating	Tbivalent	°C		-10			
ErF	SCOP	(W/W)		4.3			
	Annual Consumption	kWh		1433			
	Class			A+			
	Power Factor	%	_	96	_		
Indo	oor Noise (H / L / QLo)	dB-A		46 / 33 / 29			
		Power Level dB		62 /			
Outd	loor Noise (H / L / QLo)	dB-A		48 / - / -			
		Power Level dB		63 /			
	Femp. : Capacity (kW) /		5.87 / 2.30k / 2.55				
	w Temp. : Capacity (kW)		5.03 / 2.06k / 2.44				
Ν	/lax Current (A) / Max In	out Power (W)	11.4 / 2.60k				
	Starting Curren	t (A)		7.00			

Model		Indoor	CS-Z50UFEAW		
		Outdoor	CU-Z50UBEA		
Compressor Motor Type Output Power		уре		Hermetic Motor (Rotary)	
		Moto	or Type		Brushless (4 poles)
		Outpu	it Power	W	900
		Туре			Cross Flow Fan
		Material			ASG33
	М	otor Typ	e		DC / Transistor (8-poles)
	In	put Pow	er	W	44
	Ou	tput Pov	ver	W	30
			Cool	rpm	670
an		QLo	Heat	rpm	740
Indoor Fan			Cool	rpm	750
pdd		Lo	Heat	rpm	830
	<b>.</b> .		Cool	rpm	970
	Speed	Me	Heat	rpm	1050
			Cool	rpm	1190
		Hi	Heat	rpm	1350
			Cool	rpm	1240
		SHi	Heat	rpm	1400
		Туре			Propeller Fan
		Material			PP
<sup>-</sup> an	Motor Type			DC (8-poles)	
Outdoor Fan	Input Power		W	_	
Dutd	Output Power		ver	W	40
0			Cool	rpm	720
	Speed	Hi	Heat	rpm	700
	Moistu	Moisture Removal		L/h (Pt/h)	2.8 (5.9)
			Cool	m³/min (ft³/min.)	6.4 (226)
		QLo	Heat	m <sup>3</sup> /min (ft <sup>3</sup> /min.)	7.0 (247)
			Cool	m³/min (ft³/min.)	7.1 (251)
		Lo	Heat	m³/min (ft³/min.)	7.9 (279)
	Indoor		Cool	m³/min (ft³/min.)	9.2 (325)
	Airflow	Me	Heat	m³/min (ft³/min.)	9.9 (350)
		Cool		m³/min (ft³/min.)	11.60 (410)
		Hi	Heat	m³/min (ft³/min.)	13.20 (465)
			Cool	m <sup>3</sup> /min (ft <sup>3</sup> /min.)	12.0 (424)
		SHi	Heat	m³/min (ft³/min.)	13.5 (477)
C	Dutdoor		Cool	m³/min (ft³/min.)	39.7 (1400)
	Airflow	Hi	Heat	m <sup>3</sup> /min (ft <sup>3</sup> /min.)	38.6 (1365)
		Contro	ol Device		Expansion Valve
	frigeration		erant Oil	cm <sup>3</sup>	FW50S (450)
	Cycle	_	rant Type	g (oz)	R32, 1.13k (39.9)
		0		GWP	675
	F-Gas	м	CO2 (Precharg	leq (ton) ged Amount / harged Amount)	0.763 / 0.991
		Height (	(I/D / O/D)	mm (inch)	600 (23-5/8) / 695 (27-3/8)
Di	imension	-	I/D / O/D)	mm (inch)	750 (29-17/32) / 875 (34-15/32)
		Depth (	I/D / O/D)	mm (inch)	207 (8-5/32) / 320 (12-5/8)

	Model	Indoor	CS-Z50	JFEAW			
	Wodel	Outdoor	CU-250	UBEA			
Weight	Net (I/D / O/D)	kg (lb)	13 (29) / 43 (95)				
Pipe D	iameter (Liquid / Gas)	mm (inch)	6.35 (1/4) /	12.70 (1/2)			
	Standard length	m (ft)	5.0 (*	16.4)			
Duid I/D &	h range (min – max)	m (ft)	3 (9.8) ~ -	30 (98.4)			
ad I∕D &	O/D Height different	m (ft)	20.0 (	65.6)			
Add	itional Gas Amount	g/m (oz/ft)	15 (	0.2)			
Leng	th for Additional Gas	m (ft)	7.5 (2	24.6)			
Drain Hos	Inner Diameter	mm	28	.5			
	Length	mm	27	0			
	Fin Material		Aluminium	(Pre Coat)			
Indoor Hea	at Fin Type		Slit	Fin			
Exchange	<sup>er</sup> Row × Stage × FPI		2 × 17 × 21				
	Size (W × H × L)	mm	554 × 35	357 × 25.4			
	Fin Material		Alumi	Aluminium			
Outdoor Heat	Fin Type		Corrugated F	Fin (Pre Coat)			
Exchange	r Row × Stage × FPI		2 × 31	× 19			
	Size (W × H × L)	mm	36.4 × 651 ×	854.5:824.5			
Air Filter	Material		Polypropelene				
All Filler	Туре		One-touch				
P	ower Supply		Outdoor				
Pow	ver Supply Cord	А	Ν	il			
	Thermostat		Electronic	c Control			
Pro	otection Device		Electroni	c Control			
			Dry Bulb	Wet Bulb			
	Cooling	Maximum °C	32	23			
Indoo Operati	r S	Minimum °C	16	11			
Range		Maximum °C	30	_			
	Heating -	Minimum °C	16	_			
	Cooling	Maximum °C	43	26			
Outdoo Operati	or	Minimum °C	-10	_			
Range		Maximum °C	24	18			
	ricaung	Minimum °C	-15	-16			

Cooling capacities are based on indoor temperature of 27°C Dry Bulb (80.6°F Dry Bulb), 19.0°C Wet Bulb (66.2°F Wet Bulb) and outdoor air temperature of 35°C DRY BULB (95°F Dry Bulb), 24°C Wet Bulb (75.2°F Wet Bulb). Heating capacities are based on indoor temperature of 20°C Dry Bulb (68°F Dry Bulb) and outdoor air temperature of 7°C Dry Bulb (44.6°F Dry Bulb), 6°C Wet Bulb (42.8°F Wet Bulb). 1.

2.

3. Heating low temperature capacity, Input Power and COP measured at 230 V, indoor temperature 20°C, outdoor 2/1°C.

Heating extreme low temperature capacity, input 1 over and COP measured at 200 V, index temperature 20°C, outdoor -7/-8°C. Standby power consumption  $\leq$ 10.0w (when switched OFF by remote control, except under self protection control). 4.

5.

6. Specifications are subjected to change without prior notice for further improvement.

#### **Multi Split Combination Possibility:** •

A single outdoor unit enables air conditioning of up to two separate rooms for CU-2Z35TBE, CU-2Z41TBE, 0 CU-2Z50TBE.

	CONNEC	CTABLE INDOOR UNIT	CU-2Z	CU-2Z35TBE CU-2Z41TBE		Z41TBE	CU-2Z50TBE		
		ROOM	A	В	A	В	A	В	
	2.0kW	CS-MZ20UFEA	•	•	•	•	•	٠	
all	2.5kW	CS-Z25UFEAW	•	•	•	•	•	٠	
Wall	3.5kW	CS-Z35UFEAW	•	-	•	_	•	•	
	5.0kW	CS-Z50UFEAW	_	-	_	_	•	_	
	Capacity range of connectable units		From 3.2kW to 6.0kW		From 3.2kW to 6.0kW		From 3.2kW to 7.7kW		
	1 room maximum pipe length (m)		20		20		20		
_	AI	lowable elevation (m)	10		10		10		
length	Total	allowable pipe length (m)	30		30		30		
Pipe le	Total pipe length for maximum chargeless length (m)		20		20		20		
	Additional gas amount over chargeless length (g/m)		15			15		15	
			•		·		Note:	"•" : Available	

#### Remarks for CU-2Z35TBE / CU-2Z41TBE / CU-2Z50TBE

1. The total nominal cooling capacity of indoor unit that will be connected to outdoor unit must be within connectable capacity range of indoor unit. (as shown in the table above) Example: The indoor units' combination below is possible to connect to CU-2Z41TBE. (Total nominal capacity of indoor units is between

3.2kW to 6.0kW)

1) Two CS-MZ20UFEA only. (Total nominal cooling capacity is 4.0kW)

#### • Multi Split Combination Possibility:

• A single outdoor unit enables air conditioning of up to two separate rooms for CU-2E12SBE, CU-2E15SBE, CU-2E18SBE.

	CONNECT	TABLE INDOOR UNIT	CU-2E	CU-2E12SBE*		15SBE*	CU-2E	CU-2E18SBE*	
		ROOM	A B		A	В	A	В	
	2.0kW	CS-MZ20UFEA	•	•	•	•	•	•	
Wall	2.5kW	CS-Z25UFEAW	•	•	•	•	•	•	
Ň	3.2kW	CS-Z35UFEAW	•	_	•	_	•	•	
	5.0kW	CS-Z50UFEAW	_	_	_	_	•	_	
	Capacity range of connectable units		From 3.2kW to 5.7kW		From 3.2kW to 5.7kW		From 3.2kW to 7.5kW		
	1 room maximum pipe length (m)		20		20		20		
_ د	Allo	wable elevation (m)	10		10		10		
length	Total allowable pipe length (m)		30		30		30		
Pipe le	Total pipe length for maximum chargeless length (m)		20		20		20		
	Additional gas amount over chargeless length (g/m)		15			15		15	
	•		•		•		Note	e: "●" : Available	

#### Remarks for CU-2E12SBE / CU-2E15SBE / CU-2E18SBE

1. The total nominal cooling capacity of indoor unit that will be connected to outdoor unit must be within connectable capacity range of indoor unit. (as shown in the table above)

Example: The indoor units' combination below is possible to connect to CU-2E15SBE. (Total nominal capacity of indoor units is between 3.2kW to 5.7kW)

1) Two CS-MZ20UFEA only. (Total nominal cooling capacity is 4.0kW)

Note\*: Above outdoor unit is contains and operates with refrigerant R410A gas.

# 4. Features

#### Inverter Technology

- Wider output power range
- Energy saving
- o Quick Cooling
- o Quick Heating
- More precise temperature control

#### • Environment Protection

• Non-ozone depletion substances refrigerant (R32)

#### • Long Installation Piping

• Long piping up to 20 meters (1.0 ~ 1. 5HP) and 30 meters (2.0 ~ 2.25HP) during single split connection only

#### • Easy to use remote control

#### Quality Improvement

- o Random auto restart after power failure for safety restart operation
- o Gas leakage protection
- Prevent compressor reverse cycle
- o Inner protector to protect compressor
- Noise prevention during soft dry operation

#### Operation Improvement


- Quiet mode to reduce the indoor unit operating sound
- o Powerful mode to reach the desired room temperature quickly
- 24-hour timer setting

#### • Serviceability Feature


- Breakdown Self Diagnosis function
- o Activation and Deactivation Method for Heating Only Mode

# 5. Location of Controls and Components

# 5.1 Indoor Unit

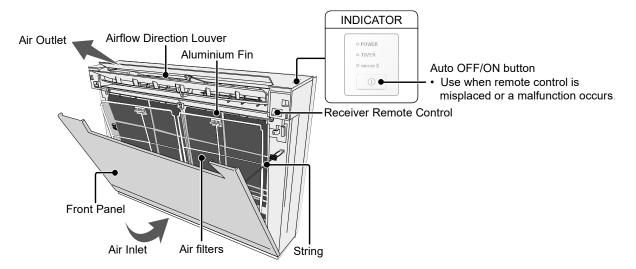

## 5.2 Outdoor Unit

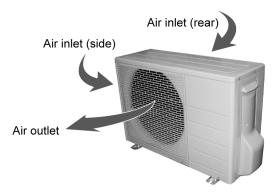

# 5.3 Remote Control

 


# 6. Dimensions

 
# 6.1 Indoor Unit


<Top View>

<Front View>









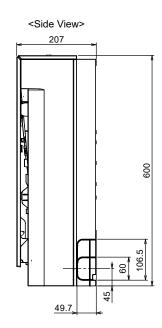

<Back View>

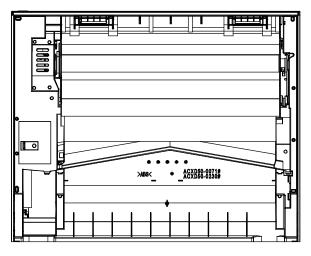

<Bottom View>

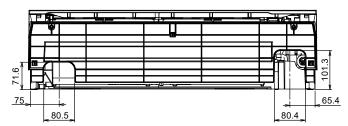




<Remote Control Holder>




Unit : mm


## 6.2 Outdoor Unit
 
#### 6.2.1 CU-Z25UBEA

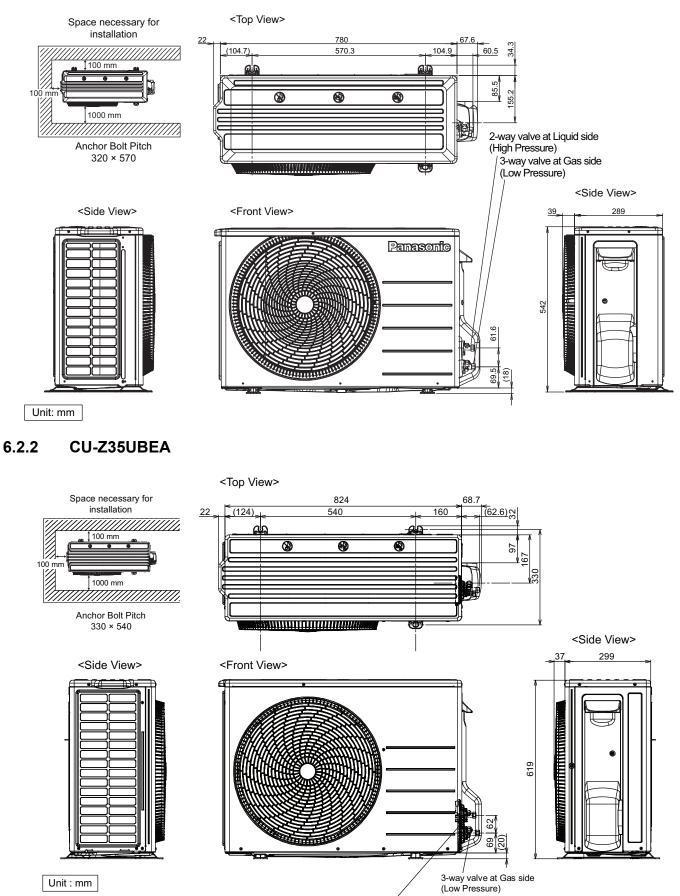




## 6.2.3 CU-Z50UBEA

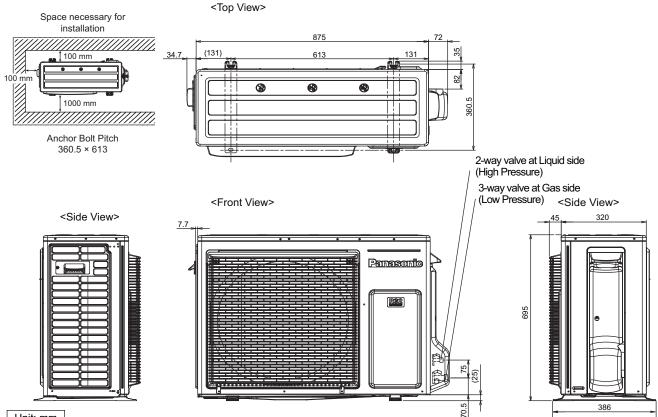


Unit: mm

# 7. Refrigeration Cycle Diagram

# 7.1 CS-Z25UFEAW CU-Z25UBEA CS-Z35UFEAW CU-Z35UBEA

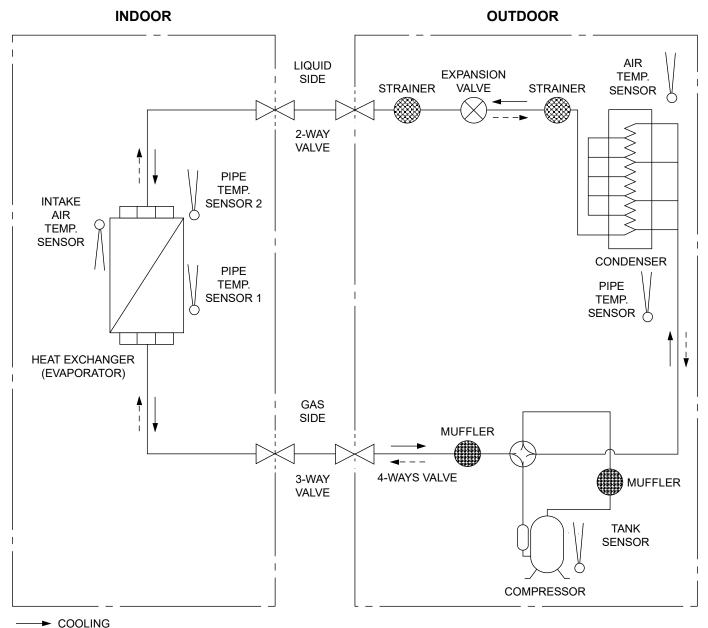


# 7.2 CS-Z50UFEAW CU-Z50UBEA

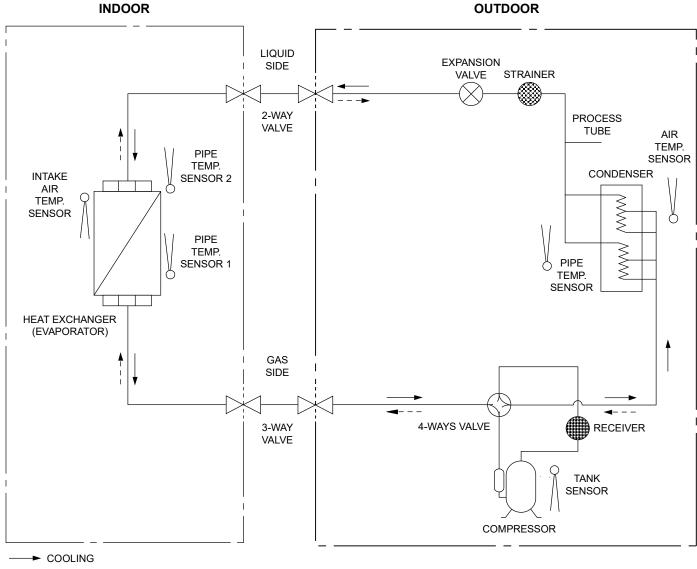


--- HEATING

# 8. Block Diagram

8.1 CS-Z25UFEAW CU-Z25UBEA CS-Z35UFEAW CU-Z35UBEA

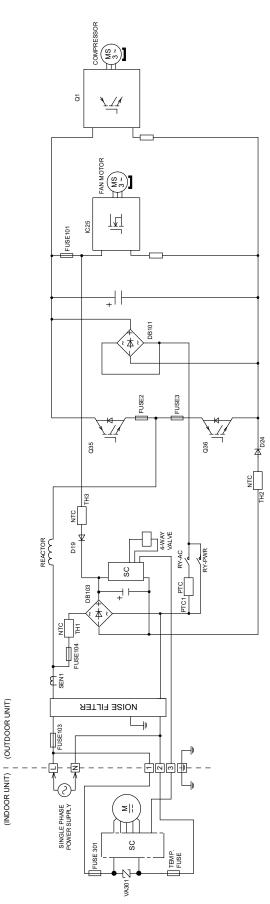


# 8.2 CS-Z50UFEAW CU-Z50UBEA

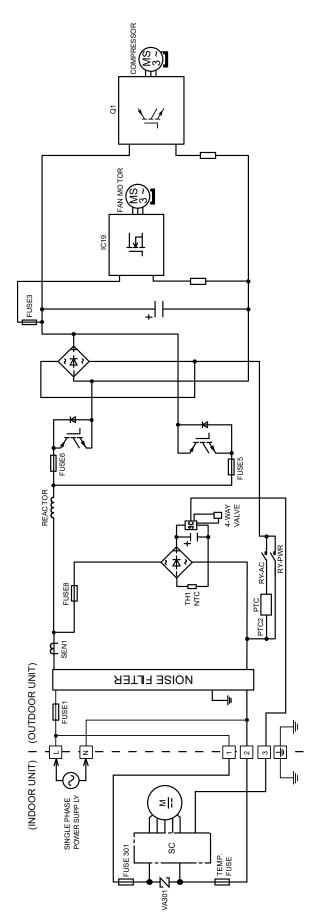

27


# 9. Wiring Connection Diagram

# 9.1 Indoor Unit

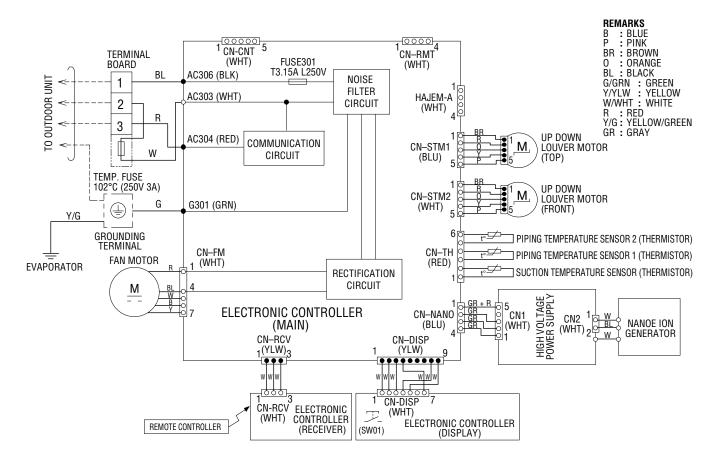

# 9.2 Outdoor Unit

## 9.2.1 CU-Z25UBEA CU-Z35UBEA

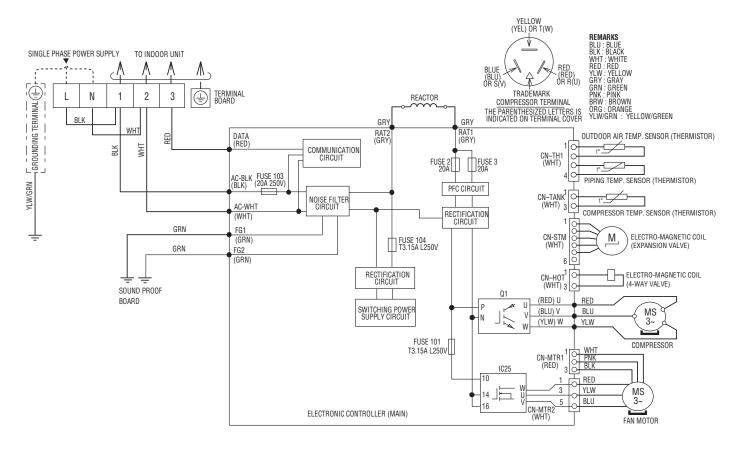


#### Resistance of Compressor Windings

MODEL	CU-Z25UBEA / CU-Z35UBEA
CONNECTION	9RS102XFA21 (Ω)
U-V	1.211
U-W	1.211
V-W	1.211

Note: Resistance at 20°C of ambient temperature.

## 9.2.2 CU-Z50UBEA

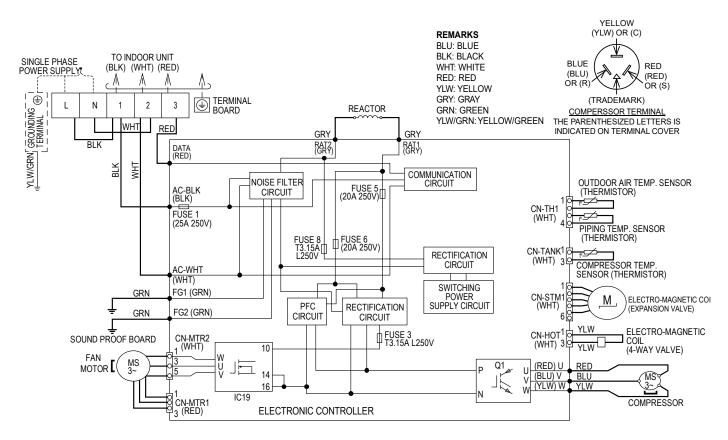


Resistance of Compressor Windings

MODEL	CU-Z50UBEA
CONNECTION	9RD132XAA21 (Ω)
U-V	1.897
U-W	1.907
V-W	1.882

Note: Resistance at 20°C of ambient temperature.


# 10. Electronic Circuit Diagram


# 10.1 Indoor Unit

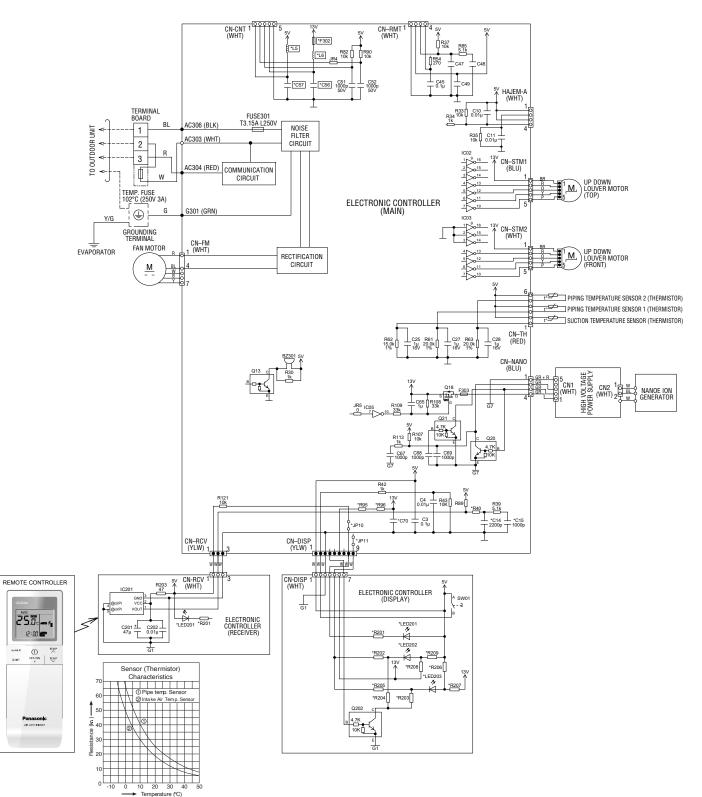


# 10.2 Outdoor Unit

## 10.2.1 CU-Z25UBEA CU-Z35UBEA

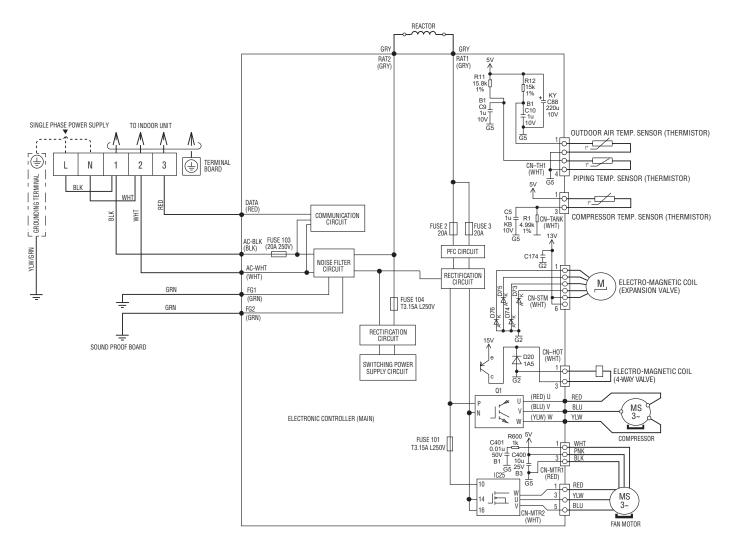


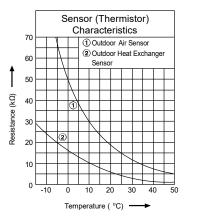

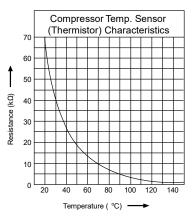

32


## 10.2.2 CU-Z50UBEA

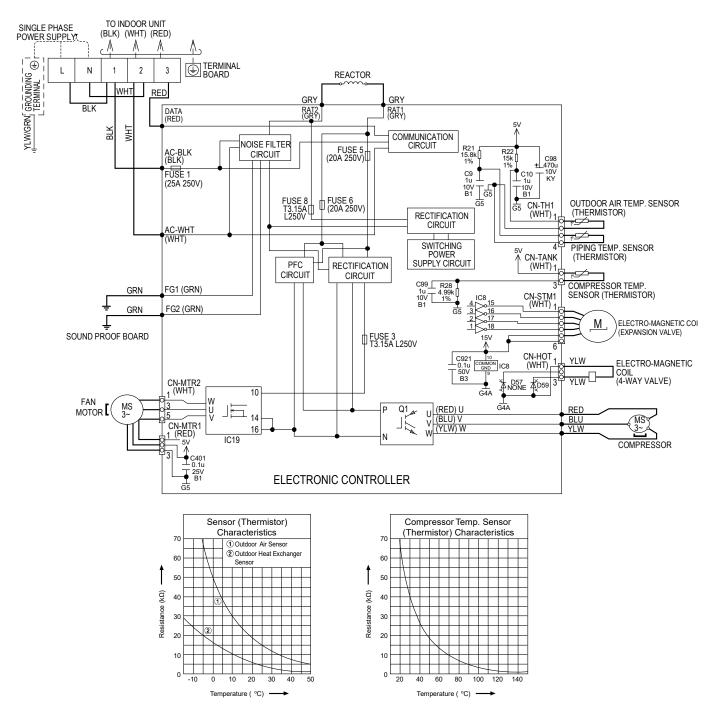


# 11. Printed Circuit Board

# 11.1 Indoor Unit


## 11.1.1 Main Printed Circuit Board

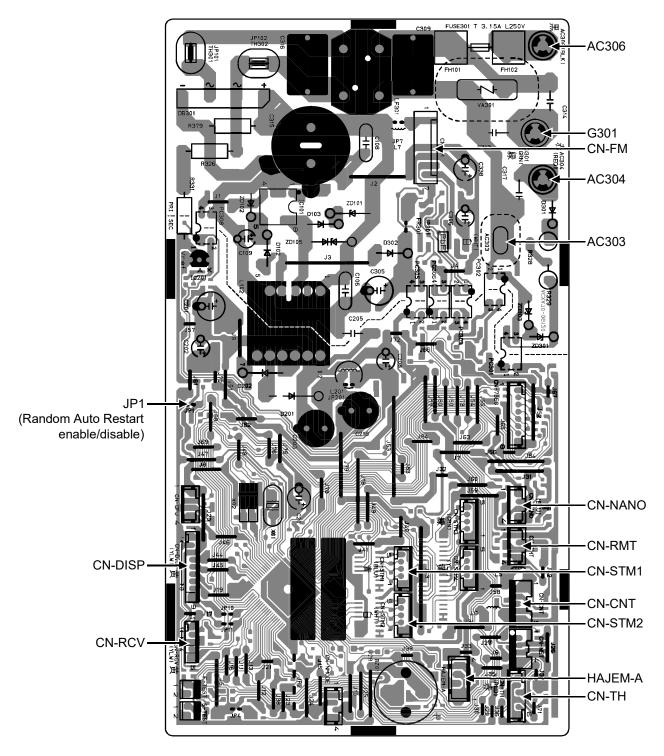

# 11.1.2 Display Printed Circuit Board

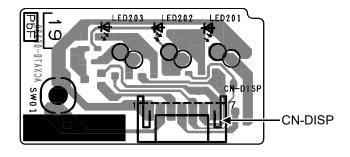


## 11.1.3 Receiver Printed Circuit Board

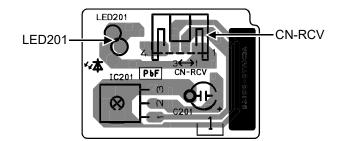


## 11.2 Outdoor Unit

11.2.1 Main Printed Circuit Board

## 11.2.1.1 CU-Z25UBEA CU-Z35UBEA

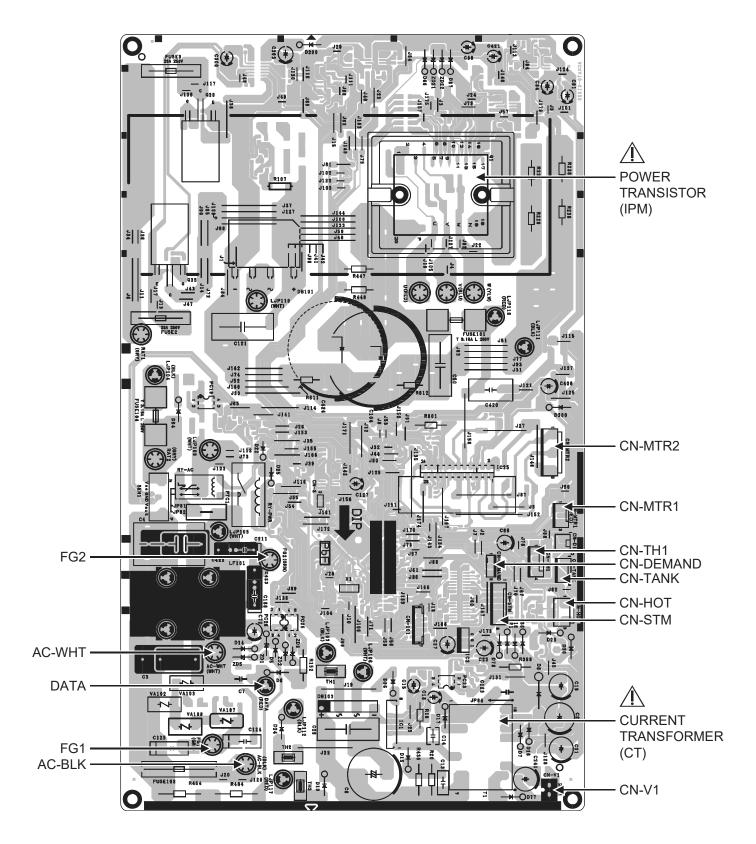

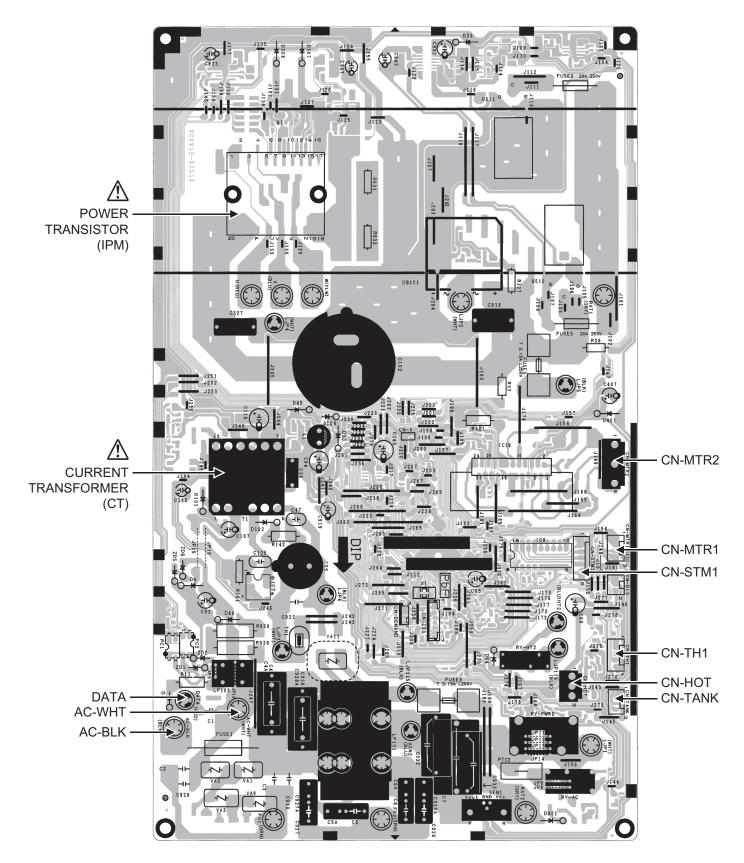

# 12. Installation Instruction

# 12.1 Indoor Unit

#### **Required Materials**

- Read catalog and other technical materials and prepare the required materials.
- Pipe Size Reducer (CZ-MA1P) for CS-Z50\*\*\* when connect to multi.

#### Other Items to be Prepared (Locally Purchased)

Product name	Remarks
Rigid PVC pipe	VP20 (outer diameter ø26mm), VP30 (outer diameter ø38mm), Reducer (VP30-VP20) ; also socket, elbow and other parts as necessary.
Adhesive	PVC adhesive
Insulation	For drain piping insulation (formed polyethylene with a thickness of 10mm or more)
Indoor/outdoor connecting cable	4 × 1.5mm <sup>2</sup> flexible cord : type designation 245 IEC57 (H05RN-F)

#### Table A

Model	Capacity	Indoor A <sub>min</sub> (m <sup>2</sup> )
MZ20***	0.75HP	Refer outdoor
Z25***	1.0HP	8.67
Z35***	1.5HP	9.55
Z50***	2.0HP	18.48

\* Table "A" only applicable for single split connection.

\* In case of connection to outdoor multi inverter, refer to installation manual at outdoor unit.

 $A_{min} = (M / (2.5 \times (LFL)^{(5/4)} \times h_0))^2$ 

 $A_{min}$  = Required minimum room area, in m<sup>2</sup>

M = Refrigerant charge amount in appliance, in kg

LFL = Lower flammable limit (0.306 kg/m<sup>3</sup>)

 $h_0$  = Installation height of the appliance (0.6m for floor console)

#### 12.1.1 Selecting the Installation Location


#### 12.1.1.1 Indoor Unit


Before choosing the installation site, obtain user approval.

- There should not be any heat source or steam near the unit.
- There should not be any obstacles blocking the air circulation.
- A place where air circulation in the room is good.
- A place where drainage can be easily done.
- A place where noise prevention is taken into consideration.
- Do not install the unit near the door way.
- Locate the indoor unit at least 1m or more from TV, radio, wireless equipment, antenna cables and fluorescent light, and 2m or more away from a telephone.
- Ensure the spaces indicated by arrows from the wall, ceiling, fence or other obstacles.

#### Installation Diagram


• The indoor unit may be mounted in any of the three styles shown here.

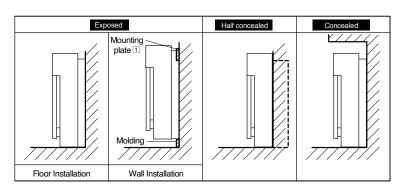

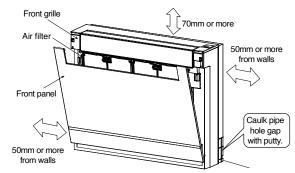

#### 12.1.1.2 Remote Controller

- Signals may not be transmitted and received correctly when the remote controller is operated while in the holder. Take the remote controller in your hand to operate the unit.
- Mount the holder in a location that is not subject to the effects of heat (direct sunlight and stoves, etc.).

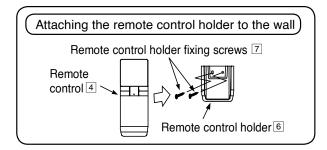

# 12.1.2 Selection of Pipe and Heat Insulation Materials

- When using commercial copper pipes and fittings, observe the following:
  - Insulation material: Polyethylene foam Heat transfer rate: 0.041 to 0.052 W/mk (0.035 to 0.045kal/mh°C) Refrigerant gas pipe's surface temperature reaches 110°C max. Choose heat insulation materials that will withstand this temperature.
  - 2 Be sure to insulate both the gas and liquid piping and to provide insulation dimension as below.

	Pipe Dimension	Heat Insulation Dimension
Gas side	3/8"(O.D. 9.5mm t0.8mm)	I.D.12-15mm t10mm Min
Liquid side	1/4"(O.D. 6.4mm t0.8mm)	I.D. 8-10mm t10mm Min


- 3 Use separate heat insulation pipes for gas and liquid refrigerant pipes.
- Required material
  - Pipe size reducer (CZ-MA1P) for CS-Z50\*\*\* when connect to multi.

#### 12.1.3 Installing the Indoor Unit

#### 12.1.3.1 Exposed Installation

#### 12.1.3.1.1 Refrigerant piping

- 1 Drill a hole (70mm in diameter) in the spot indicated by the <sup>®</sup> symbol in the illustration as below.
- 2 The location of the hole is different depending on which side of the pipe is taken out.
- 3 For piping, see 12.1.5. Connecting the refrigerant piping.
- 4 Allow space around the pipe for a easier indoor unit pipe connection.

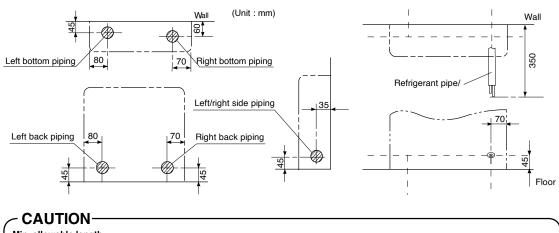

Min. allowable length

- The suggested shortest pipe length is 3.0m, in order to avoid noise from the outdoor unit and vibration.
- (Mechanical noise and vibration may occur depending on how the unit is installed and the environment in which it is used.)
- See the installation manual for the outdoor unit for the maximum pipe length.
- For multi-connections, see the installation manual for the multi-outdoor unit.


#### 12.1.3.1.2 To drill a hole in the wall and install a sleeve of piping

- 1 Insert the piping sleeve to the hole.
- 2 Fix the bushing to the sleeve.
- 3 Cut the sleeve until it extrudes about 15 mm from the wall.

#### 


When the wall is hollow, please be sure to use the sleeve for tube ass'y to prevent dangers caused by mice biting the connecting cable

4 Finish by sealing the sleeve with putty or caulking compound at the final stage.

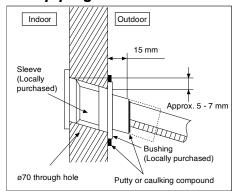

#### 12.1.3.1.3 Drain piping

- 1 Use commercial rigid polyvinyl chloride pipe (general VP 20 pipe, outer diameter 26mm, inner diameter 20mm) for the drain pipe.
- 2 The drain hose (outer diameter 18mm at connecting end, 270mm long) is supplied with the indoor unit. Prepare the drain pipe picture below position.
- 3 The drain pipe should be inclined downward so that water will flow smoothly without any accumulation. (Should not be trap.)
- 4 Insert the drain hose to this depth so it won't be pulled out of the drain pipe.
- 5 Insulate the indoor drain pipe with 10mm or more of insulation material to prevent condensation.
- 6 Remove the air filters and pour some water into the drain pan to check the water flows smoothly.

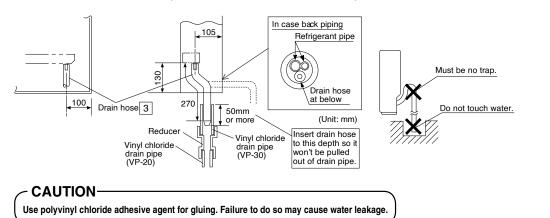

#### 12.1.3.1.4 Indoor unit preparation

- Push in the tab on both sides of front panel to open front panel.
- Unhook the string, lift up the front panel to remove it.
- Slide Shaft to disassemble top vane
- Remove 2 screws and disengage center hook then dismount front grille.

#### • For Moldings and Side Piping

• Remove the pillars. (Remove the slit portions on the bottom frame using nippers.)

 
Bottom frame

Cut


Remove the


pillars (Cut off)





Bottom frame

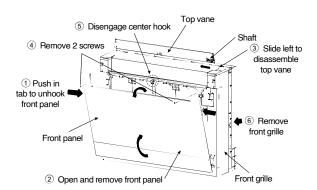

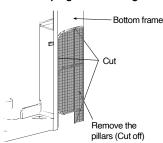


#### For Side Piping with Moldings

Cut

# 12.1.3.1.5 Indoor unit installation

- For floor installations, secure the indoor unit using 6 screws.
- For wall installations, secure the mounting plate using 7 screws and the indoor unit using 4 screws.
- Temporarily secure the mounting plate to the wall, make sure that the panel is completely level, and mark the drilling points on the wall.
- Once refrigerant piping and drain piping connections are complete, fill in the gap of the through hole with putty. A gap can lead to condensation on the refrigerant pipe, and drain pipe, and the entry of insects into the pipes.
- Attach the front panel and front grille by following the removal procedure in reverse once all connections are complete.

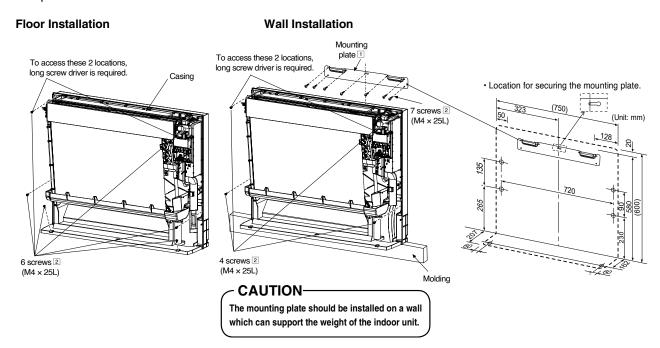


#### 12.1.3.2 Half concealed installation

• Only item peculiar to this installation method are given here. See Exposed installation for additional instructions.


#### 12.1.3.2.1 Wall hole

  Drill a wall hole of the size shown in the illustration on the right.




# 12.1.3.2.2 Installation of supplemental plate for attaching indoor unit

The rear of the unit can be fixed with screws at the points shown in the illustration as below. Be sure to install the
supplemental plate in accordance with the depth of the inner wall.

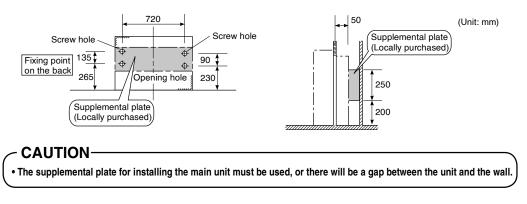

## 12.1.3.2.3 Refrigerant piping

See Refrigerant piping under Exposed Installation.

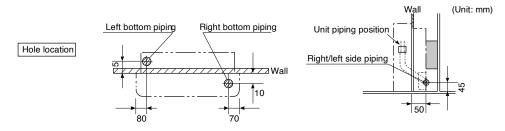


#### 12.1.3.3 Concealed installation

Only item peculiar to this installation method are given here. See Exposed installation for additional instructions.


#### 12.1.3.3.1 Preparation

 - Install the unit according to the instructions below. Failure to do so may cause lead to both cooling and heating failure and the condensation inside the house.
  - 1 Allow enough space between the main unit and ceiling not to obstruct the flow of cool/warm air.
  - 2 Use remote controller to change the upward air flow limit restriction. When the unit in standby mode, follow the steps below:
    - Press  $\frac{O}{SET}$  continuously for more than 5 seconds to enter special setting mode.
    - Press to choose function 69, and then press or voice to set "01"
    - Press st to activate "Up/down air swing upper limit restriction"




#### CAUTION-----

If there is an obstruction to upward air⊠ow, it is recommanded to turn on upward air⊠ow limit restriction. Failure to do so may cause incomplete cooling/heating and formation of condensation inside the house.

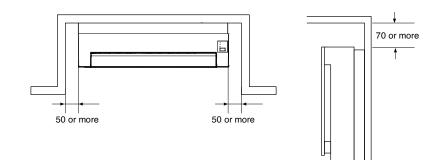

#### 12.1.3.3.2 Refrigerant piping

 

# 12.1.4 Connecting the Refrigerant Piping

 
# 12.1.4.1 Connecting The Piping to Indoor

For connection joint of all models

Please make flare after inserting flare nut (locate at joint portion of tube assembly) onto the copper pipe. (In case of using long piping)

Connect the piping

- Align the center of piping and sufficiently tighten the flare nut with fingers.
- Further tighten the flare nut with torque wrench in specified torque as stated in the table.



Additional Precautions For R32 Models when connecting by flaring at indoor side

Ensure to do the re-flaring of pipes before connecting to units to avoid leaking.

# 12.1.4.2 Connecting The Piping to Outdoor

Decide piping length and then cut by using pipe cutter. Remove burrs from cut edge.

Make flare after inserting the flare nut (locate at valve) onto the copper pipe. Align center of piping to valve and then tighten with torque wrench to the specified torque as stated in the table.


# 12.1.4.3 Connecting The Piping to Outdoor Multi

Decide piping length and then cut by using pipe cutter. Remove burrs from cut edge. Make flare after inserting the flare nut (locate at valve) onto the copper pipe. Align center of piping to valve and then tighten with torque wrench to the specified torque as stated in the table.

\* For Gas side piping please refer table and diagram below


Outdoor	Pipe size (refer		
	to diagram)		
CS-MZ20***, CS-Z25***, CS-Z35***	CU-2Z35***, CU-2Z41***, CU-2Z50***	CU-2E12***, CU-2E15***, CU-2E18***	0
CS-Z50***	CU-2Z50***	CU-2E18***	(CZ-MA1P)


Seal sufficiently the flare nut (both gas and liquid sides) with neutral cure (Alkoxy type) & ammonia-free silicone sealant and insulation material to avoid the gas leak caused by freezing.

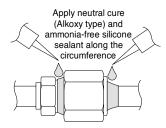

Neutral cure (Alkoxy type) & ammonia-free silicone sealant is only to be applied after pressure testing and cleaning up by following instructions of sealant, only to the outside of the connection. The aim is to prevent moisture from entering the connection joint and possible occurrence of freezing. Curing sealant will take some time. Make sure sealant will not peel off when wrapping the insulation.

Do not overtighten, overtightening may cause gas leakage.					
Piping size	Torque				
6.35 mm (1/4")	[18 N•m (1.8 kgf•cm)]				
9.52 mm (3/8")	[42 N•m (4.3 kgf•cm)]				
12.7 mm (1/2") [55 N•m (5.6 kgf•cm					
15.88 mm (5/8") [65 N•m (6.6 kgf•cm)]					
19.05 mm (3/4") [100 N•m (10.2 kgf•cm)]					

 

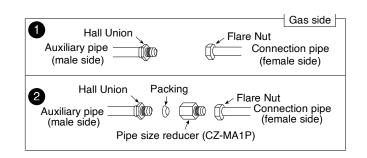

# 12.1.4.4 Insulating the refrigerant piping

- Attach the pipe after checking for gas leakage, described above.
  - 1 Cut the insulated portion of the on-site piping, matching it up with the connecting portion.
  - 2 Secure the slit on the auxiliary pipe side with the butt joint on the connection pipe using the tape, making sure there are no gaps.
  - 3 Wrap the slit and the butt joint with the included insulation sheet, making sure there are no gaps.

#### 12.1.4.5 Checking for gas leakage

- Check for leakage of gas after air purging.
- See the in the installation manual for the outdoor.

#### 

1) Insulate the joint of the pipes securely.

and the point of the pipe add to water leakage.Push the pipe inside so it does not apply undue force on the front grille.

#### 12.1.5 Connecting the Indoor/Outdoor Connection Cable

- Guide connection cable pass through refrigerant piping port and lead the connection cable into the control box.
- Check the color of the wires on the terminal board and secure them with screws.
- Secure the connection cable with cord holder.
- Guide and push the connection cable inside so that it does not apply undue force on the front grille.
- Fix the connection cable into cable holder.


#### 

This equipment must be properly earthed.

#### 

When the wall is hollow, please be sure to use the sleeve for tube ass'y to prevent dangers caused by mice biting the connection cable.


- Connection cable between indoor unit and outdoor unit should be approved polychloroprene sheathed 4 x 1.5 mm<sup>2</sup> flexible cord, designation type 60245 IEC 57 (H05RN-F) or heavier cord. Allowable connection cable length of each indoor unit shall be 30 m or less.
  - Ensure that the terminal numbers on the indoor unit are connected to the same terminal numbers on the outdoor unit by the right coloured wires as shown in the diagram.

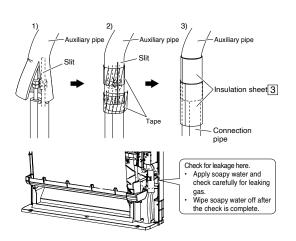


- Earth lead wire should be longer than the other lead wires as shown in the diagram for electrical safety purpose in case the cord slips out from the anchorage.
- Secure the cable onto the control board with the holder (clamper).

Terminals on the indoor unit	1	2	3	
Colour of wires				
Terminals on the outdoor unit	1	2	3	

- Ensure the colour of wires of outdoor unit and the terminal Nos. are the same to the indoor's respectively.
- Earth wire shall be Yellow/Green (Y/G) in colour and longer than other AC wires for safety reason.

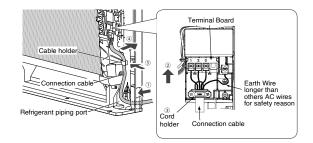

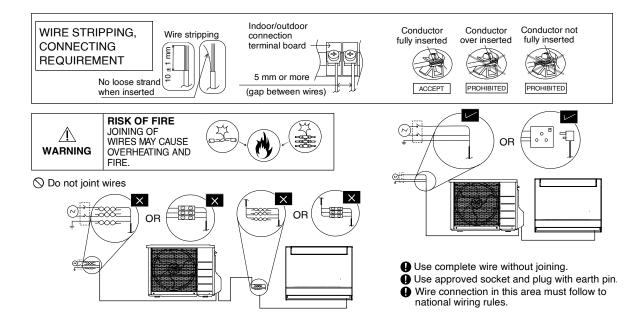

# 12.2 Outdoor Unit

#### 12.2.1 Select the Best Location

- If an awning is built over the unit to prevent direct • sunlight or rain, be careful that heat radiation from the condenser is not obstructed.
- There should not be any animal or plant which could be affected by hot air discharged.
- Keep the spaces indicated by arrows from wall, ceiling, fence or other obstacles.
- Do not place any obstacles which may cause a short circuit of the discharged air.
- If piping length is over the [piping length for additional gas], additional refrigerant should be added as shown in the table.

	Horse	Piping	) size	Std. Length	Max. Elevation	Min. Piping	Max. Piping	Additional	Piping Length for	Ind A <sub>min</sub>		Inde A <sub>min</sub>		Indoor A <sub>min</sub> (m²)
Model	Power (HP)	Gas	Liquid	(m)	(m)	Length (m)	Length (m)	Refrigerant (g/m)	add. gas (m)	2.2m for mini cassette	2.5m for mini cassette	2.2m for ducted	2.5m for ducted	0.6m for floor console
Z25****	1.0HP	9.52mm			15	3	20	10	7.5	0.64	0.50	0.64	0.50	8.67
Z35****	1.5HP	(3/8")	6.35mm	5	15	3	20	10	7.5	0.71	0.55	0.71	0.55	9.55
Z50****	2.0HP	12.7mm	(1/4")	5	20	3	30	15	7.5	1.37	1.06	1.37	1.06	18.48
760****	2.25HP	(1/2")			20	3	30	15	7.5	1.37	1.06	1.37	1.06	N/A

Example: For Z25\*\*\*\*

If the unit is installed at 10 m distance, the quantity of additional refrigerant should be 25 g .... (10-7.5) m x 10 g/m = 25 g.

 $A_{min} = (M / (2.5 \times (LFL)^{(5/4)} \times h_0))^2$ 

 $A_{min}$  = Required minimum room area, in m<sup>2</sup>

 
- M = Refrigerant charge amount in appliance, in kg
- LFL = Lower flammable limit (0.306 kg/m<sup>3</sup>)
- $h_0$

= Installation height of the appliance : (2.2m for mini cassette & ducted is standard reference installed height) (2.5m for mini cassette & ducted is minimum installed height given by manufacturer) (0.6m for floor console)

#### 12.2.2 Install the Outdoor Unit


- After selecting the best location, start installation according to Indoor/Outdoor Unit Installation Diagram.
  - Fix the unit on concrete or rigid frame firmly 1 and horizontally by bolt nut (ø10 mm).
  - 2 When installing at roof, please consider strong wind and earthquake.

Please fasten the installation stand firmly with bolt or nails.



Model	А	В	С	D
Z25****	570 mm	105 mm	18.5 mm	320 mm
Z35****	540 mm	160 mm	18.5 mm	330 mm
Z50****	612 mm	131 mm	04 mm	260 E mm
Z60****	613 mm	131 11111	24 mm	360.5 mm

#### 12.2.1.1 **Outdoor Installation Diagram**

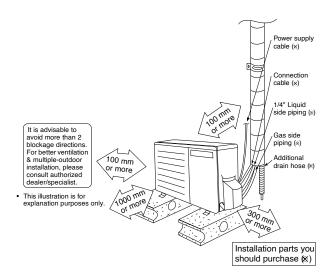


# 12.2.3 Connect the Piping

#### 12.2.3.1 Connecting the Piping to Indoor

For connection joint location at outside building Please make flare after inserting flare nut (locate at joint portion of tube assembly) onto the copper pipe. (In case of using long piping)

Connect the piping

 - Align the center of piping and sufficiently tighten the flare nut with fingers.
- Further tighten the flare nut with torque wrench in specified torque as stated in the table.



#### 12.2.3.2 Connecting the Piping to Outdoor


Decide piping length and then cut by using pipe cutter. Remove burrs from cut edge. Make flare after inserting the flare nut (locate at valve) onto the copper pipe. Align center of piping to valve and then tighten with torque wrench to the specified torque as stated in the table. For connection joint location at inside building

• Refer to indoor installation instruction.

Do not overtighten, overtightening may cause gas leakage					
Piping size	Torque				
6.35 mm (1/4")	[18 N•m (1.8 kgf•m)]				
9.52 mm (3/8")	[42 N•m (4.3 kgf•m)]				
12.7 mm (1/2")	[55 N•m (5.6 kgf•m)]				
15.88 mm (5/8")	[65 N•m (6.6 kgf•m)]				
19.05 mm (3/4") [100 N•m (10.2 kgf•r					

## 12.2.4 Evacuation of the Equipment

WHEN INSTALLING AN AIR CONDITIONER, BE SURE TO EVACUATE THE AIR INSIDE THE INDOOR UNIT AND PIPES in the following procedure.

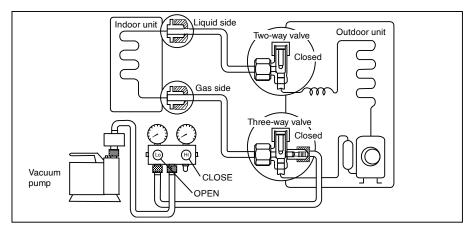

- 1 Connect a charging hose with a push pin to the Low side of a charging set and the service port of the 3-way valve.
  - Be sure to connect the end of the charging hose with the push pin to the service port.
- 2 Connect the center hose of the charging set to a vacuum pump.
- 3 Turn on the power switch of the vacuum pump and make sure that the needle in the gauge moves from 0 cmHg (0 MPa) to -76 cmHg (-0.1 MPa). Then evacuate the air approximately ten minutes.
- 4 Close the Low side valve of the charging set and turn off the vacuum pump. Make sure that the needle in the gauge does not move after approximately five minutes.

Note : BE SURE TO TAKE THIS PROCEDURE IN ORDER TO AVOID REFRIGERANT GAS LEAKAGE.


- 5 Disconnect the charging hose from the vacuum pump and from the service port of the 3-way valve.
- 6 Tighten the service port caps of the 3-way valve at a torque of 18 N•m with a torque wrench.

- 7 Remove the valve caps of both of the 2-way valve and 3-way valve. Position both of the valves to "OPEN" using a hexagonal wrench (4 mm).
- 8 Mount valve caps onto the 2-way valve and the 3-way valve.
  - Be sure to check for gas leakage.
  - If gauge needle does not move from 0 cmHg (0 MPa) to -76 cmHg (-0.1 MPa), in step 3 above take the following measure:
  - If the leak stops when the piping connections are tightened further, continue working from step 3.
  - If the leak does not stop when the connections are retightened, repair location of leak.
  - Do not release refrigerant during piping work for installation and reinstallation.
  - Take care of the liquid refrigerant, it may cause frostbite.


#### 12.2.5 Connect the Cable to the Outdoor Unit

 (FOR DETAIL REFER TO WIRING DIAGRAM AT UNIT)

- 1 Remove the control board cover from the unit by loosening the screw.
- 2 Cable connection to the power supply through Isolating Devices (Disconnecting means).
  - Connect approved type polychloroprene sheathed power supply cord 3 x 1.5 mm<sup>2</sup> (1.0 ~ 1.5HP) or 3 x 2.5 mm<sup>2</sup> (2.0 ~ 2.25HP) type designation 60245 IEC 57 or heavier cord to the terminal board, and connect the others end of the cord to Isolating Devices (Disconnecting means).
- 3 **Connection cable** between indoor unit and outdoor unit shall be approved polychloroprene sheathed 4 x 1.5 mm<sup>2</sup> flexible cord, type designation 60245 IEC 57 or heavier cord. Allowable connection cable length of each indoor unit shall be 30 m or less.
- 4 Connect the power supply cord and connection cable between indoor unit and outdoor unit according to the diagram below.



- 5 Secure the power supply cord and connection cable onto the control board with the holder.
- 6 Attach the control board cover back to the original position with screw.
- 7 For wire stripping and connection requirement, refer to instruction 12.1.6.1 of indoor unit.

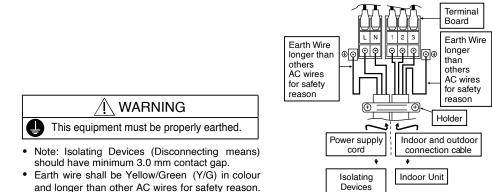


#### 12.2.6 Pipe Insulation

- 1 Please carry out insulation at pipe connection portion as mentioned in Indoor/Outdoor Unit Installation Diagram. Please wrap the insulated piping end to prevent water from going inside the piping.
- 2 If drain hose or connecting piping is in the room (where dew may form), please increase the insulation by using POLY-E FOAM with thickness 6 mm or above.


#### 12.2.6.1 Cutting and Flaring the Piping

 - 1 Please cut using pipe cutter and then remove the burrs.
- 2 Remove the burrs by using reamer. If burrs is not removed, gas leakage may be caused. Turn the piping end down to avoid the metal powder entering the pipe.
- 3 Please make flare after inserting the flare nut onto the copper pipes.



#### 12.2.7 Disposal of Outdoor Unit Drain Water

- If a drain elbow is used, the unit should be placed on a stand which is taller than 3 cm.
- If the unit is used in an area where temperature falls below 0°C for 2 or 3 days in succession, it is recommended not to use a drain elbow, for the drain water freezes and the fan will not rotate.

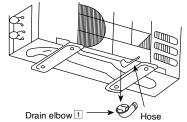

Install the hose at an angle so that the water smoothly flows out

# 13. Installation and Servicing Air Conditioner using R32

# 13.1 About R32 Refrigerant

For air conditioning refrigerants such as R410A, the refrigerants were collected back in order to prevent their air dissipation, to curbe the global warming impact, in case they were released into the atmosphere. In the "4th Environmental Basic Plan", 80% reduction of greenhouse gas emissions by 2050 is required, and due to this requirement, further reduction in the emission of high greenhouse effect gas, such as CFCs, is required. Therefore, the conversion of air conditioning refrigerant into the ones who has smaller greenhouse effect, even if it is dissipated into the atmosphere, became our responsibility.

Nevertheless, in case of air conditioning refrigerant, it would be the best if there is a refrigerant which has smaller impact on global warming, but ensures good energy efficiency and performance, and is safe; however, there is no such refrigerant which satisfies all these conditions. As a result, we have been considering the practical usage, within the safety frame-work, of R32 refrigerant which has short lifetime in the atmosphere, and has smaller effect of global warming, but is slightly flammable.

In 2004, due to the revision of air conditioner safety standards by the International Electro-safety Commission (IEC), the safety standards of air conditioners using slightly flammable refrigerant was issued. In 2010, the regulations of American Society of Heating, Refrigerating and Air-Conditioning Engineers in the United States (ANSI/ASHRAE34) was issued adopting the grades for refrigerants which are difficult to inflame due to their slow burning rates, and as a result have smaller damages in cases of fire. The burning rate of R32 is lower by 10cm / per second, and safety standardization for various usage is now being processed.

# 13.2 Characteristics of R32 Refrigerant

#### 1. Chemical Characteristics

R32 is one of the refrigerants used in R410A, has almost no toxicity, and chemically stable compound formed by hydrogen, carbon and fluorine.

R32 has short lifetime of 4 to 9 years in case of being released into the atmosphere; therefore, it has smaller greenhouse gas effect but has slight inflammability because of the large proportion of hydrogen.

	R32	R410A	R22
Chemical Formula	CH2F2	CH2F2 / CHF2CF3	CHCLF2
Composition	Single Composition	R32 / R125A	Single Composition
(mixture ratio wt.%)	Single Composition	(50 / 50 wt.%)	Single Composition
Boiling Point (°C)	-51.7	-51.5	-40.8
Pressure (physical) *1	3.14	3.07	1.94
Capacity (physical) *2	160	141	100
COP (physical) *3	95	91	100
Ozone Depletion Potential (ODP)	0	0	0.055
Global Warming Potential (GWP) *4	675	2090	1810
Inflammability *5	Slightly Inflammable (A2L)	Non-inflammable (A1)	Non-inflammable (A1)
Toxicity	None	None	None

Chemical Characteristic Table of R32, R410A and R22.

\*1 : Physical property of temperature condition 50°C

\*2 : Relative value of temperature condition 0/50°C, providing R22=100

\*3 : Te/Tc/SC/SH=5/50/3/0°C

\*4 : GWP=Global Warming Potential, each figure is based on "4<sup>th</sup> IPCC4 Report"

\*5 : Based on ANSI / ASHRAE std. 34-2010

#### 2. Characteristic of Pressure

As shown in Table 2, R32 does not have much difference in vapor pressure at the same refrigerant temperature comparing to R410A, but comparing to R22, it is higher at 1.6 times more. Thus, the same as in case of R410A, it is necessary to do installation and service using high-pressure tools and components.

Table 2. Saturated vapor pressure comparison table

(Unit: MPa)

Temperature	Refrigerant					
remperature	R32	R410A	R22			
-20	0.30	0.30	0.14			
0	0.71	0.70	0.40			
20	1.37	1.35	0.81			
40	2.38	2.32	1.43			
60	3.84	3.73	2.33			
65	4.29	4.17	2.60			

Reference : Thermal properties table of Japan Society of Refrigerating and Air Conditioning Engineers (60, 65°C) NIST REFPROP V8.0 (-20 ~ 40°C)

# 13.3 Refrigerant piping installation • Tools used in services

#### 13.3.1 Required Tools

R32 refrigerant air conditioners use the common parts as R410A air conditioners for two-way valves and three-way valves (diameters of service ports); thus, they maintain commonality in the maintenance of the compressive strength, the size of pipe flaring, and the size of flare nuts as R410A. Therefore, for refrigerant pipe installation and services, you can use tools for R410A.

However, mixing of refrigerants is not allowed, so that you have to separate the cylinders for the recovery of refrigerants.

Tools used for installation • relocation • replacement of air conditioning units

Works	R32	R22			
Flaring	Flare tools for R4	Flare tools for R22 (clutch type)			
Connection of pipes					
Connection of pipes	Torque wrench (di	Toque wrench (diameter 1/2 5/8)			
Manifold gauge charging hose	R32 & R410A Common	R22 Only			
Air purging	Air purging Vacuum pump + Reducer / expander				
Gas leakage test	Dete	Detection liquid or soup water, HFC detector			

\*1. Nut diameters of 1/2 5/8, the size of torque wrench common with R410A

For other installation, you can use general tools such as screw drivers (+, -), metal saws, electric drills, long-nose pliers, hole core drills (Ø70 or Ø65), linen tape, levels, temperature gauges, clamp meters, electric knives, nippers, pipe cutters, reamers or scrapers, spring benders, (diameters 1/4 3/8 1/2 5/8), monkey wrenches, fixing wrenches (17 or 12 mm), feeler gauges, hexagon wrenches (4 mm), testers, megohm testers, etc.

Tools used for services

Works	R32	R410A	R22			
Insertion of refrigerant	Digital scale for refrigerant charging, refrigerant cylinders, cylinder adopters and packing *a					
Recovery of refrigerant	Refrigerant recovery devices, refrigerant cylinders, manifold gauges, charging hoses *b					

\*a. Use cylinder for each refrigerant, cylinder adopter and packing.

\*b. Use refrigerant recovery cylinder separately for each refrigerant (no mixture of refrigerant allowed). <u>Please be</u> aware that there are some refrigerant collection devices which do not have self-certification.

#### 13.3.2 Tools for R32 (common with R410A)

#### 1. Flare gauges

Use flare gauges when you perform flaring with flare tools (crutch type). Flare gauges are used to set the pipe ends at  $0.5 \sim 1.5$  mm from clump bars of flare tools.

Flare gauges



#### 2. Flare tools (clutch type)

Flare tools have larger holes of clump bars in order to set the pipe end at  $0 \sim 0.5$  mm, and have stronger springs inside to ensure solid flaring torques. These flare tools can be used commonly for R22.


Flare tools (clutch type)



#### 3. Torque wrenches (diameters 1/2, 5/8)

In order to strengthen the compressive strength, the diameters of wrenches change depending on the flare nut sizes.

Torque wrenches

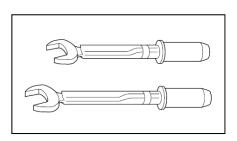

#### Differences in torque wrenches

	R32 (common R410A)	R22	
1/2	26 mm × 55 N•m	24 mm × 55 N•m	
(diameter × torque)	(550 kgf•cm)	(550 kgf•cm)	
5/8	29 mm × 65 N•m	27 mm × 65 N•m	
(diameter × torque)	(650 kgf•cm)	(650 kgf•cm)	

#### 4. Manifold gauges

R22 gauges cannot be used because of the high pressures.

Each port of manifold has different shapes in order to prevent inserting wrong refrigerant.

\*However, the port shape for R410A and R32 is the same; therefore, attention need to be paid not to insert wrong refrigerant.

Differences in high/low pressure gauges

	R32 (common R410A)	R22
High pressure gauges (red)	-0.1 ~ 5.3 MPa -76 cmHg ~ 53 kgf / cm²	-76 cmHg ~ 35 kgf / cm $^2$
Low pressure gauges (blue)	-0.1 ~ 3.8 MPa -76 cmHg ~ 38 kgf / cm²	-76 cmHg ~ 17 kgf / cm $^2$


Difference in manifold port sizes

	R32 (common R410A)	R22
Port sizes	1/2 UNF20	7/16 UNF20

#### 5. Charging hoses

The pressure resistance of charge hoses is increased. At the same time, the material is changed to HFC resistant, and the size of each manifold adopter is changed, as the port size of manifold gauge itself. Further, some hoses are with anti-gas pressure backflow valves placed near the adopters. (hoses with the valves recommended)

#### Manifold gauges / Charging hoses

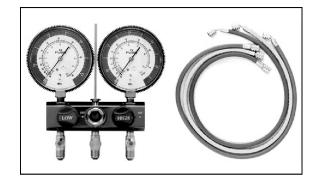

#### Differences in charging hoses

		R32 (common R410A)	R22
Pressure Resistance	Normal operation pressure	5.1 MPa (52 kgf / cm²)	3.4 MPa (35 kgf / cm²)
	Burst pressure	27.4 MPa (280 kgf / cm²)	17.2 MPa (175 kgf / cm²)
Mat	erial	HNBR rubber Internal nylon coating	NBR rubber

6. Vacuum pump and Vacuum pump adopter When using a vacuum pump, it is necessary to set a solenoid valve in order to prevent backflow of vacuum pump oil into the charge hoses, and use a vacuum pump with oil backflow prevention function, or use the vacuum pump with vacuum pump adopter. If vacuum pump oil (mineral oil-based) mixes with R410A (R32), it may cause damage to the machine.

Vacuum pump



Vacuum pump adopter



7. HFC refrigerant\_Electric gas leakage tester R32 refrigerant is often used for other mixed refrigerant (R410A, R404A, R407C etc.). Therefore, the usage of existing HFC detectors is possible, but in order to detect more accurately, we recommend to use detectors specially set and adjusted for R32 detection.

HFC refrigerant\_Electric gas leakage tester



8. Digital scale for refrigerant charging R32 and R410A have high pressure level and their evaporation speed is high.

Thus, if you recover the refrigerant by cylinder charging method, the refrigerant evaporates within the weighing scale glass, which makes reading the scale difficult, rather than liquidating the refrigerant into the cylinder. (Charging cylinders for R22 have different pressure resistance, scale, connection port size; therefore, they are not usable) At the same time, the digital scale for refrigerant charging is strengthened by receiving the weight of the refrigerant cylinders with four pillars at the corners. The connection ports of charging hoses have two separate ports for R22 (7/16 UNF20) and R32/R410A (1/2 UNF20) therefore, they can be used for the insertion of the existing refrigerants.

Digital scale for refrigerant charging



9. Refrigerant cylinders

Refrigerant cylinders for R410A are painted in pink, and the ones for R32 are painted in other colors that might subject to change according to the international standards. R32 is a single refrigerant, so that both liquid and gas insertion are possible. Additional charging is also possible.

(R410A is a mixed refrigerant, so only liquid insertion is possible)

Refrigerant cylinders



10. Connection ports of refrigerant cylinders and packing

Charging ports which fit to the charging hose connection port size (1/2 UNF20) is needed. At the same time, the packing has to be of HFC resistant materials.


Connection ports and packing



#### 11. Tools used for refrigerant piping installations and services

	Tools for R410A	Common with R32	Possibility of usage for R22
1.	Pipe cutters, reamers or scrapers	0	0
2.	Flare tools (clutch type)	0	0
3.	Torque wrench (1/4, 3/8)	0	0
4.	Torque wrench (1/2, 5/8)	0	×
5.	Manifold gauges • charging hoses	0	×
6.	Vacuum pumps, vacuum pump adopters	<ul> <li>Connection 5/16</li> </ul>	<ul> <li>Connection 1/4</li> </ul>
7.	Electric gas leakage testers for HFC *1	0	$\bigtriangleup$
8.	Digital scale for refrigerant charging	0	0
9.	HCF recovery devices (connection port 5/16) *2	<ul> <li>Connection 5/16</li> </ul>	<ul> <li>Connection 1/4</li> </ul>
10.	Refrigerant cylinders (pressure resistant: FC3)	Same specs ×	×
11.	Refrigerant cylinders (pink)	Other (colors that might subject to change according to the international standards).	×
12.	Refrigerant cylinder connection ports and packing	0	×
13.	Allen wrench (4 mm) Electric knives	0	0
*1	Those testers only for HCFC22 (R22), but not for HCF32 (R32)	and HCF410A (R410A) cannot be for	r common use.
*2	Recovery devices which are self-certified for each HCF type ca	n be used.	
	<ul> <li>[Knowledge for the common usage of tools for R410A &amp; R32]</li> <li>R410A and R32 machines use different compressor oils.</li> <li>If unregulated compressor oil gets mixed into, it may caus</li> <li>Careful pump down will ensure the recovery of compressor gauge and charging hose.</li> <li>If you only perform the recovery of refrigerant and not be a the charging hose.</li> </ul>	or oil, and it will minimize the remaining	-
	<ul> <li>[Precaution of repairing refrigerant cycle]</li> <li>In the brazing, open 2-way and 3-way valves, and make s system.</li> <li>When repairing outside, make sure no refrigerant is in the</li> </ul>		-
	<ul> <li>[Inserting wrong refrigerant]</li> <li>It may cause "not cooling" and "not heating" customer clair refrigeration cycle is specially adjusted for R32.</li> <li>At the same time, it is not subject to product warranty, if w</li> </ul>		

# 13.4 New installation, Relocation, Repairing of Refrigerant Cycle System The Procedures

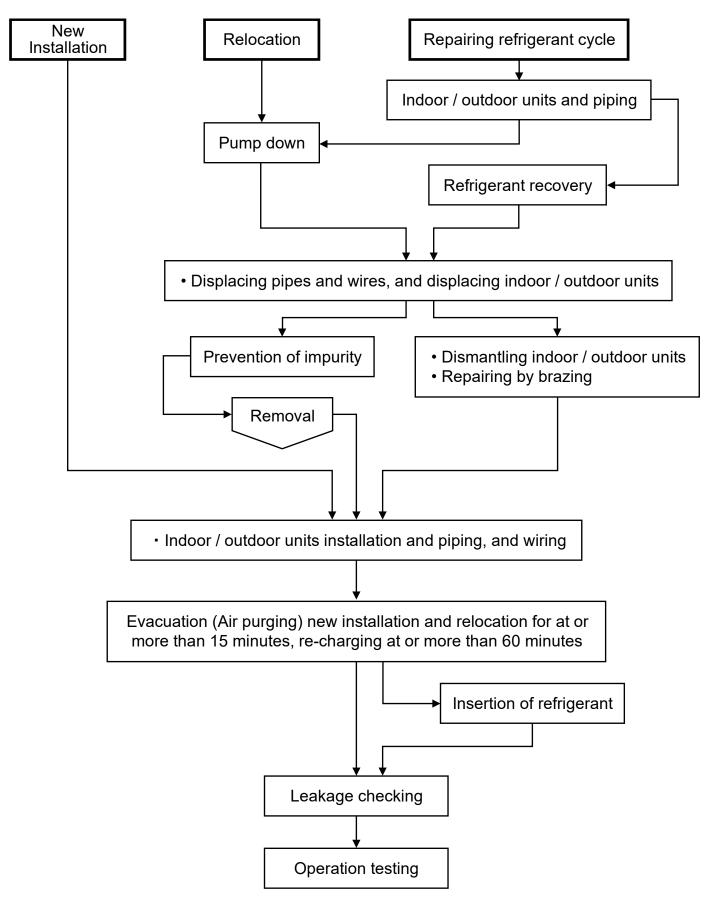

# 13.5 Piping installation of R32

# 13.5.1 Pipe materials used and flaring

Copper pipes are used for refrigerant piping. Pipes which comply with JIS Regulations need to be used. Room air conditioners which use R410A and R32 have higher pressure; thus, using pipes which comply with the Regulations is important.

The pipe thickness is regulated by revised JIS B 8607 "Flaring and brazing fittings for refrigerant" and the pipe thickness for R410A, R32 is shown in the table.

#### Pipe thickness

O and OL	materials	Thickness (mm)			
Diameter	Diameter (mm)	R410A	R32	R22	
1/4	6.35	0.80			
3/8	9.52	0.80			
1/2	12.70		0.80		
5/8	15.88		1.00		

#### Caution

- For connection piping, use copper phosphate seamless pipes (1220T) as regulated in "JIS H 3300" and the pipe thickness is 0.8 mm.
- In the market, there are some pipes of 0.7 mm thickness, but do not use these pipes (0.8 mm thickness has to be strictly followed).
- It is recommended to use pipes whose adhesion amount of oil is at or less than 40  $m_g$  / 10 m. At the same time, do not use pipes with dent, de-shape, and color change (especially inside).

# 13.5.2 Processing and connection of pipes

For refrigerant pipe installation, be aware of moisture and dirt do not get into the pipes, and make sure of no refrigerant leakage.

- $\ensuremath{\bigcirc}$  The procedure of flaring and precautions
- a) Cutting of pipes : use pipe cutter and cut the pipe slowly not to de-shape the pipe.
- b) Removal of burrs on the edge of pipe (reamer or scraper)
   If the condition of pipe edge after the deburring is no good or if burrs attaches on the flaring, it may cause refrigerant leakage. Turn the pipe end down and perform deburring carefully.
- c) Insert the flare nut (use the nut which is a part of the CZ parts)
- d) Flaring

Ensure the cleanliness of clump bar and pipe, and perform flaring carefully.

Use the existing flare tools or flare tools for R410A. Be aware that the sizes and dimensions of flaring is different in each flaring tool. If you use the existing flaring tools, use flaring gauge to measure the length of the flaring part.


Dimensions "a" (mm) R22		mm)	Dim	ensions "a" ( R410A/R32			Nut outer dia	ameter (mm)	
Piping size	Flare	tools	Flare tools for R410A	Flare tools		Flare tools for R410A		<b>D</b> 22	R410A
(mm)	Clutch type	Wing nut type	Clutch type	Clutch type	Wing nut type	Clutch type		R22	R32
6.35 (1/4")	0.5 ~ 1.0	1.0 ~ 1.5	0~0.5	1.0 ~ 1.5	1.5 ~ 2.0	0 ~ 0.5		17	17
9.52 (3/8")	0.5 ~ 1.0	1.0 ~ 1.5	0~0.5	1.0 ~ 1.5	1.5 ~ 2.0	0 ~ 0.5		22	22
12.70 (1/2")	0.5 ~ 1.0	1.5 ~ 2.0	0~0.5	1.0 ~ 1.5	2.0 ~ 2.5	0 ~ 0.5	Bar	24	26
15.88 (5/8")	0.5 ~ 1.0	1.5 ~ 2.0	0~0.5	1.0 ~ 1.5	2.0 ~ 2.5	0~0.5		27	29

# 13.6 Installation, Relocation, and Service

# 13.6.1 Air purge and gas leak test for new installation (using new refrigerant pipes) using vacuum pump


(From the point of view of global environment protection, do not release CFCs into the atmosphere during installation work)

- 1. Connect the charging hose of manifold gauge to the service port of 3-way valve (pushing insect pin).
- 2. Fully open the handle Lo of manifold gauge and operate vacuum pump.
- (If the needle of the low-pressure gauge reaches the vacuum immediately, check 1 procedure again)
- 3. Perform vacuuming 15 minutes or more, and make sure low pressure gauge reaches to -0.1 MPa (-76cmHg). When the vacuuming completes, fully open the handle Lo of manifold gauge and stop the operation of vacuum pump, and leave it for 1 ~ 2 minutes. Then, remove the connection side of the charging hose of vacuum pump adopter after checking the needle of manifold gauge does not turn back.
- 4. Open the stem of 2-way valve to 90° in anti-clock wise, and close the 2-way valve after 10 seconds, and perform gas leakage test.
- 5. Remove the charge hose from the service port of 3-way valve, and open the stems of 2-way and 3-way valves (open the valves to anti-clock wise carefully, do not use full strength to open)
- Tighten the service port cap with torque wrench 18 N•m (1.8 kgf•m)
   Tighten the caps of 2-way and 3-way valves with torque wrench 18 N•m (1.8kg f•m)
- 7. After the tightening of each cap, check gas leakage around the cap.

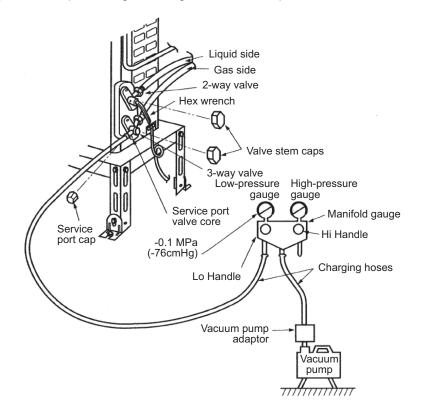

#### 13.6.2 Process of refrigerant recovery

- 1. Connect the center charging hose of manifold gauge to the in-let side of recovery device.
- 2. Connect the valves of the discharge side of recovery device and liquid side of refrigerant cylinder with red hose (charging hose).
- 3. Connect the yellow float switch cable of the recovery device to the refrigerant cylinder.
- 4. Open the low pressure side valve of manifold gauge.
- 5. Slightly loosen the charging hose of in-let connecting side of recovery device and perform air purge.
- 6. Open the liquid value of refrigerant cylinder and slightly loosen the charging hose in discharging side of recovery device, and perform air purge (the recovery cylinder needs slight inside pressure).
- 7. Insert electric plug of recovery device into electrical outlet (the fan operation starts).
- 8. Turn the valve 1 and 2 of recovery device to pressure equalization point.
- 9. After a few seconds, turn back the valve 1 and 2 to the original position.
- 10. Turn the switch of the recovery device to "ON". (the compressor operation starts)
- 11. When the low pressure of manifold gauge is close to "0", close the low pressure side valve, turn "OFF" the recovery device switch.
- 12. Remove the center charging hose of manifold gauge from the recovery device.

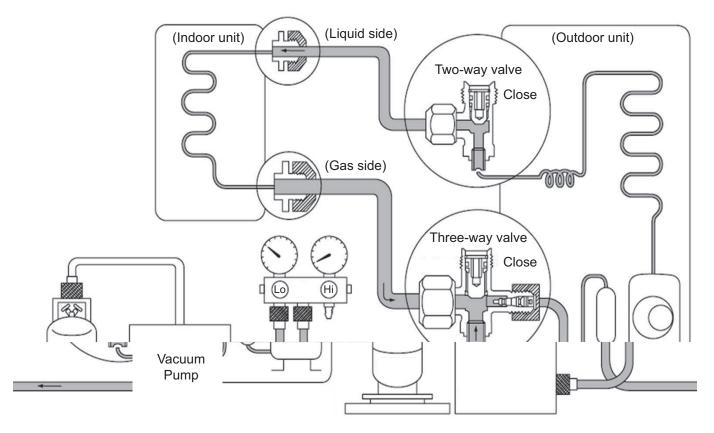

#### 13.6.3 Relocation

- 1. Removing the air conditioning unit
  - a) Recovery of outdoor unit refrigerant by pumping down

Press "forced cooling button" (as a general rule, since 1998 the name of cooling testing button is changed, and this name is unified within the air conditioning industry), and then you are able to start cooling operation in which the room temperature is low, and you can recover the refrigerant from the outdoor unit.

- Check the valve stems of two-way and three-way valves are open by being turned to anti-clockwise (Remove the caps, and confirm the bars are fully open. Use hexagon wrench <4 mm> to open and close the valves).
- Press the "Emergency Operation" button of the indoor units for five seconds and release [Forced cooling operation] (for old models, press "forced cooling" button). Then, operate the air conditioning unit for about 10 minutes.
- 3. Turn the stem of the two-way valve to the clock-wise and close the valve.
- 4. After about 2 ~ 3 minutes, turn the stem of the three-way valve quickly to the clock-wise, and stop the operation.

Caution: In the pump down operation, stop the compressor before removing the refrigerant pipes.

If you do not stop the compressor operation, and if the valve is open and remove the refrigerant pipes, the air may be sucked into the system and causes extreme high temperature in the refrigerant cycle. This may result in rupture or injury, etc.

- 5. Attach and tighten the caps of two-way and three-way valves with torque wrench.
- 6. Remove the connecting pipes (liquid side and gas side).
- b) Removal of indoor and outdoor units
  - 1. Remove the connecting pipes and wires between the indoor and outdoor units.
  - 2. Attach capping flare nuts on the edges of the pipes, connecting the indoor and outdoor units, in order to prevent dust and moisture get into the pipes.
  - 3. Remove the indoor and outdoor units.

#### 2. Unit installation

Use new refrigerant pipes for the installation, and perform air purging using vacuum pump and gas leakage testing stated in 14.5.1.

# 13.6.4 Replacement of air conditioning units and evacuation (when re-using the existing pipes)

When replacing the air conditioning units, you might use the existing pipes, but it is recommended to perform flaring again. In case of unit replacement, even if the unit is new refrigerant air conditioner, if the refrigerant oil is different, it may cause problem. Further, when re-using the existing refrigerant pipes, it is recommended to evacuate the pipes as much as possible, due to the reason that much refrigerant oil may be attached on the surface of the pipes. If the pipes are used without evacuation, the remaining refrigerant oil may cause under-performance and abnormal refrigerant cycle caused by non-compatibility of those oils.

#### 13.6.5 Inter-changeability of refrigerant

Do not operate air conditioning units inserting wrong (or mixed) refrigerant (R22, R410A, R32). It may cause malfunction of the units, and at the same time, <u>may cause serious incident such as rupture of the refrigerant cycle.</u>


# 13.6.6 Re-insertion of refrigerant in service

When re-insertion is needed, follow the procedures to ensure the insertion of new refrigerant at correct amount.

- 1. Attach charging hose (blue) to the service port of the outdoor unit.
- 2. Attach charging hose (red) to the vacuum pump. Fully open the 2-way and 3-way valves.
- 3. Place the refrigerant cylinder on the digital scale for refrigerant charging and connect the charge hose (yellow) to the connection port of the vacuum pump and the digital scale. Leave the cylinder valve fully open.
- 4. Fully open the handles Lo and Hi of the manifold gauge, and switch on the vacuum pump, and then perform evacuation for at or more than one hour.
- Confirm the compound gauge of -0.1 MPa (-76cmHg) and fully open the handles of Lo and Hi, and switch off the vacuum pump. Leave it for about 1 ~ 2 minutes and confirm the needle of the compound gauge does not turn back.

Refer to the picture below to follow the procedures below.

- 6. Remove the charging hose (red) of the manifold gauge from the vacuum pump adopter.
- 7. After adjusting the digital scale to zero, open the cylinder valve and the valve Lo of the manifold gauge, and insert the refrigerant.
- If it is not possible to insert the refrigerant at regulated amount at once, operate the cooling mode and gradually insert the refrigerant (recommended amount approx. 150 g / 1 time)
   \*Do not insert much refrigerant at once.
- 9. Close the open/close valve and insert the refrigerant in the charging hose to the outdoor unit. \*Perform this procedure during operating cooling operation. Close the stem of the two-way valve, and when the pressure of the manifold gauge becomes zero (0), quickly remove the charging hose (blue). Immediately open the 2-way valve, and stop the cooling operation.
- 10. Final checking • Confirm the 2-way and 3-way valves are fully open. Attach the caps of the service port and control valve, and then check the gas leakage around the caps.

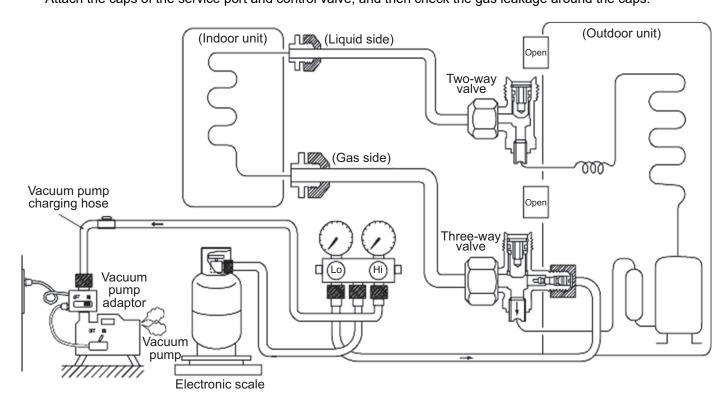


# 13.7 Repairing of refrigerant cycle / Brazing point

# 13.7.1 Preparation for repairing of refrigerant cycle / brazing

Brazing which is a technique needed for repairing refrigerant cycle requires advanced technique and experience, and this brazing procedure can only be performed by the workers who completed "Gas Welding Skill Training" regulated by the Occupational Safety and Health Act, and went through the training programs of refrigerant operations. Dismantling and re-connecting (assembling) refrigerant system requires working space, and the space has to ensure good air flow and fire prevention (water bucket and fire extinguisher). Moreover, the worker has to ensure the wearing of goggles, grabs, safety shoes, and long sleeve shirts, and be aware of work safety and attempt to prevent secondary defect (quality assurance of products). For brazing the indoor / outdoor unit structural components (heat exchangers, compressors, expansion valves, four-way valve blocks), after the recovery of all refrigerant, confirm that no refrigerant remains in the system, and fully open the 2-way and 3-way valves. When the brazing is conducted outside, check and make sure no refrigerant is contained in the air (be careful with vaporized refrigerant). Furthermore, protect the compressor terminal with metal plates, and heat but use wet clothes to cool down (releasing the heat) the expansion valves, and four way valves (prevent destruction of parts). In brazing, it is important to pour the brazing material without melting the base metal based on capillary action principle. In case of holes and oxidizing caused by overheating, do not perform re-brazing or alteration but replace the parts.

## 13.7.2 Adjustment of vacuum pump pressure

- 1. Cylinder with adjustment handle
  - 1. Check and confirm the adjustment handle of the 1<sup>st</sup> pressure adjuster is loosen (anticlockwise). If cylinder valve is opened when the 1<sup>st</sup> gauge pressure adjust handle is closed, the 2<sup>nd</sup> gauge might get broken.

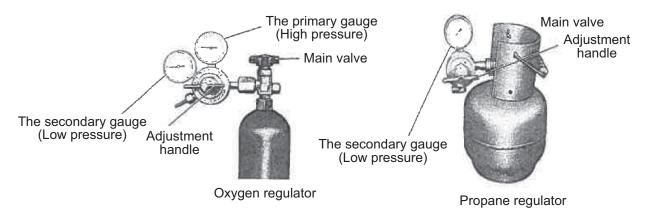

- 2. Open the cylinder valve, and check the remaining amount with the first t side pressure gauge.
- 3. Check the pressure of 2<sup>nd</sup> gauge and turn the adjustment handle to clock-wise direction to adjust the pressure.

$$\odot$$
 Oxygen 2<sup>nd</sup> side gauge pressure  $\cdot \cdot 0.5$  MPa (5.0 kgf/cm<sup>2</sup>)

 $\odot$  Propane 2<sup>nd</sup> side gauge pressure  $\cdot \cdot \cdot \cdot \cdot \cdot \cdot 0.05$  MPa (0.5 kgf / cm<sup>2</sup>)


2. Cylinder without adjustment valve

2<sup>nd</sup> side gauge pressure is adjusted by the adjuster.

Check the both side values of the torch and open the cylinder value to check the remaining refrigerant in the cylinder.

Caution: Do not attach oil component on the connection port of the adjuster.

Especially, use an oxygen cylinder adjuster which is no oil substance type. Do not dismantle or repair the adjuster and pressure gauge.

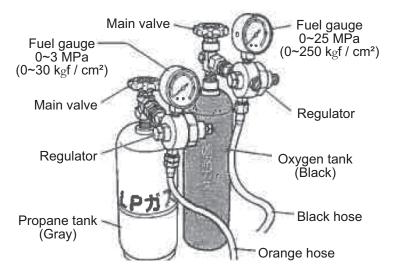

#### 13.7.3 Checking of gas provision

Checking there is no fire around the torch, and then confirm the provision of gas.


- 1. Slightly open the "propane valve" of the torch, and make sure the gas comes out from the torch crater and then close the "propane valve".
- 2. Slightly open the "oxygen valve" of the torch and make sure the gas comes out from the torch crater and then close the "oxygen valve".

Check there is no gas leakage around the hose connection.

#### 13.7.4 Adjustment of flame

- 1. Slightly open the "propane valve" of the torch and lit with spark lighter.
- This moment, the flame is only by propane and the color is red.
- 2. Gradually open the "oxygen valve" of the torch to mix oxygen, and adjust the amount of propane and oxygen with the valve to make the flame suitable for brazing work.

If the white core flame splits into two, the torch crater might be clogged. In this case, remove the crater from the torch and check.

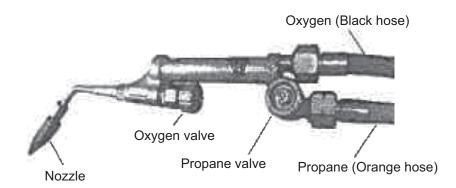


## 13.7.5 Types of flame

Types of flame change based on the proportion of propane and oxygen.

#### [Neutral Flame]

#### Perform brazing with this flame

 (This is a flame when oxygen and propane are mixed at proper proportion, and has lesser effect on the brazed metals)




Outer flame (Light orange color)

#### [Carbide Flame]

 When propane is excessive, the flame has white color flame in between the white core flame and outer flame. (This is due to the lack of oxygen and the proportion of unburned propane is excessive.

The black carbon created during the brazing work may contaminate the surface of the brazed metal).



Outer flame (Blue color)

#### [Oxidizing Flame]

Oxygen is more compared to the neutral flame. Although the flame size is small, this has the highest flame heat. However, due to the excessive oxygen contained in the flame, the brazing point gets oxidized. (This flame may cause holes, due to the high heat. The pipe may get melt)



Outer flame (Blue orange color)

#### 13.7.6 Closing the flame

#### [In case of short break]

- 1. Close the "propane valve" of the torch.
- 2. Close the "oxygen valve" of the torch.

#### [In case of finishing work]

- 1. As above, close the flame following the procedure of "In case of short break".
- 2. Completely close the valves of oxygen and propane cylinders.

3. Release the remaining gas inside the hose by opening the "oxygen valve" and "propane valve" of the torch. Confirm the 1<sup>st</sup> and 2<sup>nd</sup> side gauge pressures of "oxygen" and "propane" cylinder pressure adopter are "zero".

# 13.7.7 Selection of brazing material

Outom	JIS		Compo	sition of	ingredier	nts (%)		Tem	nperature	(°C)	Tensile (Refer		Characteristics
Category	Standard Number	Ag	Cu	Zu	Cd	Ni	Р	Solidus	Liquidus	Brazing temp	Kgf•cm <sup>2</sup>	Base material	and applications
	BAg∙ 1A	49.0 ~ 51.0	14.5 ~ 16.5	14.5 ~ 18.5	17.0 ~ 19.0			approx. 625	approx. 635	635 ~ 760	45.5	S20C	Liquidity is good at low temperature, it is preferable to a small junction of the gap in the universal form.
	BAg∙ 1	44.0 ~ 56.0	14.0 ~ 16.0	14.0 ~ 18.0	23.0 ~ 25.0	_		approx. 605	approx. 620	620 ~ 760	45.5	S20C	It has similar performance to the BAg • 1A, and suitable for every base material except the light weight metal.
BAg	BAg∙2	34.0 ~ 36.0	25.0 ~ 27.0	19.0 ~ 23.0	17.0 ~ 19.0			approx. 605	approx. 700	700 ~ 845	45.5	S20C	It is a brazing filler metal in universal form, suitable for a slightly larger gap junction.
	BAg∙3	48.0 ~ 51.0	14.5 ~ 16.5	13.5 ~ 17.5	15.0 ~ 17.0	2.5 ~ 3.5	l	approx. 630	approx. 690	690 ~ 815	35 ~ 70	SS ~ SUS	It has good corrosion resistance in stainless steel-based brazing, suitable for brazing tungsten carbide, aluminum bronze and copper.
	BCuP-2		remain				6.8 ~ 7.5	approx. 710	approx. 785	690 ~ 815	21 ~ 24.5	Cu	Good liquidity, suitable for brazing copper tube.
BCuP	BCuP-3	4.8 ~ 5.2	remain		_	_	5.8 ~ 6.7	approx. 645	approx. 815	720 ~ 815	21 ~ 24.5	Cu	Suitable for brazing when the joint spacing is not constant
	BCuP-5	14.5 ~ 15.5	remain				4.8 ~ 5.3	approx. 645	approx. 800	705 ~ 815	21 ~ 24.5	Cu	When brazing of copper and copper, it is used without a flux, but not possible for brazing basic materials

Use BAg brazing material (silver solder) to increase the welding performance.

#### Caution

BCuP (phosphorus copper wax) is easy to react with sulfur, and makes a brittle compound water soluble, and causes gas leakage. In hot spring areas, use other brazing materials or paint the surface for protection.

#### 13.7.8 Need of flux

#### Use flux to protect the base materials.

- 1. Remove impurity and oxide film on the metal base, and improve the flow of the brazing material.
- 2. Prevent oxidation of the metal surface in brazing.
- 3. Reduce the surface tension of the brazing material.

#### 13.7.9 Need of nitrogen gas


In order to prevent oxidation in the pipe, perform the brazing operation in nitrogen gas flow. Flow rate 0.05 m<sup>3</sup> / h, or pressure reducing value at 0.02 MPa (0.2kgf / cm<sup>2</sup>) below.


# 13.7.10 Checking of brazing (insert) points


- No impurity on the brazing point If dirt or oil is attached on the brazing point, the brazing filler metal does not reach to junction, and it may cause poor welding.
- 2. Adequate gap space in the brazing point The advantage of capillary current situation is used in brazing. If the gap space is too large, this phenomenon may not occur and it may cause poor welding because brazing filler metal does not flow to join the front part.
- Appropriate size for insertion The guideline for pipe insertion dimensions is to three times the diameter of the base material, but you need to decide the insertion size in consideration of the clogging of the brazing material. Generally, for thin pipes, you need to increase the insert size, and for thick pipe vice versa.
- 4. Brazing material to flow from top to bottom Brazing filler metal will easily flow to the connecting portion by capillary action. Further, by bending the brazing portion of [dryer side] of the capillary tube at 15 mm from the tube top to the angle of about 120°, you can prevent the damage of dryer inside and the clogging of brazing material caused by the excessive insertion of capillary tube.

# 13.7.11 Brazing and heating

1. Place the flame to a pipe which has more heat capacity in order to let the brazing material melt by the pipe heat. Heat the pipe up to the melting temperature of the brazing material, but when it is overheating, assess the temperature by pipe color in order not to melt the pipe.

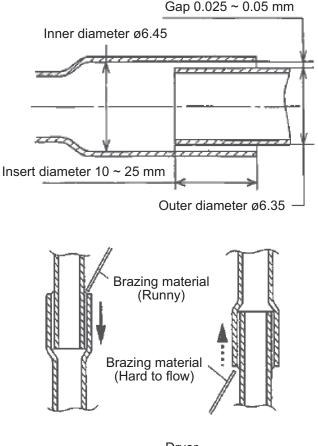

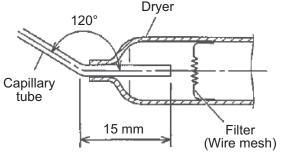

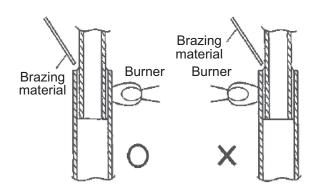

The pre-heating is to heat the base material until the melting temperature, and requires certain training to distinguish the color of the heated base material in order not to melt the material.

- The color and temperature of copper tube
  Becoming red color ••••••480°C
- Dull red ••••••650°C
- Cherish red ••••••760°C
- Brightening cherish red ••••• 870°C

#### (Reference)

Melting temperature of copper • • • • • • Approx. 1083°C


Maximum temperature obtained in propane and oxygen ••••• Approx. 1083°C

The important point is to heat the bonding part uniformly within a short period of time until reaching to the brazing temperature in the following manner.

- Apply the flame on to the side with better heat transmission. If the pipe thickness is consistent, by heating like 30% iron and 70% copper, the copper pipe inside reaches to brazing temperature. Iron pipes have low heat transmission and only the part the flame is applied get high temperature, and this causes oxidization of the pipe. The flow of the brazing filler is affected negatively.
- Apply the flame on to the side of larger heat capacity.
   When brazing a thin tubes such as capillary tube and driver at a capition has to be taken to apply.

and dryer, etc., caution has to be taken to apply the flame to the dryer side (thick pipe side), in order to prevent burn out by the heat.

4. When brazing the compressor connection pipes (suction and discharge), remove the sound insulation plate and the fan, and place the compressor stand vertically (to prevent the leakage of compressor refrigerating machine oil), and apply the flame from the compressor body side.

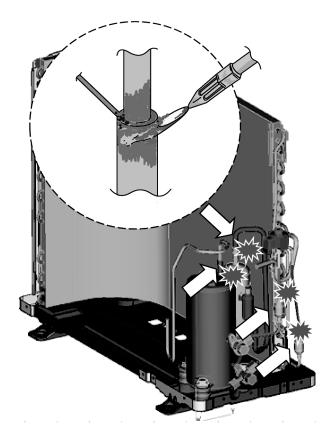

#### 13.7.12 Terminologies of brazing

Pin holes  $\rightarrow$  Small holes are generated on the surface of the brazing metal.

Wet temperature  $\rightarrow$  Liquidus temperature at which the brazing material starts flowing out by heating, generally it is the liquidus-line temperature.

Blow holes  $\rightarrow$  Hollows made by gas in the brazing material of brazing portion (gas reservoirs).

Pits  $\rightarrow$  As a result of blow holes, small dents generated on the outside surface of welding.

Voids  $\rightarrow$  The blazing material does not reach completely to the brazing part. It cannot be identified from outside.

# 13.8 <Reference> Analysis method for no error code, no cooling / no warming

#### 13.8.1 Preparation for appropriate diagnosis


In order to obtain appropriate operation characteristics, minimum 15 minutes or more operation time [testing operation (rated operation)] is required.

Method of rated operation (rated operation)

For the models which have two buttons of "emergency operation and forced cooling operation", press forced cooling button once. For the models which have only emergency operation button, press the button once for 5 seconds and when hear "beep" sound, release the button. Then, cooling operation starts.

- 2. Checking the mal-functions of indoor / outdoor units
  - Any obstacles against heat release and air suction? (short circuit) (Forget to remove the outdoor unit cover or fallen leaves blocking the outdoor unit)
  - 2) Are the indoor unit air filters clean? (obstructing heat suction)
  - 3) Is the setting temperature on the remote controller correct? (is the setting temperature set at lower/higher than the room temperature?)

## 13.8.2 Understanding and verification of refrigerant cycle

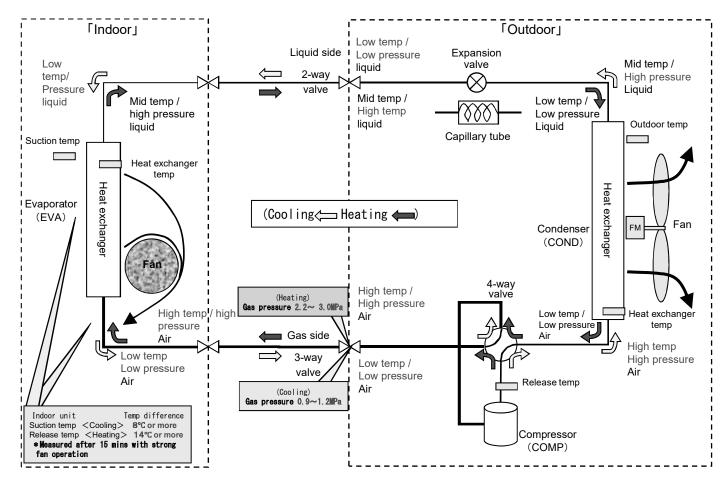

- 1. Measuring temperature
  - 1) Indoor unit suction temperature, release temperature, temperature difference,  $\rightarrow$  Measure by thermometer
  - 2) 2-way valve pipe temperature in cooling mode is low temperature (benchmark : 5 ~ 10°C), in heating mode is medium temperature (benchmark : 25 ~ 35°C).
  - 3) 3-way valve pipe temperature in cooling mode is low temperature (benchmark : 7 ~ 15°C) in heating mode is high temperature (benchmark : 38 ~ 50°C).
- 2. Measuring electric current
  - Measuring electric current in operation → check by clump meter (refer to table of technical characteristic guideline)
- 3. Meauring pressure
  - Measuring gas pressure → check the pressure by manifold gauge (refer to table of technical characteristic guideline)
- 4. Any sound from the expansion valve?

(when starting the operation and the outdoor unit is turned on, the expansion valve is re-set, check if there is any edged sound or clack sound)

#### 13.8.3 Guidance for diagnosis of refrigerant cycle

Comparison with	Cooling	Cooling mode					
normal operation	High	Low					
	Excess insertion of refrigerant	Clogged capillary, expansion valve malfunction					
Refrigerant	Heat releasing obstruction	Clog by moisture					
pressure	Dirty condenser, attachment of impurity	Lack of refrigerant gas					
-	Compressor malfunction						
	Excess insertion of refrigerant	Lack of refrigerant gas					
Operation electric	Heat releasing obstruction	Compressor malfunction					
current	Dirty condenser, impurity	Mixture of air					
		(Insufficient evacuation)					
2-way valve	Excess insertion of refrigerant	Clogged capillary, expansion valve malfunction					
temperature	Compressor malfunction	Lack of refrigerant gas					
3-way valve	Lack of refrigerant gas • Compressor malfunction	Excess insertion of refrigerant					
temperature	Clogged capillary, expansion valve malfunction						

	Temperature di	fference at or less than 8°C in cooling ope	eration • • • Causes		
Suction temperature	<ul> <li>Heat releasing obstruction</li> </ul>	Dirty condenser	<ul> <li>Attachment of impurity</li> </ul>		
&	<ul> <li>Lack of refrigerant gas</li> </ul>	Lack of refrigerant gas			
Release air	• Mixture of air	Mixture of moisture			
temperature	Clogged capillary	<ul> <li>Expansion valve malfunction</li> </ul>	Compressor malfunction		

Above all are based on the condition that the installation work is properly performed (no issues in indoor / outdoor pipe connections, etc.)


# 14. Operation Control

# 14.1 Basic Function

Inverter control, which equipped with a microcomputer in determining the most suitable operating mode as time passes, automatically adjusts output power for maximum comfort always. In order to achieve the suitable operating mode, the microcomputer maintains the set temperature by measuring the temperature of the environment and performing temperature shifting. The compressor at outdoor unit is operating following the frequency instructed by the microcomputer at indoor unit that judging the condition according to internal setting temperature and intake air temperature.

#### 14.1.1 Internal Setting Temperature

Once the operation starts, remote control setting temperature will be taken as base value for temperature shifting processes. These shifting processes are depending on the air conditioner settings and the operation environment. The final shifted value will be used as internal setting temperature and it is updated continuously whenever the electrical power is supplied to the unit.

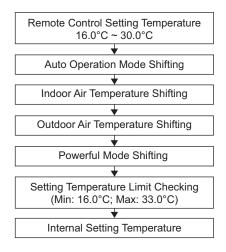

#### 14.1.2 Cooling Operation

#### 14.1.2.1 Thermostat control

- Compressor is OFF when Intake Air Temperature Internal Setting Temperature < -1.5°C continue for 3 minutes.
- When compressor is OFF (Thermostat OFF) and AUTO FAN is set, the fan will stop periodically.
- Compressor is ON after waiting for 3 minutes, if the Intake Air Temperature Internal Setting Temperature > Compressor OFF point.

#### 14.1.3 Soft Dry Operation

#### 14.1.3.1 Thermostat control

- Compressor is OFF when Intake Air Temperature Internal Setting Temperature < -1.0°C continue for 3 minutes.
- When compressor is OFF (Thermostat OFF) and AUTO FAN is set, the fan will stop periodically.
- Compressor is ON after waiting for 3 minutes, if the Intake Air Temperature Internal Setting Temperature > Compressor OFF point.

 
#### 14.1.4 Heating Operation

#### 14.1.4.1 Thermostat control


- Compressor is OFF when Intake Air Temperature Internal Setting Temperature > +2.0°C continue for 3 minutes.
- Compressor is ON after waiting for 3 minutes, if the Intake Air Temperature Internal Setting Temperature < Compressor OFF point.</li>

## 14.1.5 Automatic Operation

- This mode can be set using remote control and the operation is decided by remote control setting temperature, remote control operation mode and indoor intake air temperature.
- During operation mode judgment, indoor fan motor (with speed of Lo-) is running for 30 seconds to detect the indoor intake air temperature.
- Every 10 minutes, the indoor temperature is judged.
- For the 1st judgment
  - If indoor intake temperature remote control setting temperature  $\geq$  2.0°C, COOL mode is decided.
  - If -2.0°C ≤ indoor intake temperature remote control setting temperature < 2.0°C, DRY mode is decided.</li>
  - If indoor intake temperature remote control setting temperature < -2.0°C, HEAT mode is decided.



- For the 2nd judgment onwards
  - If indoor intake temperature remote control setting temperature ≥ 4.0°C, if previous operate in DRY mode, then continue in DRY mode. otherwise COOL mode is decided.
  - o If -2.5°C ≤ indoor intake temperature remote control setting temperature < 4.0°C, maintain with previous mode.</li>
  - o If indoor intake temperature remote control setting temperature < -2.5°C, HEAT mode is decided.

 

# 14.2 Indoor Fan Motor Operation

#### 14.2.1 Basic Rotation Speed (rpm)

#### A. Basic Rotation Speed (rpm)

i. Manual Fan Speed

[Cooling, Dry]

• Fan motor's number of rotation is determined according to remote control setting.

Remote control	0	0	0	0	0
Tab	Hi	Me+	Me	Me-	Lo

[Heating]

 
• Fan motor's number of rotation is determined according to remote control setting.

Remote control	0	0	0	0	0
Tab	SHi	Me+	Me	Me-	Lo

ii Auto Fan Speed

[Cooling, Dry]


- According to room temperature and setting temperature, indoor fan speed is determined automatically.
- When set temperature is not achieved, the indoor fan will operate according to pattern below.



• When set temperature achieved, the indoor fan speed will be fixed. When thermostat off, the fan stop periodically.

[Heating]

• According to indoor pipe temperature, automatic heating fan speed is determined as follows.

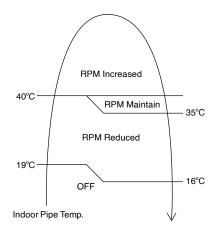


#### **B. Feedback control**


- Immediately after the fan motor started, feedback control is performed once every second.
- During fan motor on, if fan motor feedback ≥ 2550 rpm or < 50 rpm continue for 10 seconds, then fan motor error counter increase, fan motor is then stop and restart. If the fan motor counter becomes 7 times, then H19 - fan motor error is detected. Operation stops and cannot on back.

# 14.3 Outdoor Fan Motor Operation

 
• It starts when compressor starts operation and it stops 30 seconds after compressor stops operation.



• During cooling operation, and outdoor ambient temperature is below 8°C, outdoor fan speed will be controlled according to outdoor piping temperature as following:

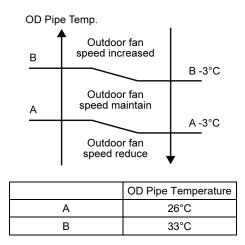

• During above condition, when indoor heat exchanger temperature is below 5°C, the outdoor fan will stop according to outdoor piping temperature as following:

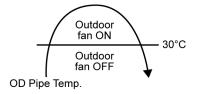


# 14.4 Airflow Direction

- There is one type of airflow, vertical airflow (directed by horizontal vane).
- Control of airflow direction can be automatic (angles of direction is determined by operation mode, heat exchanger temperature and intake air temperature) and manual (angles of direction can be adjusted using remote control).

Operation Mode	Airflow Direction			Upper Vane Angle (°)				
Operation Mode					2	3	4	5
	Auto with Heat Exchanger	А	Upward fix	x 2		20	20	
Heating		В	Downward fix	58				
Heating	Temperature	С	Upward fix	20				
	Manual			20	33	45	58	70
Cooling	Auto	Auto		20 ~ 70				
Cooling	Manual			20	33	45	58	70
Soft Dry	Auto			20 ~ 70				
	Manual			20	33	45	58	70

## 14.4.1 Vertical Airflow

- 1. Automatic vertical airflow direction can be set using remote control; the vane swings up and down within the angles as stated above. For heating mode operation, the angle of the vane depends on the indoor heat exchanger temperature as Figure 1 below. When the air conditioner is stopped using remote control, the vane will shift to close position.
- Manual vertical airflow direction can be set using remote control; the angles of the vane are as stated above and the positions of the vane are as Figure 2 below. When the air conditioner is stopped using remote control, the vane will shift to close position.

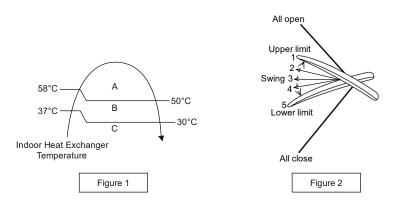

## 14.4.2 Horizontal Airflow

• The horizontal airflow direction louver can be adjusted manually by hand.

# 14.5 Quiet Operation (Cooling Mode/Cooling Area of Dry Mode)

- Purpose
  - To provide quiet cooling operation compare to normal operation.
- Control condition
  - o Quiet operation start condition
    - When "QUIET" button at remote control is pressed twice. QUIET LED illuminates.
  - o Quiet operation stop condition
    - When one of the following conditions is satisfied, quiet operation stops:
      - QUIET button is pressed again.
      - Stop by OFF/ON switch.
      - Timer "off" activates.
    - When quiet operation is stopped, operation is shifted to normal operation with previous setting.
    - When fan speed is changed, quiet operation is shifted to quiet operation of the new fan speed.
    - When operation mode is changed, quiet operation is shifted to quiet operation of the new mode.
    - During quiet operation, if timer "on" activates, quiet operation maintains.
    - After off, when on back, quiet operation is not memorised.

- Control contents
  - Fan speed is changed from normal setting to quiet setting of respective fan speed.
     Fan speed for quiet operation is reduced from setting fan speed.

# 14.6 Quiet Operation (Heating)

- Purpose
  - o To provide quiet heating operation compare to normal operation.
- Control condition
  - Quiet operation start condition
    - When "QUIET" button at remote control is pressed. QUIET LED illuminates.
  - Quiet operation stop condition
    - When one of the following conditions is satisfied, quiet operation stops:
      - QUIET button is pressed again.
      - Stop by OFF/ON switch.
      - Timer "off" activates.
    - When quiet operation is stopped, operation is shifted to normal operation with previous setting.
    - When fan speed is changed, quiet operation is shifted to quiet operation of the new fan speed.
    - When operation mode is changed, quiet operation is shifted to quiet operation of the new mode, except fan mode only.
    - During quiet operation, if timer "on" activates, quiet operation maintains.
    - After off, when on back, quiet operation is not memorised.
- Control contents
  - o Fan speed manual
    - Fan speed is changed from normal setting to quiet setting of respective fan speed.
    - Fan speed for quiet operation is reduced from setting fan speed.
  - Fan Speed Auto
    - Indoor FM RPM depends on pipe temp sensor of indoor heat exchanger.

# 14.7 Powerful Mode Operation


• When the powerful mode is selected, the internal setting temperature will shift lower up to 2.0°C (for Cooling/Soft Dry) or higher up to 3.5°C (for Heating) than remote control setting temperature for 20 minutes to achieve the setting temperature quickly.

# 14.8 Timer Control

- There are 2 sets of ON and OFF timer available to turn the unit ON or OFF at different preset time.
- If more than one timer had been set, the upcoming timer will be displayed and will activate in sequence.

#### 14.8.1 ON Timer Control

- ON timer 1 and ON timer 2 can be set using remote control, the unit with timer set will start operate earlier than the setting time.
  - This is to provide a comfortable environment when reaching the set ON time.
- 60 minutes before the set time, indoor (at fan speed of Lo-) and outdoor fan motor start operate for 30 seconds to determine the indoor intake air temperature and outdoor air temperature in order to judge the operation starting time.
- From the above judgment, the decided operation will start operate earlier than the set time as shown below.

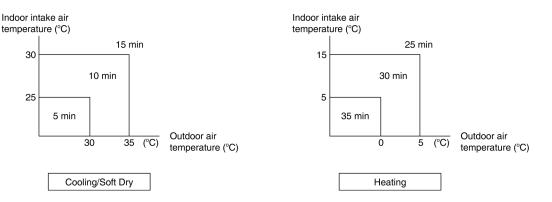

## 14.8.2 OFF Timer Control

OFF timer 1 and OFF timer 2 can be set using remote control, the unit with timer set will stop operate at set time.

# 14.9 Auto Restart Control

- When the power supply is cut off during the operation of air conditioner, the compressor will re-operate within three to four minutes (there are 10 patterns between 2 minutes 58 seconds and 3 minutes 52 seconds to be selected randomly) after power supply resumes.
- This type of control is not applicable during ON/OFF Timer setting.
- This control can be omitted by open the circuit of JP1 at indoor unit printed circuit board.

# 14.10 Indication Panel


LED	POWER	TIMER	nanoeX
Color	White	White	White
Light ON	Operation ON	Timer Setting ON	nanoeX Mode ON
Light OFF	Operation OFF	Timer Setting OFF	nanoeX Mode OFF

Note:

- If POWER LED is blinking, the possible operation of the unit are Hot Start, during Deice operation, operation mode judgment, or ON timer sampling.
- If Timer LED is blinking, there is an abnormality operation occurs.

# 14.11 HA Terminal (HAJEM-A)


- Enable digital connection from indoor unit to external devices.
- Control items:
  - 1 Start/stop input.
  - 2 Start/stop signal output.

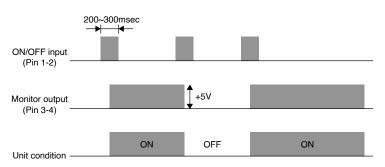

Condition

- 1 1-2 (Pulse input): Unit ON/OFF condition switching with a pulse signal.
  - (1 pulse signal: shortage status 200~300msec)
- 2 3-4 (Static output): 5V output during the unit ON. No output at OFF.

Example of wiring:

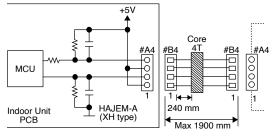

#A K1KA04AA0347 (Maker: JST; Maker code: B4B-XH-TV4) #B Maker: JST; Maker code: XHP-4

Note: The wire length from indoor unit to the external interface must be within 1.9 meters. The wire must be double insulation type and a ferrite core to be added to reduce noise. Proposed core spec is J0KE00000147 with Heat Shrinkage Tube.

The signal between indoor unit and the external interface must be isolated by photo-coupler of approval type (e.g: Semko, VDE etc).

# 14.12 nanoeX Operation

- Generate nanoeX (water wrapped ion particle) to moisturize skin, provide deodorization & sterilization effect.
- nanoeX operation start condition
  - During unit running at any operation mode, if nanoeX operation is activated, combination operation 0 (operation mode + nanoeX operation) starts.
  - During unit is OFF, if nanoeX operation is activated, nanoeX individual operation starts. 0
- nanoeX operation stop condition
  - When OFF/ON button is pressed to stop the operation. 0
  - When nanoeX button is pressed. 0
  - When OFF Timer activates. 0
- nanoeX operation pause condition
  - When indoor fan stop (during deice, odor cut control, thermostat off, etc.). nanoeX operation resume after 0 indoor fan restarts.
  - When indoor intake temperature  $\geq$  35°C and < 5°C. nanoeX operation resume after indoor intake 0 temperature <  $35^{\circ}$ C or  $\geq 5^{\circ}$ C continuously for 6 minutes.
- Indoor fan control
  - During any operation mode combines with nanoeX operation, fan speed follows respective operation mode. 0 However, nanoeX system enabled when fan speed  $\geq$  390 rpm to ensure proper negative ion distribution, nanoeX system disabled when fan speed < 390 rpm.
  - During nanoeX individual operation, fan speed follow remote control setting. Auto Fan Speed for nanoeX 0 individual operation is cooling medium fan. Powerful & Quiet is disabled during nanoeX.
- Airflow direction control
  - During any operation mode combines with nanoeX operation, airflow direction follows respective operation 0 mode.
  - During nanoeX individual operation, Air Swing follow remote control setting. 0
- Timer control
  - When ON Timer activates when unit stops, previous operation resumes and restored last saved nanoeX operation status.
  - When ON Timer activates during any operation, no change on current operation. 0
  - When OFF Timer activates during any operation, all operation stops and the latest nanoeX operation status 0 is saved.
- Indicator
  - When nanoeX starts, nanoeX indicator ON.
- Remote control receiving sound
  - Normal Operation 0
  - nanoeX Operation 0 Stop 0


➔ nanoeX Operation

- nanoeX individual Operation 0
- → Normal Operation : Beep ➔ nanoeX individual Operation : Beep → Stop : Long Beep

: Beep

- Power failure
  - During nanoeX individual operation, if power failure occurs, after power resumes, nanoeX individual operation resumes immediately.
  - During combination operation, if power failure occurs, after power resumes, combination operation resume 0 immediately.

- nanoeX check mode
  - To enable nanoeX check mode, during nanoeX operation ON:

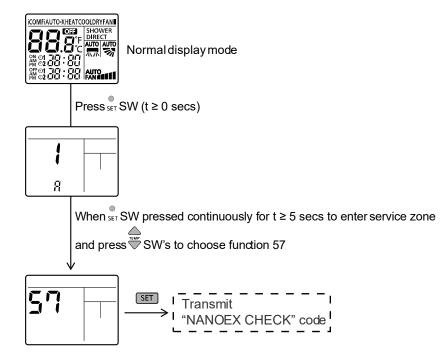

- o During nanoeX check mode, H67 is judged when disconnection detected. Timer LED blinks.
- nanoeX Abnormal Detection

0

- Disconnection Abnormality
  - Abnormal detection condition
    - Start from 1 sec after nanoeX power ON, 6 secs has passed and in this 6 secs period, abnormal signal is detected continuously for 5.9 secs.
  - Action after abnormal detection condition fulfilled
    - Disconnection counters +1, nanoeX power OFF for 5 minutes and then restart. However, according to action mode and disconnection counter, below will be implemented:
      - During nanoeX Check Mode: Disconnection abnormality will judged when disconnection counter ≥ 1. Abnormal code: H67 will memorized in EEPROM, Timer LED blinking and nanoeX LED Off.
      - Other Than Above: Disconnection abnormality will judged when disconnection counter ≥ 3. Abnormal code: H67 will memorized in EEPROM and nanoeX LED OFF, Timer LED not blinking.
  - Disconnection counters clear condition >
    - Disconnection counter will be cleared when operation stop. (Not nanoeX Check Mode)
- o nanoeX Discharge Abnormality
  - Abnormal detection condition
    - After 30 minutes nanoeX power ON, abnormal signal is being detected continuously for 5s.
  - Action after abnormal detection condition fulfilled
    - Abnormal discharge counter +1, nanoeX power OFF for 30 minutes and then restart. When abnormal discharge counter ≥ 12, abnormal code: H67 in analyze area (Area where abnormal code not displayed) will be memorized.
  - Abnormal discharge counters clear condition
    - Discharge counter will be cleared when operation become normal for 50 mins above or when operations stop.

# 15. Operation Control (For Multi Split Connection)

During multi split connection, indoor unit's operation controls are same with single split connection unless specified in this chapter.

# 15.1 Cooling operation

## 15.1.1 Thermostat control

- Capability supply to indoor unit is OFF (Expansion valve closed) when Intake Air Temperature Internal setting temperature < -2.0°C.</li>
- Capability resume supply to indoor unit after waiting for 3 minutes, if the Intake Air temperature Internal setting temperature > Capability supply OFF point.

# 15.2 Soft Dry Operation

# 15.2.1 Thermostat control

- Capability supply to indoor unit is OFF (Expansion valve closed) when Intake Air Temperature Internal setting temperature < -3.0°C.</li>
- Capability resume to indoor unit after waiting for 3 minutes, if the Intake Air temperature Internal setting temperature > Capability supply OFF point.

# 15.3 Heating Operation

# 15.3.1 Thermostat control


- Capability supply to indoor unit is OFF (Expansion valve closed) when Intake Air Temperature Internal setting temperature > +1.0°C.
- During this condition, the indoor fan is stopped if compressor is ON.
- Capability resume supply to indoor unit after waiting for 3 minutes, if the Intake Air Temperature Internal setting temperature < Capability supply OFF point.</li>

# 15.3.2 Temperature Sampling Control

- Temperature sampling is controlled by outdoor unit where room temperature for all power supply ON indoor unit could be obtained.
- When capability supply to the indoor unit is OFF and the compressor is ON, the indoor fan motor is stopped. During this condition, 15 seconds after sampling signal from outdoor unit is received, the indoor fan start operation at low fan speed.
- However, within first 4 minutes of capability stopped supply to the indoor unit, even sampling signal is received, the sampling control is cancelled.

# 15.4 Automatic Operation

- This mode can be set using remote control and the operation is decided by remote control setting temperature, remote control operation mode, indoor intake and outdoor air temperature.
- During operation mode judgment, indoor fan motor (with speed of -Lo) and outdoor fan motor are running for 30 seconds to detect the indoor intake and outdoor air temperature. The operation mode is decided based on below chart.

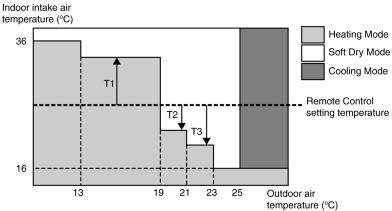

• Every 180 minutes, the indoor and outdoor temperature is judge. Based on remote control setting temperature, the value of T1 will increase up to 10°C, T2 will decrease by 3°C and T3 will decrease up to 8°C.

# 15.5 Indoor Fan Motor Operation

# 15.5.1 Residual Heat Removal Control

• To prevent high pressure at indoor unit, when heating mode thermostat-off condition or power supply OFF, indoor fan continue to operate at controlled fan speed for maximum 30 seconds then stop.

# 15.6 Powerful Mode Operation

 When the powerful mode is selected, the internal setting temperature will shift lower up to 4.0°C for Cooling/Soft Dry or higher up to 6.0°C for heating than remote control setting temperature. This operation stops automatically after 20 minutes.

# 15.7 Auto Restart Control

- When the power supply is cut off during the operation of air conditioner, the compressor will re-operate between three to four minutes (10 patterns to be selected randomly) after power resume.
- During multi split connection, Indoor unit will resume previous mode, include unit standby mode.

# 15.8 Indication Panel

LED	POWER	TIMER	nanoeX
Color	White	White	White
Light ON	Operation ON	Timer Setting ON	nanoeX Mode ON
Light OFF	Operation OFF	Timer Setting OFF	nanoeX Mode OFF

Note:

- If POWER LED is blinking (0.5 seconds ON, 0.5 second OFF), the possible operation of the unit are during Indoor Residual Heat Removal, Hot Start, during Deice operation, operation mode judgment, or ON timer sampling.
- If POWER LED is blinking (2.5 seconds ON, 0.5 second OFF), the unit is in standby mode.
- If TIMER LED is blinking, there is an abnormality operation occurs.

# 16. Protection Control

# 16.1 Protection Control for All Operations

## 16.1.1 Restart Control (Time Delay Safety Control)


- The Compressor will not turn on within 3 minutes from the moment operation stops, although the unit is turned on again by pressing OFF/ON button at remote control within this period.
- This control is not applicable if the power supply is cut off and on again.
- This phenomenon is to balance the pressure inside the refrigerant cycle.

## 16.1.2 Total Running Current

- 1 When the outdoor unit total running current (AC) exceeds X value, the frequency instructed for compressor operation will be decreased.
- 2 If the running current does not exceed X value for 5 seconds, the frequency instructed will be increased.
- 3 However, if total outdoor unit running current exceeds Y value, compressor will be stopped immediately for 3 minutes.

Model	Z25UFEAW		Z35UFEAW		Z50UFEAW	
Operation Mode	X (A)	Y (A)	X (A)	Y (A)	X (A)	Y (A)
Cooling / Soft Dry (A)	5.16		6.06		10.41	
Cooling / Soft Dry (B/C)	4.71	14.66	5.52	14.66	9.96	14.66
Heating	5.25		7.69		10.41	

4 The first 30 minutes of cooling operation, (A) will be applied.

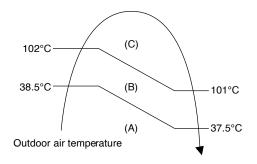


## 16.1.3 IPM (Power transistor) Prevention Control

- Overheating Prevention Control
  - 1 When the IPM temperature rises to 120°C, compressor operation will stop immediately.
  - 2 Compressor operation restarts after 3 minutes the temperature decreases to 110°C.
  - 3 If this condition repeats continuously 4 times within 20 minutes, timer LED will be blinking ("F96" is indicated).
- DC Peak Current Control
  - 1 When electric current to IPM exceeds set value of 16.0 ± 2.0A (Z25/35UFEAW) and 30.0 ± 3.0A (Z50UFEAW), the compressor will stop operate. Then, operation will restart after 3 minutes.
  - 2 If the set value is exceeded again more than 30 seconds after the compressor starts, the operation will restart after 1 minute.
  - 3 If the set value exceeded again within 30 seconds after the compressor starts, the operation will restart after 1 minute. If this condition repeats continuously for 7 times, all indoor and outdoor relays will be cut off, timer LED will be blinking ("F99" is indicated).

# 16.1.4 Compressor Overheating Prevention Control

- Instructed frequency for compressor operation will be regulated by compressor temperature. The changes of frequency are as below.
- If compressor temperature exceeds 103°C, compressor will be stopped, occurs 4 times per 20 minutes, timer LED will be blinking. ("F97" is indicated.)

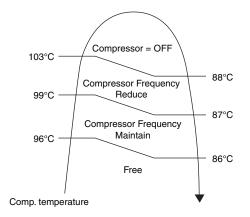

# 16.1.5 Low Pressure Prevention Control (Gas Leakage Detection)

- Control start conditions
  - For 5 minutes, the compressor continuously operates and outdoor total current is between 0.75A and 0.95A (Z25/35UFEAW), 1.38A and 1.65A (Z50UFEAW).
  - During Cooling and Soft Dry operations:
    - Indoor suction temperature indoor piping temperature is below 4°C.
  - During Heating operations : Indoor piping temperature - indoor suction is under 5°C.
- Control contents
  - Compressor stops (and restart after 3 minutes).
  - o If the conditions above happen 2 times within 20 minutes, the unit will:
    - Stop operation
    - Timer LED blinks and "F91" indicated.

## 16.1.6 Low Frequency Protection Control 1

• When the compressor operate at frequency lower than 24 Hz continued for 20 minutes, the operation frequency will be changed to 23 Hz for 2 minutes.

## 16.1.7 Low Frequency Protection Control 2


• When all the below conditions comply, the compressor frequency will change to lower frequency.

Temperature, T, for:	Cooling/Soft Dry	Heating
Indoor intake air (°C)	T < 14 or T ≥ 30	T < 14 or T ≥ 28
Outdoor air (°C)	T < 13 or T ≥ 38	T < 4 or T ≥ 24
Indoor heat exchanger (°C)	T < 30	T ≥ 0


# 16.2 Protection Control for Cooling & Soft Dry Operation

# 16.2.1 Outdoor Air Temperature Control

- The compressor operating frequency is regulated in accordance to the outdoor air temperature as shown in the diagram below.
- This control will begin 1 minute after the compressor starts.
- Compressor frequency will adjust base on outdoor air temperature.

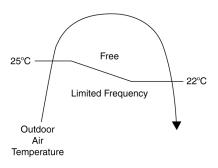

• The compressor will be stopped to avoid compressor overloading.

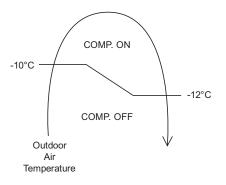

# 16.2.2 Cooling Overload Control

- Detects the Outdoor pipe temperature and carry out below restriction/limitation (Limit the compressor Operation frequency).
- The compressor stop if outdoor pipe temperature exceeds 60°C.
- If the compressor stops 4 times in 20 minutes, Timer LED blinking (F95 indicated: outdoor high pressure rise protection).

# 16.2.3 Freeze Prevention Control 1

- When indoor heat exchanger temperature is lower than 0°C continuously for 6 minutes, compressor will stop operating.
- Compressor will resume its operation 3 minutes after the indoor heat exchanger is higher than 5°C.
- At the same time, indoor fan speed will be higher than during its normal operation.
- If indoor heat exchanger temperature is higher than 5°C for 5 minutes, the fan speed will return to its normal operation.

# 16.2.4 Freeze Prevention Control 2

- Control start conditions
  - o During Cooling operation and soft dry operation
    - During thermo OFF condition, indoor intake temperature is less than 10°C or
    - Compressor stops for freeze prevention control
    - Either one of the conditions above occurs 5 times in 60 minutes.
  - Control contents

0

- Operation stops
- Timer LED blinks and "H99" indicated

## 16.2.5 Dew Prevention Control 1

- To prevent dew formation at indoor unit discharge area.
- This control will be activated if:
  - o Outdoor air temperature and Indoor pipe temperature judgment by microcontroller is fulfilled.
  - When Cooling or Dry mode is operated more than 20 minutes or more.
- This control stopped if:
  - Compressor stopped.
  - o Remote control setting changed (fan speed / temperature).
- Outdoor air temperature and indoor intake temperature changed.
- Fan speed will be adjusted accordingly in this control.

## 16.2.6 Odor Cut Control

- To reduce the odor released from the unit.
  - Start Condition
    - AUTO FAN Speed is selected during COOL or DRY operation.
    - During freeze prevention control and timer preliminary operation, this control is not applicable.
  - Control content
    - Depends on compressor conditions:
      - 1. Compressor OFF  $\rightarrow$  Compressor ON.
        - The indoor unit fan stops temporarily and then starts to blow at minimum airflow for 30 seconds.
      - Compressor ON → Compressor OFF. The indoor unit fan stops for 90 seconds and then blows at minimum airflow for 20 seconds.

 
# 16.3 Protection Control for Heating Operation

#### 16.3.1 Intake Air Temperature Control

Compressor will operate at limited freq., if indoor intake air temperature is 30°C or above.


### 16.3.2 Outdoor Air Temperature Control

• The Max current value is regulated when the outdoor air temperature rise above 14°C in order to avoid compressor overloading.



## 16.3.3 Overload Protection Control

- The compressor operating frequency is regulated in accordance to indoor heat exchanger temperature as shown below.
- If the heat exchanger temperature exceeds 60°C, compressor will stop.

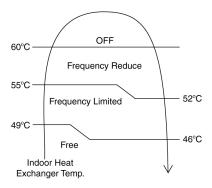

### 16.3.4 Low Temperature Compressor Oil Return Control

 In heating operation, if the outdoor temperature falls below -10°C when compressor starts, the compressor frequency will be regulated up to 600 seconds.

## 16.3.5 Cold Draught Prevention Control

• When indoor pipe temperature is low, cold draught operation starts where indoor fan speed will be reduced.

#### 16.3.6 Deice Operation

• When outdoor pipe temperature and outdoor air temperature is low, deice operation start where indoor fan motor and outdoor fan motor stop and operation LED blinks.

### 16.3.7 Low Pressure Protection Control

- During low ambient heating operation, if the pipe temperature drops below -24°C, the max frequency will be reduced and limited.
- If it does not rises after 3 minutes, the compressor will stop.
- The compressor will start again if the pipe temperature rises above -20°C.

# 17. Servicing Mode

# 17.1 Auto OFF/ON Button

Auto OFF/ON         Auto OF           Button pressed         Button p				FF/ON pressed		Auto OFF/ON Button pressed	
	Auto Operation	5 sec Test Run Operation (Forced cooling operation)	Stop	5 sec Normal Cooling Operation	Stop	5 sec Test Run Operation (Forced heating operation)	Stop
Веер		Bee	ep x 2	Bee	p x 3		

1 AUTO OPERATION MODE


The Auto operation will be activated immediately once the Auto OFF/ON button is pressed. This operation can be used to operate air conditioner with limited function if remote control is misplaced or malfunction.

#### 2 TEST RUN OPERATION (FOR PUMP DOWN/SERVICING PURPOSE)

The Test Run operation will be activated if the Auto OFF/ON button is pressed continuously for more than 5 seconds. A "beep" sound will heard at the fifth seconds, in order to identify the starting of Test Run operation (Forced cooling operation). Within 5 minutes after Forced cooling operation start, the Auto OFF/ON button is pressed for more than 5 seconds. A 2 "beep" sounds will heard at the fifth seconds, in order to identify the starting of Normal cooling operation.

Within 5 minutes after Normal cooling operation start, the Auto OFF/ON button is pressed for more than 5 seconds. A 3 "beep" sounds will be heard at the fifth seconds, in order to identify the starting of Forced heating operation.

The Auto OFF/ON button may be used together with remote control to set / change the advance setting of air conditioner operation.

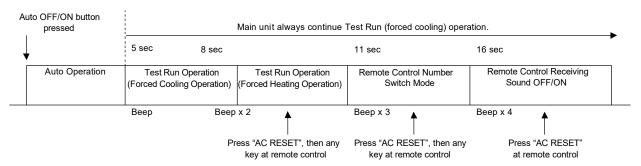

#### 3 REMOTE CONTROL NUMBER SWITCH MODE

The Remote Control Number Switch Mode will be activated if the Auto OFF/ON button is pressed continuously for more than 11 seconds (3 "beep" sounds will occur at 11th seconds to identify the Remote Control Number Switch Mode is in standby condition) and press "AC RESET" button and then press any button at remote control to transmit and store the desired transmission code to the EEPROM.

There are 4 types of remote control transmission code could be selected and stored in EEPROM of indoor unit. The indoor unit will only operate when received signal with same transmission code from remote control. This could prevent signal interference when there are 2 or more indoor units installed nearby together. To change remote control transmission code, short or open jumpers at the remote control printed circuit board.

25 <u>0</u> 1 - 200			Remot	e Control Printed Circuit	Board
	0	0	Jumper A (J-A)	Jumper B (J-B)	Remote Control No.
T HANSE		-	Short	Open	A (Default)
	100 000 000 000 000 000 000 000 000 000	· · ·	Open	Open	В
	~	" o	Short	Short	С
ا <u>ــــــــــــــــــــــــــــــــــــ</u>			Open	Short	D

 During Remote Control Number Switch Mode, press any button at remote control to transmit and store the transmission code to the EEPROM. 4 REMOTE CONTROL RECEIVING SOUND OFF/ON MODE

The Remote Control Receiving Sound OFF/ON Mode will be activated if the Auto OFF/ON button is pressed continuously for more than 16 seconds (4 "beep" sounds will occur at 16th seconds to identify the Remote Control Receiving Sound Off/On Mode is in standby condition) and press "AC Reset" button at remote control.

Press "Auto OFF/ON button" to toggle remote control receiving sound.

 
- Short "beep": Turn OFF remote control receiving sound.
- Long "beep": Turn ON remote control receiving sound.

After Auto OFF/ON Button is pressed, the 20 seconds counter for Remote Control Receiving Sound OFF/ON Mode is restarted.

# 17.2 Heat Only Operation

## 17.2.1 How to Activate/Deactivate Heat only Operation

- Use remote controller to set heating only operation. When the unit in standby mode, follow the steps below:
  - a) Press set continuously for more than 5 seconds to enter special setting mode.
  - b) Press to choose function 61, and then press or to set "01". (To enable the "Heat Only" mode) or "00" (To disable the "Heat Only" mode).
  - c) Press **SET** to activate "Heating only operation" or deactivate "Heating only operation".



## 17.2.2 Operation mode during Heating Only Operation

• The table below shows the operation mode comparison when Heating Only Operation Mode Activated and Deactivated.

Operation Mode	Heating Only Operation Mode Activated	Heating Only Operation Mode Deactivated
AUTO	After 30s sampling, regardless of the indoor intake or outdoor intake temperature judgment, the unit will run Heating operation.	After 30s sampling, the unit will judge the operation mode base on remote controller temperature setting and Indoor Intake Sensor (New Auto Mode) or Outdoor Intake Sensor (Old Auto Mode).
HEAT	The unit will run Heating operation.	The unit will run Heating operation.
COOL	The unit will stop and Power LED blinking.	The unit will run Cooling operation.
DRY	The unit will stop and Power LED blinking.	The unit will run Cooling Dry operation.
NANOE Stand-alone	The unit will stop and Power LED blinking.	The unit will run Nanoe Stand-alone operation.
Force Cooling	The unit will run Force Cooling Operation for X_CTRYTM [15] minutes	The unit will run Force Cooling operation.
Force Heating	The unit will run Force Heating operation.	The unit will run Force Heating operation.
AUTO (with Timer)	The unit will turn ON by the timer and run Auto Operation. After 30s sampling, regardless of the indoor intake or outdoor intake temperature judgment, the unit will run Heating operation.	The unit will turn ON by the timer and run Auto Operation. After 30s sampling, the unit will judge the operation mode base on remote controller temperature setting and Indoor Intake Sensor (New Auto Mode) or Outdoor Intake Sensor (Old Auto Mode).
HEAT (with Timer)	The unit will turn ON by the timer and run Heating Operation.	The unit will turn ON by the timer and run Heating Operation.
COOL (with Timer)	The unit will not turn ON by the timer. Power LED blinking.	The unit will turn ON by the timer and run Cooling Operation.
DRY (with Timer)	The unit will not turn ON by the timer. Power LED blinking.	The unit will turn ON by the timer and run Cooling Dry Operation.
Cooling Test Mode	The unit will stop and Power LED blinking.	The unit will operate according to specify Cooling test mode operation parameter.
Heating Test Mode	The unit will operate according to specify Heating test mode operation parameter.	The unit will operate according to specify Heating test mode operation parameter.

# 17.3 Remote Control Button

## 17.3.1 SET Button

- To check remote control transmission code and store the transmission code to EEPROM:
  - Press "Set" button by using pointer.
  - o Press "Timer Set" button until a "beep" sound is heard as confirmation of transmission code changed.
- To limit set temperature range for COOL & DRY, HEAT mode.
  - Press "Set" button by using pointer.
  - Press TEMP increment or decrement button to choose No. 3.
  - Press Timer increment or decrement button to select desired temperature low limit of set temperature for COOL & DRY mode.
  - o Press Timer Set button to confirm low limit selection.
  - Press TEMP increment or decrement button to choose No. 4.
  - Press Timer decrement or increment button to select desired temperature high limit of set temperature for COOL & DRY mode.
  - Press Timer Set button to confirm high limit selection.
  - Press TEMP increment or decrement button to choose No. 5.
  - Press Timer increment or decrement button to select desired temperature low limit of set temperature for HEAT mode.
  - $\circ$   $\;$  Press Timer Set button to confirm low limit selection.
  - Press TEMP increment or decrement button to choose No. 6.
  - Press Timer decrement or increment button to select desired temperature high limit of set temperature for HEAT mode.
  - o Press Timer Set button to confirm high limit selection.
  - LCD returns to original display if remote control does not operate for 30 seconds or press Timer Cancel button.

# 17.3.2 RESET (RC)

- To clear and restore the remote control setting to factory default.
  - Press once to clear the memory.

## 17.3.3 RESET (AC)

To restore the unit's setting to factory default.
 Press once to restore the unit's setting.

## 17.3.4 TIMER ▲


- To change indoor unit indicator's LED intensity.
  - Press continuously for 5 seconds.

## 17.3.5 TIMER ▼

- To change remote control display from Degree Celsius (°C) to Degree Fahrenheit (°F).
  - Press continuously for 10 seconds.


## 17.3.6 Special Setting mode


1 LCD display area:

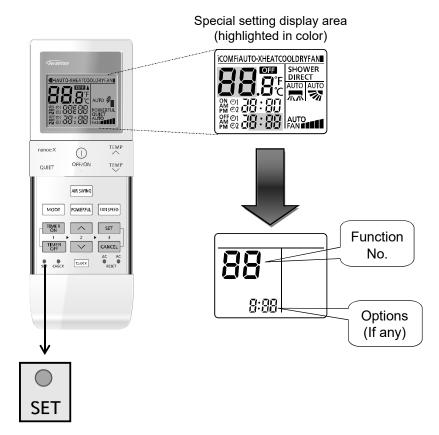

- 2 Cannot enter this special setting mode under the following conditions:
  - 1 Operation ON.
- 2 Under [Real/ON/OFF] time setting mode.
- 3 To enter zone 1 area:

 4

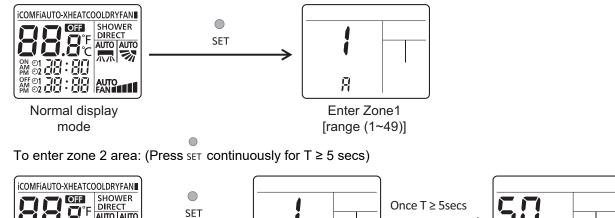



#### 5 Function & Options list:

		Function	0.1		
	No	Name	Options	Remark	
	1	Remote control number selection	A, B, C, D		
	2	Solar radiation sensitivity level adjustment	1, 2, 3, 4, 5		
	3	[iAUTO-X/iAUTO/iCOMF, Cool & Dry] mode set temperature [Low2] selection	16°C ~ [High2]		
	4	[iAUTO-X/iAUTO/iCOMF, Cool & Dry] mode set temperature [High2] selection	[Low2] ~ 30°C		
	5	Heat mode set temperature Low1 selection	16°C ~ [High1]		
Zone 1	6	Heat mode set temperature High1 selection	[Low1] ~ 30°C		
	7	Filter cleaning disable/enable selection	00 / 01		
	8	nanoe-G default ON disable/enable selection	00 / 01		
	9	Dust sensor monitoring & LED disable/enable selection	00 / 01		
	10	Auto restart disable/enable selection	00 / 01		
	11	Dust sensor sensitivity level adjustment	1, 2, 3		
	12 ~ 49	Reserve			
	50	ECO demo ON	None (No display)		
	51	Light sensor check	None (No display)		
	52	nanoe-G / ECO sensor check	None (No display)		
	53	DOA check	None (No display)		
	54	Odor cut control selection [Enable (01) / Disable (00)]	00 / 01		
	55	Frequency tolerance selection [±3Hz (03) / ±7Hz (07)]	03 / 07		
	56	Fixed fan speed selection during heat mode compressor OFF [Enable (01) / Disable (00)]	00/01		
	57	nanoe check	None (No display)		
	58	Heat mode thermo shift adjustment	-3°C ~ 3°C		
	59	Others (Cool & Dry) mode thermo shift adjustment	-3°C ~ 3°C		
	60	Deice start determination judgment temperature switching [Yes (01) / No (00)]	00/01		
	61	Cool mode disable selection [Yes (01) / No (00)]	00/01		
	62	Heat mode disable selection [Yes (01) / No (00)]	00/01		
Zone 2	63	Base pan heater selection [Base pan A (A) / Base pan B (b)]	A/b		
	64	Disable fan speed reduction during cool mode thermo-Off [Yes (01) / No (00)]	00/01		
	65	LED smart OFF selection	00 – Disable / 01 – Enable		
	66	nanoe-g ON/OFF duration selection	01 – Pattern 1 / 02 – Pattern 2 / 03 – Pattern 3 / 04 – Pattern 4		
	67	Operation OFF deice function selection	00 – Disable / 01 – Enable		
	68	Compressor frequency change speed selection	01 – Pattern 1 / 02 – Pattern 2 / 03 – Pattern 3		
	69	Up/Down air swing upper limit restriction selection	00 – Disable 01 – Enable		
	70	Failure diagnosis mode disable	None (No display)		
	71 ~ 99	Reserve			

Note: The functions described in the table may not be applicable to the model and may subject to change without further notice.

# 18. Troubleshooting Guide

# 18.1 Refrigeration Cycle System

In order to diagnose malfunctions, make sure that there are no electrical problems before inspecting the refrigeration cycle. Such problems include insufficient insulation, problem with the power source, malfunction of a compressor and a fan. The normal outlet air temperature and pressure of the refrigeration cycle depends on various conditions, the standard values for them are shown in the table on the right.


	Gas Pressure MPa (kg/cm <sup>2</sup> G)	Outlet air Temperature (°C)
Cooling Mode	0.9 ~ 1.2 (9 ~ 12)	13 ~ 17
Heating Mode	2.0 ~ 2.7 (20 ~ 27)	32 ~ 42

\*Condition: • Indoor fan speed = High

Outdoor temperature 35°C at the cooling

mode and 7°C at the heating mode

Compressor operates at rated frequency

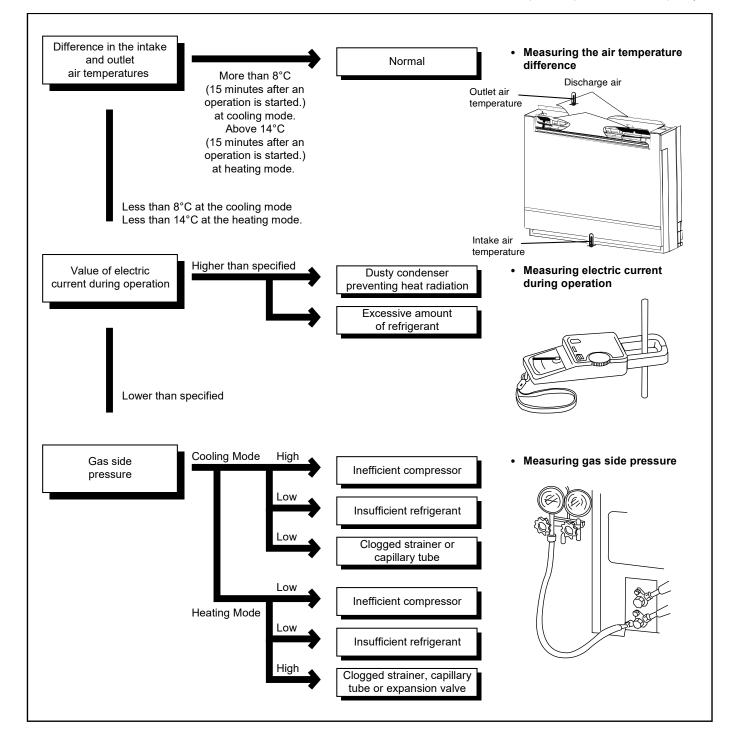

# 18.1.1 Relationship Between the Condition of the Air Conditioner and Pressure and Electric Current

	Cooling Mode			Heating Mode		
Condition of the air conditioner	Low Pressure	High Pressure	Electric current during operation	Low Pressure	High Pressure	Electric current during operation
Insufficient refrigerant (gas leakage)	и	И	ч	K	И	ч
Clogged capillary tube or Strainer	ч	ч	ч	7	7	7
Short circuit in the indoor unit	ч	ы	ч	7	7	Я
Heat radiation deficiency of the outdoor unit	7	7	7	¥	¥	И
Inefficient compression	7	И	ĸ	Я	И	Ľ

• Carry out the measurement of pressure, electric current, and temperature fifteen minutes after an operation is started.

# 18.2 Breakdown Self Diagnosis Function

# 18.2.1 Self Diagnosis Function (Three Digits Alphanumeric Code)

- Once abnormality has occurred during operation, the unit will stop its operation, and Timer LED blinks.
- Although Timer LED goes off when power supply is turned off, if the unit is operated under a breakdown condition, the LED will light up again.
- In operation after breakdown repair, the Timer LED will no more blink. The last error code (abnormality) will be stored in IC memory.

# 18.2.2 To Make a Diagnosis

- 1 Timer LED start to blink and the unit automatically stops the operation.
- 2 Press the CHECK button on the remote controller continuously for 5 seconds.
- 3 "- -" will be displayed on the remote controller display.
   Note: Display only for "- -". (No transmitting
  - signal, no receiving sound and no Power LED blinking.)
- 4 Press the "TIMER" ▲ or ▼ button on the remote controller. The code "H00" (no abnormality) will be displayed and signal will be transmitted to the main unit.
- 5 Every press of the button (up or down) will increase abnormality numbers and transmit abnormality code signal to the main unit.
- 6 When the latest abnormality code on the main unit and code transmitted from the remote controller are matched, power LED will light up for 30 seconds and a beep sound (continuously for 4 seconds) will be heard. If no codes are matched, power LED will light up for 0.5 seconds and no sound will be heard.
- 7 The breakdown diagnosis mode will be canceled unless pressing the CHECK button continuously for 5 seconds or operating the unit for 30 seconds.
- 8 The LED will be off if the unit is turned off or the RESET button on the main unit is pressed.

## 18.2.3 To Display Memorized Error Code (Protective Operation)

- 1 Turn power on.
- 2 Press the CHECK button on the remote controller continuously for 5 seconds.
- 3 "- -" will be displayed on the remote controller display.
   Note: Display only for "- -". (No transmitting signal, no receiving sound and no Power LED blinking.)
- 4 Press the "TIMER" ▲ or ▼ button on the remote controller. The code "H00" (no abnormality) will be displayed and signal will be transmitted to the main unit. The power LED lights up. If no abnormality is stored in the memory, three beeps sound will be heard.
- 5 Every press of the button (up or down) will increase abnormality numbers and transmit abnormality code signal to the main unit.

- 6 When the latest abnormality code on the main unit and code transmitted from the remote controller are matched, power LED will light up for 30 seconds and a beep sound (continuously for 4 seconds) will be heard. If no codes are matched, power LED will light up for 0.5 seconds and no sound will be heard.
- 7 The breakdown diagnosis mode will be canceled unless pressing the CHECK button continuously for 5 seconds or operating the unit for 30 seconds.
- 8 The same diagnosis can be repeated by turning power on again.



#### 18.2.4 To Clear Memorized Error Code after Repair (Protective Operation)

- 1 Turn power on (in standby condition).
- 2 Press the AUTO button for 5 seconds (A beep receiving sound) on the main unit to operate the unit at Forced Cooling Operation modes.
- 3 Press the CHECK button on the remote controller for about 1 second with a pointed object to transmit signal to main unit. A beep sound is heard from main unit and the data is cleared.

## 18.2.5 Temporary Operation (Depending On Breakdown Status)

- 1 Press the AUTO button (A beep receiving sound) on the main unit to operate the unit. (Remote control will become possible.)
- 2 The unit can temporarily be used until repaired.

# 18.3 Error Codes Table

Diagnosis display	Abnormality / Protection control	Abnormality Judgment	Protection Operation	Problem	Check location
H00	No memory of failure	_	Normal operation	_	
H11	Indoor/outdoor abnormal communication	After operation for 1 minute	Indoor fan only operation can start by entering into force cooling operation	Indoor/outdoor communication not establish	<ul> <li>Indoor/outdoor wire terminal</li> <li>Indoor/outdoor PCB</li> <li>Indoor/outdoor connection wire</li> </ul>
H12	Indoor unit capacity unmatched	90s after power supply	_	Total indoor capability more than maximum limit or less than minimum limit, or number of indoor unit less than two	<ul> <li>Indoor/outdoor connection wire</li> <li>Indoor/outdoor PCB</li> <li>Specification and combination table in catalogue</li> </ul>
H14	Indoor intake air temperature sensor abnormality	Continuous for 5s	_	Indoor intake air temperature sensor open or short circuit	Indoor intake air temperature sensor lead wire and connector
H15	Compressor temperature sensor abnormality	Continuous for 5s	_	Compressor temperature sensor open or short circuit	Compressor temperature     sensor lead wire and connector
H16	Outdoor current transformer (CT) abnormality	_	_	Current transformer faulty or compressor faulty	<ul> <li>Outdoor PCB faulty or compressor faulty</li> </ul>
H19	Indoor fan motor merchanism lock	Continuous happen for 7 times	_	Indoor fan motor lock or feedback abnormal	<ul> <li>Fan motor lead wire and connector</li> <li>Fan motor lock or block</li> </ul>
H23	Indoor heat exchanger temperature sensor abnormality	Continuous for 5s		Indoor heat exchanger temperature sensor open or short circuit	<ul> <li>Indoor heat exchanger temperature sensor lead wire and connector</li> </ul>
H24	Indoor heat exchanger temperature sensor 2 abnormality	Continuous for 5s		Indoor heat exchanger temperature sensor 2 open or short circuit	<ul> <li>Indoor heat exchanger temperature sensor 2 lead wire and connector</li> </ul>
H25	Indoor ion device abnormality	Port is ON for 10s during ion device off	—	_	ion device PCB
H27	Outdoor air temperature sensor abnormality	Continuous for 5s	_	Outdoor air temperature sensor open or short circuit	Outdoor air temperature sensor lead wire and connector
H28	Outdoor heat exchanger temperature sensor 1 abnormality	Continuous for 5s	_	Outdoor heat exchanger temperature sensor 1 open or short circuit	<ul> <li>Outdoor heat exchanger temperature sensor 1 lead wire and connector</li> </ul>
H30	Outdoor discharge pipe temperature sensor abnormality	Continuous for 5s	_	Outdoor discharge pipe temperature sensor open or short circuit	Outdoor discharge pipe temperature sensor lead wire and connector
H32	Outdoor heat exchanger temperature sensor 2 abnormality	Continuous for 5s	_	Outdoor heat exchanger temperature sensor 2 open or short circuit	<ul> <li>Outdoor heat exchanger temperature sensor 2 lead wire and connector</li> </ul>
H33	Indoor / outdoor misconnection abnormality	_	_	Indoor and outdoor rated voltage different	Indoor and outdoor units check
H34	Outdoor heat sink temperature sensor abnormality	Continuous for 2s	_	Outdoor heat sink temperature sensor open or short circuit	Outdoor heat sink sensor
H36	Outdoor gas pipe temperature sensor abnormality	Continuous for 5s	Heating protection operation only	Outdoor gas pipe temperature sensor open or short circuit	Outdoor gas pipe temperature sensor lead wire and connector
H37	Outdoor liquid pipe temperature sensor abnormality	Continuous for 5s	Cooling protection operation only	Outdoor liquid pipe temperature sensor open or short circuit	Outdoor liquid pipe temperature sensor lead wire and connector
H38	Indoor/Outdoor mismatch (brand code)	_		Brand code not match	Check indoor unit and outdoor unit
H39	Abnormal indoor operating unit or standby units	3 times happen within 40 minutes	_	Wrong wiring and connecting pipe, expansion valve abnormality, indoor heat exchanger sensor open circuit	<ul> <li>Check indoor/outdoor connection wire and connection pipe</li> <li>Indoor heat exchanger sensor lead wire and connector</li> <li>Expansion valve and lead wire and connector</li> </ul>

Diagnosis display	Abnormality / Protection control	Abnormality Judgment	Protection Operation	Problem	Check location
H41	Abnormal wiring or piping connection	_	_	Wrong wiring and connecting pipe, expansion valve abnormality	<ul> <li>Check indoor/outdoor connection wire and connection pipe</li> <li>Expansion valve and lead wire and connector</li> </ul>
H59	ECONAVI sensor abnormality	Continuous for 25s	_	ECONAVI sensor open or short circuit	<ul> <li>ECONAVI sensor (defective or disconnected)</li> <li>ECONAVI PCB</li> </ul>
H64	Outdoor high pressure sensor abnormality	Continuous for 1 minutes	_	High pressure sensor open circuit during compressor stop	<ul><li>High pressure sensor</li><li>Lead wire and connector</li></ul>
H67	Nanoe abnormality	Nanoe stop for 5 minutes for 3 times	—	Nanoe faulty	<ul><li>PCB</li><li>Nanoe system</li><li>High voltage</li></ul>
H70	Light sensor abnormality	Continuous for 24 hours, 15 days		Light sensor open or short circuit	<ul> <li>Light sensor (defective or disconnect)</li> </ul>
H97	Outdoor fan motor mechanism lock	2 times happen within 30 minutes	—	Outdoor fan motor lock or feedback abnormal	<ul> <li>Outdoor fan motor lead wire and connector</li> <li>Fan motor lock or block</li> </ul>
H98	Indoor high pressure protection	_	_	Indoor high pressure protection (Heating)	<ul> <li>Check indoor heat exchanger</li> <li>Air filter dirty</li> <li>Air circulation short circuit</li> </ul>
H99	Indoor operating unit freeze protection	_	_	Indoor freeze protection (Cooling)	<ul> <li>Check indoor heat exchanger</li> <li>Air filter dirty</li> <li>Air circulation short circuit</li> </ul>
F11	4-way valve switching abnormality	4 times happen within 30 minutes		4-way valve switching abnormal	<ul><li> 4-way valve</li><li> Lead wire and connector</li></ul>
F17	Indoor standby units freezing abnormality	3 times happen within 40 minutes	_	Wrong wiring and connecting pipe, expansion valve leakage, indoor heat exchanger sensor open circuit	<ul> <li>Check indoor/outdoor connection wire and pipe</li> <li>Indoor heat exchanger sensor lead wire and connector</li> <li>Expansion valve lead wire and connector</li> </ul>
F90	Power factor correction (PFC) circuit protection	4 times happen within 10 minutes	_	Power factor correction circuit abnormal	Outdoor PCB faulty
F91	Refrigeration cycle abnormality	2 times happen within 20 minutes		Refrigeration cycle abnormal	<ul> <li>Insufficient refrigerant or valve close</li> </ul>
F93	Compressor abnormal revolution	4 times happen within 20 minutes	_	Compressor abnormal revolution	<ul> <li>Power transistor module faulty or compressor lock</li> </ul>
F94	Compressor discharge overshoot protection	4 times happen within 30 minutes	_	Compressor discharge pressure overshoot	Check refrigeration system
F95	Outdoor cooling high pressure protection	4 times happen within 20 minutes		Cooling high pressure protection	<ul><li>Check refrigeration system</li><li>Outdoor air circuit</li></ul>
F96	Power transistor module overheating protection	4 times happen within 30 minutes	—	Power transistor module overheat	<ul><li>PCB faulty</li><li>Outdoor air circuit (fan motor)</li></ul>
F97	Compressor overheating protection	3 times happen within 30 minutes	_	Compressor overheat	Insufficient refrigerant
F98	Total running current protection	3 times happen within 20 minutes	_	Total current protection	<ul> <li>Check refrigeration system</li> <li>Power source or compressor lock</li> </ul>
F99	Outdoor direct current (DC) peak detection	Continuous happen for 7 times	_	Power transistor module current protection	Power transistor module faulty or compressor lock

# 18.4 Self-diagnosis Method


## 18.4.1 H11 (Indoor/Outdoor Abnormal Communication)

#### **Malfunction Decision Conditions**

• During startup and operation of cooling and heating, the data received from outdoor unit in indoor unit signal transmission is checked whether it is normal.

#### **Malfunction Caused**

- Faulty indoor unit PCB.
- Faulty outdoor unit PCB.
- Indoor unit-outdoor unit signal transmission error due to wiring error.
- Indoor unit-outdoor unit signal transmission error due to breaking of wire in the connection wires between the indoor and outdoor units.

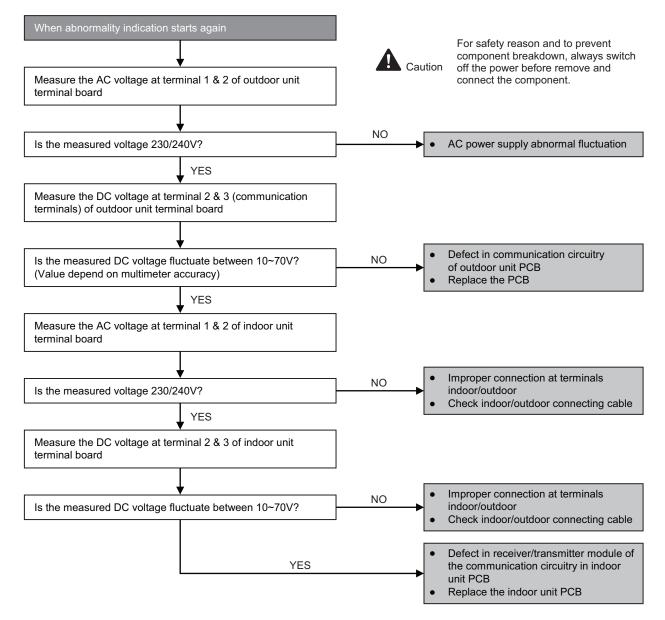


## 18.4.2 H12 (Indoor/Outdoor Capacity Rank Mismatched)

#### **Malfunction Decision Conditions**

• During startup, error code appears when different types of indoor and outdoor units are interconnected.

#### **Malfunction Caused**

- Wrong models interconnected.
- Wrong indoor unit or outdoor unit PCBs mounted.
- Indoor unit or outdoor unit PCBs defective.
- Indoor-outdoor unit signal transmission error due to wrong wiring.
- Indoor-outdoor unit signal transmission error due to breaking of wire 3 in the connection wires between the indoor and outdoor units.

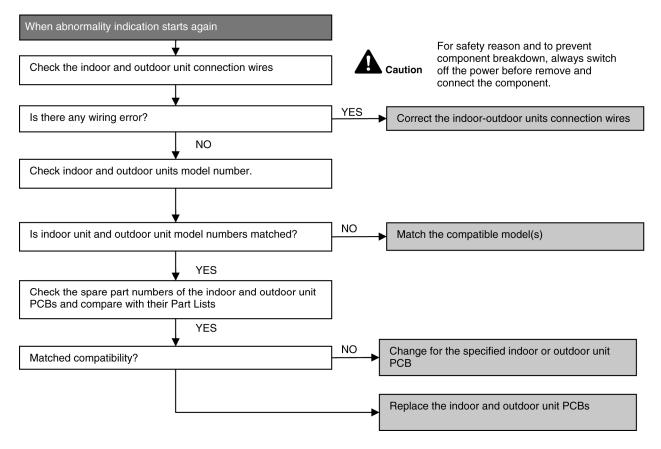

## 18.4.3 H14 (Indoor Intake Air Temperature Sensor Abnormality)

#### **Malfunction Decision Conditions**


• During startup and operation of cooling and heating, the temperatures detected by the indoor intake air temperature sensor are used to determine sensor errors.

#### **Malfunction Caused**

• Faulty connector connection.

Temperature (°C)

- Faulty sensor.
- Faulty PCB.

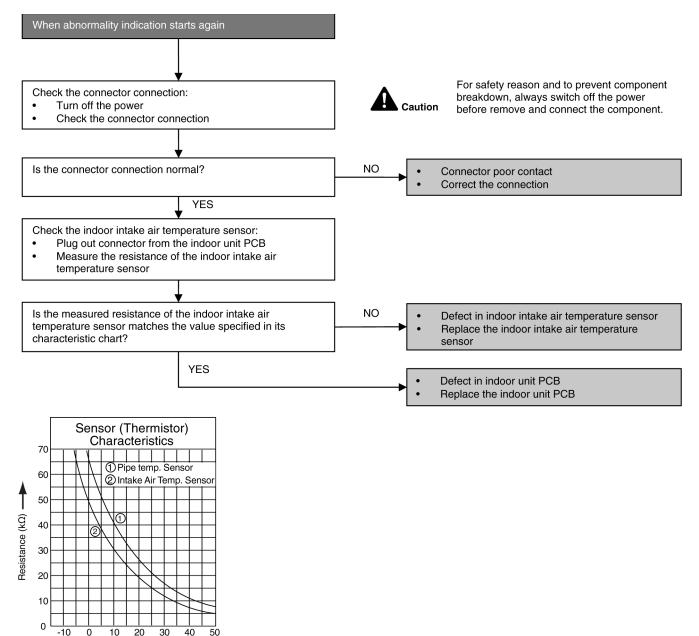


## 18.4.4 H15 (Compressor Temperature Sensor Abnormality)

#### **Malfunction Decision Conditions**

 During startup and operation of cooling and heating, the temperatures detected by the outdoor compressor temperature sensor are used to determine sensor errors.

#### **Malfunction Caused**

- Faulty connector connection.
- Faulty sensor.
- Faulty PCB.

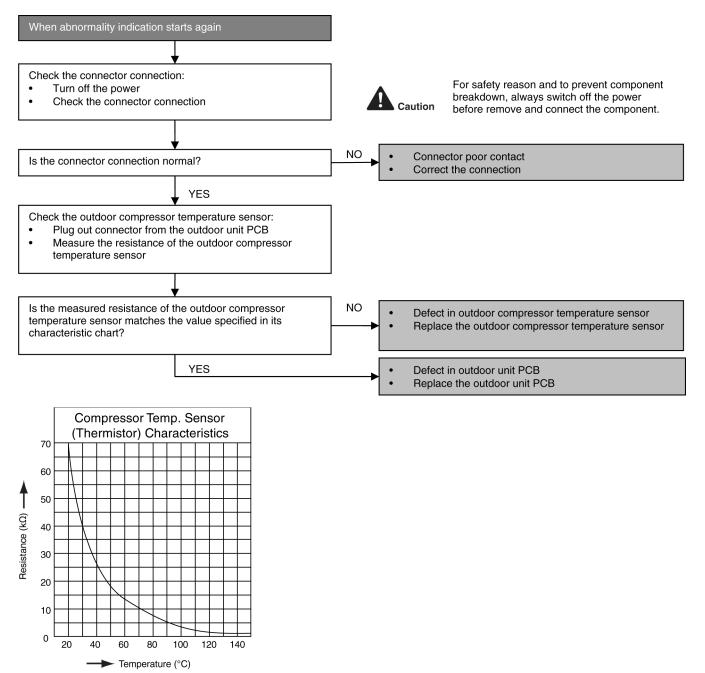


# 18.4.5 H16 (Outdoor Current Transformer)

### **Malfunction Decision Conditions**

• An input current, detected by Current Transformer CT, is below threshold value when the compressor is operating at certain frequency value for 3 minutes.

#### **Malfunction Caused**

- Lack of gas
- Broken CT (current transformer)
- Broken Outdoor PCB

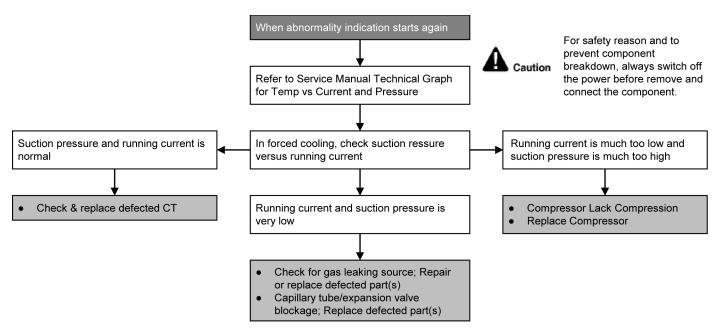


## 18.4.6 H19 (Indoor Fan Motor – DC Motor Mechanism Locked)

#### Malfunction Decision Conditions

 The rotation speed detected by the Hall IC during fan motor operation is used to determine abnormal fan motor (feedback of rotation > 2550 rpm or < 50 rpm)</li>

#### **Malfunction Caused**

- Operation stops due to short circuit inside the fan motor winding.
- Operation stops due to breaking of wire inside the fan motor.
- Operation stops due to breaking of fan motor lead wires.
- Operation stops due to Hall IC malfunction.
- Operation error due to faulty indoor unit PCB.

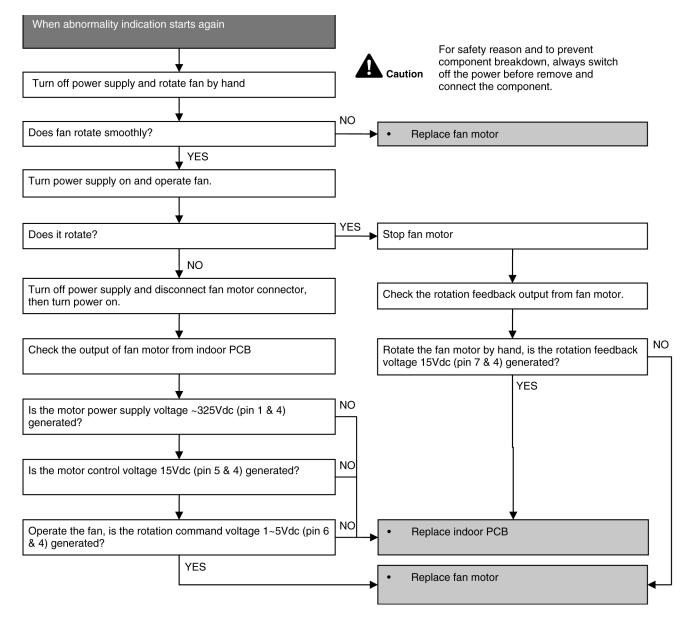


## 18.4.7 H23 (Indoor Pipe Temperature Sensor Abnormality)


#### **Malfunction Decision Conditions**

• During startup and operation of cooling and heating, the temperatures detected by the indoor heat exchanger temperature sensor are used to determine sensor errors.

#### **Malfunction Caused**

- Faulty connector connection.
- Faulty sensor.
- Faulty PCB.

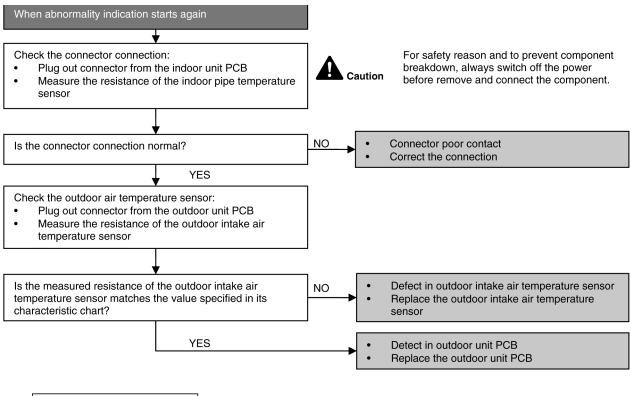

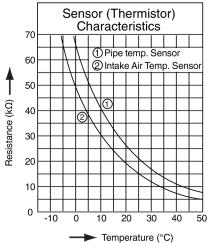


## 18.4.8 H24 (Indoor Pipe Temperature Sensor 2 Abnormality)

#### **Malfunction Decision Conditions**

• During startup and operation of cooling and heating, the temperatures detected by the indoor heat exchanger temperature sensor 2 are used to determine sensor errors.

#### **Malfunction Caused**

- Faulty connector connection.
- Faulty sensor.
- Faulty PCB.

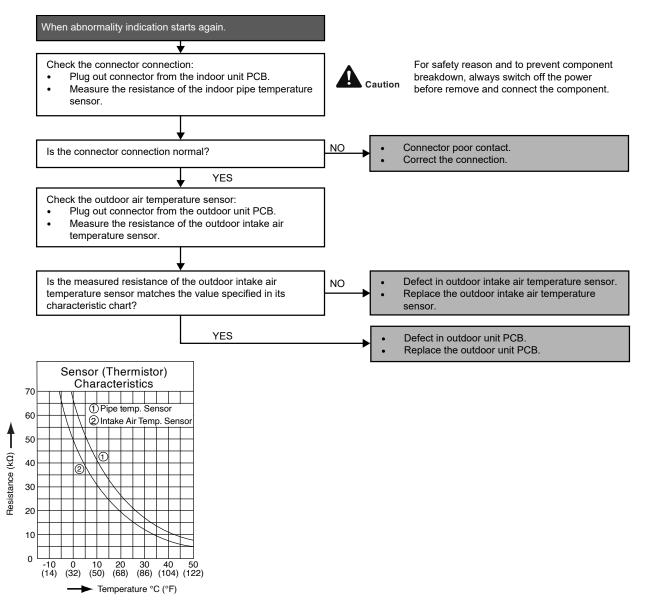


## 18.4.9 H27 (Outdoor Air Temperature Sensor Abnormality)


#### **Malfunction Decision Conditions**

• During startup and operation of cooling and heating, the temperatures detected by the outdoor air temperature sensor are used to determine sensor errors.

#### **Malfunction Caused**

- Faulty connector connection.
- Faulty sensor.
- Faulty PCB.

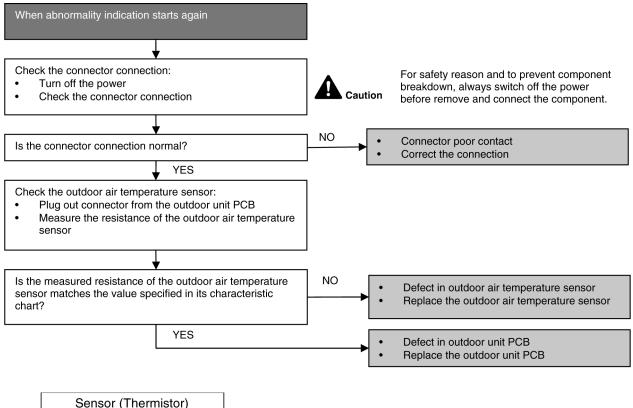

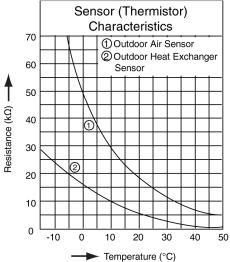


## 18.4.10 H28 (Outdoor Pipe Temperature Sensor Abnormality)

#### **Malfunction Decision Conditions**

• During startup and operation of cooling and heating, the temperatures detected by the outdoor pipe temperature sensor are used to determine sensor errors.

#### **Malfunction Caused**

- Faulty connector connection.
- Faulty sensor.
- Faulty PCB.

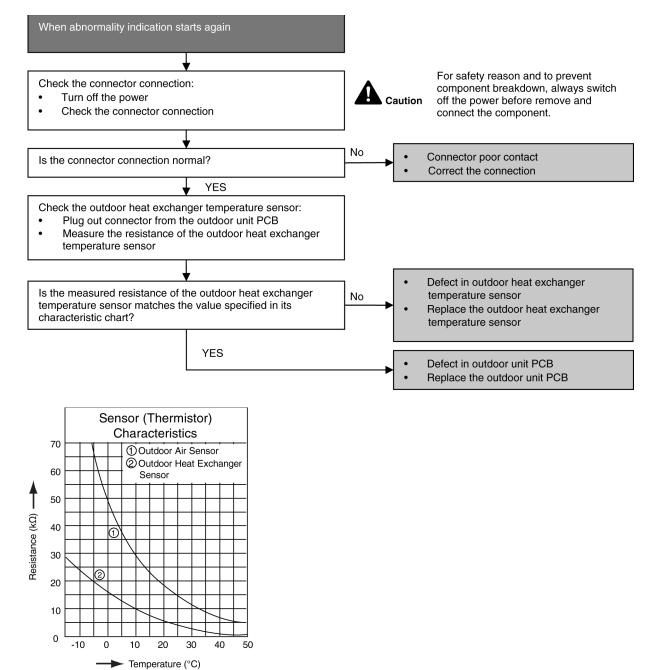


### 18.4.11 H30 (Compressor Discharge Temperature Sensor Abnormality)

#### **Malfunction Decision Conditions**

• During startup and operation of cooling and heating, the temperatures detected by the outdoor discharge pipe temperature sensor are used to determine sensor errors.

#### **Malfunction Caused**

- Faulty connector connection.
- Faulty sensor.
- Faulty PCB.

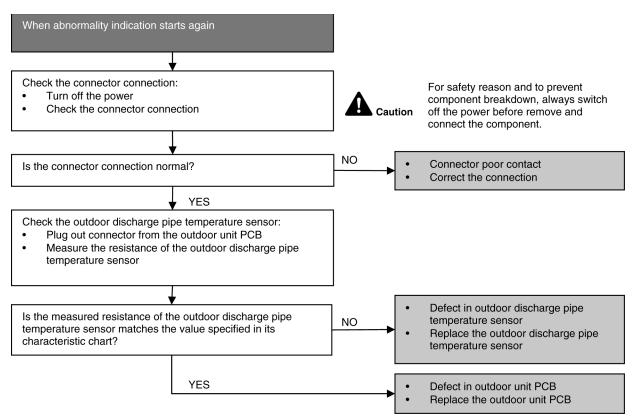


## 18.4.12 H32 (Outdoor Heat Exchanger Temperature Sensor 2 Abnormality)

#### **Malfunction Decision Conditions**

• During startup and operation of cooling and heating, the temperatures detected by the outdoor heat exchanger temperature sensor are used to determine sensor errors.

#### **Malfunction Caused**

- Faulty connector connection.
- Faulty sensor.
- Faulty PCB.

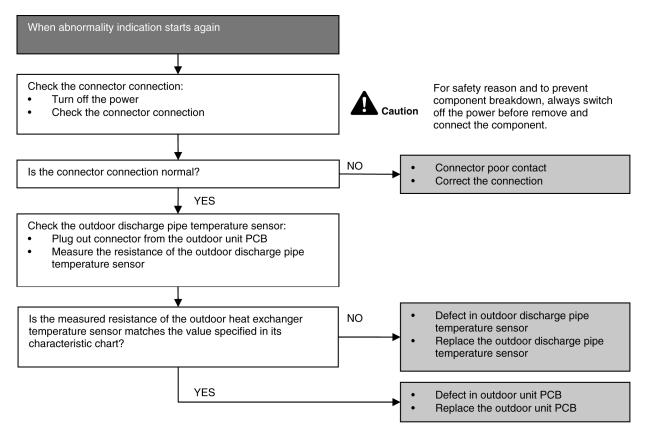


## 18.4.13 H33 (Unspecified Voltage between Indoor and Outdoor)

#### **Malfunction Decision Conditions**

• The supply power is detected for its requirement by the indoor/outdoor transmission.

#### **Malfunction Caused**

- Wrong models interconnected.
- Wrong indoor unit and outdoor unit PCBs used.
- Indoor unit or outdoor unit PCB defective.

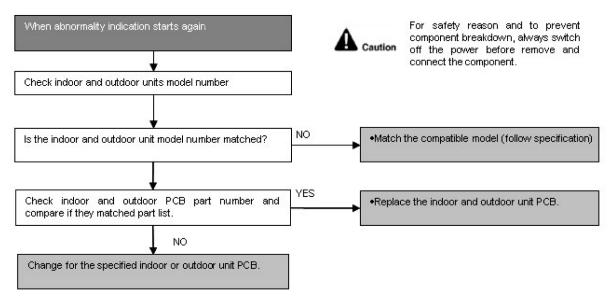


## 18.4.14 H34 (Outdoor Heat Sink Temperature Sensor Abnormality)

#### **Malfunction Decision Conditions**

• During startup and operation of cooling and heating, the temperatures detected by the outdoor heat sink temperature sensor are used to determine sensor errors.

#### **Malfunction Caused**

- Faulty connector connection.
- Faulty sensor.
- Faulty PCB.

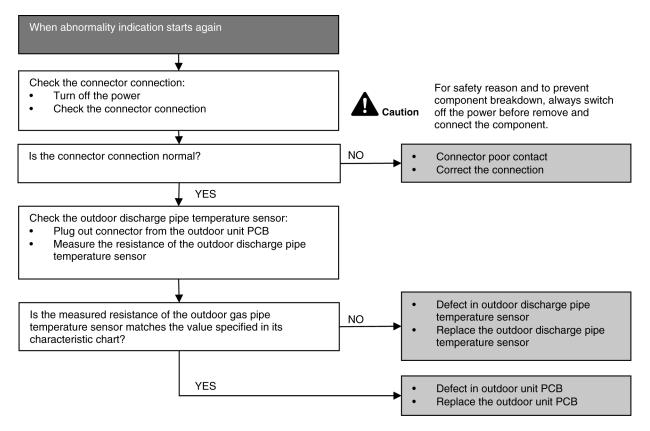


# 18.4.15 H36 (Outdoor Gas Pipe Sensor Abnormality)

#### **Malfunction Decision Conditions**

• During startup and operation of cooling and heating, the temperatures detected by the outdoor gas pipe temperature sensor are used to determine sensor errors.

#### **Malfunction Caused**

- Faulty connector connection.
- Faulty sensor.
- Faulty PCB.

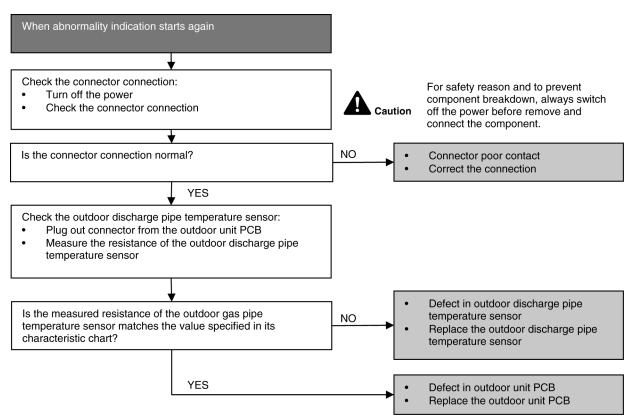


# 18.4.16 H37 (Outdoor Liquid Pipe Temperature Sensor Abnormality)

#### Malfunction Decision Conditions

• During startup and operation of cooling and heating, the temperatures detected by the outdoor liquid pipe temperature sensor are used to determine sensor errors.

#### **Malfunction Caused**

- Faulty connector connection.
- Faulty sensor.
- Faulty PCB.

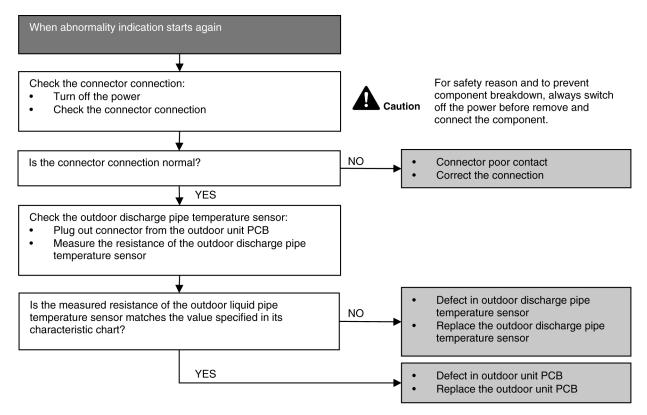


# 18.4.17 H97 (Outdoor Fan Motor – DC Motor Mechanism Locked)

#### **Malfunction Decision Conditions**

• The rotation speed detected by the Hall IC during fan motor operation is used to determine abnormal fan motor.

#### **Malfunction Caused**

- Operation stops due to short circuit inside the fan motor winding.
- Operation stops due to breaking of wire inside the fan motor.
- Operation stops due to breaking of fan motor lead wires.
- Operation stops due to Hall IC malfunction.
- Operation error due to faulty outdoor unit PCB.

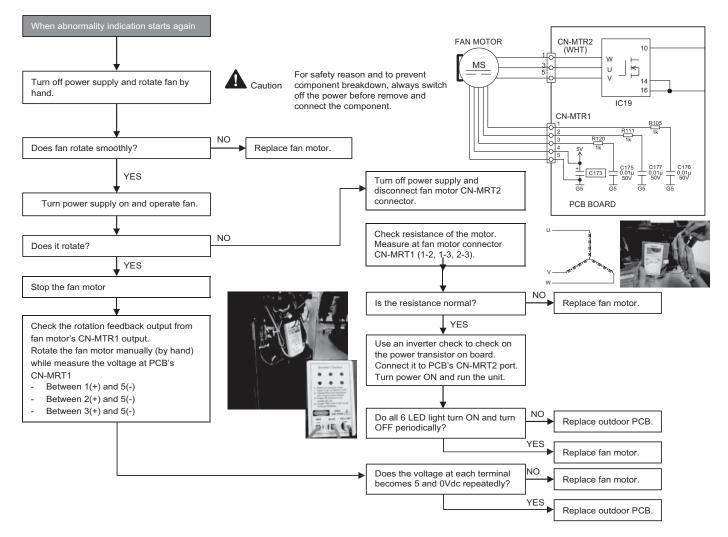


# 18.4.18 H98 (Error Code Stored in Memory and no alarm is triggered / no TIMER LED flashing)

#### **Malfunction Decision Conditions**

- Indoor high pressure is detected when indoor heat exchanger is detecting very high temperature when the unit is
  operating in heating operation.
- Phenomena: unit is stopping and re-starting very often in heating mode

#### **Malfunction Caused**

- Indoor heat exchanger thermistor
- Clogged air filter or heat exchanger
- Over-bent pipe (liquid side)

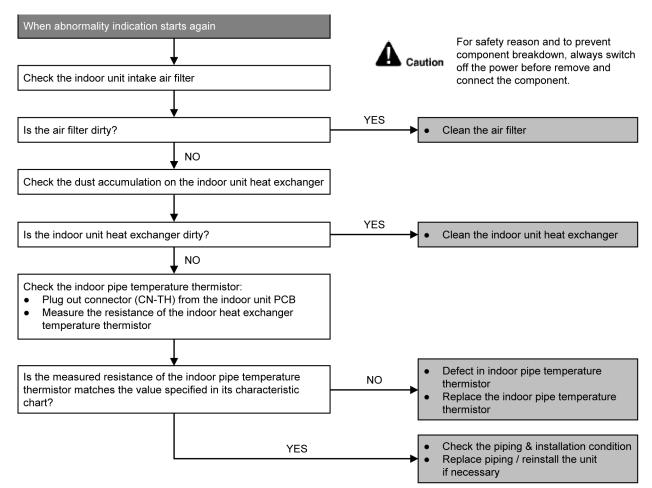

### 18.4.19 H99 (Indoor Freeze Prevention Protection: Cooling or Soft Dry)


#### Error Code will not display (no Timer LED blinking) but store in EEPROM

#### **Malfunction Decision Conditions**

• Freeze prevention control takes place (when indoor pipe temperature is lower than 2°C)

#### **Malfunction Caused**

- Air short circuit at indoor unit
- Clogged indoor unit air filter
- Dust accumulation on the indoor unit heat exchanger
- 2/3 way valve closed
- Faulty indoor unit fan motor
- Refrigerant shortage (refrigerant leakage)
- Clogged expansion valve or strainer
- Faulty indoor pipe temperature sensor
- Faulty indoor unit PCB

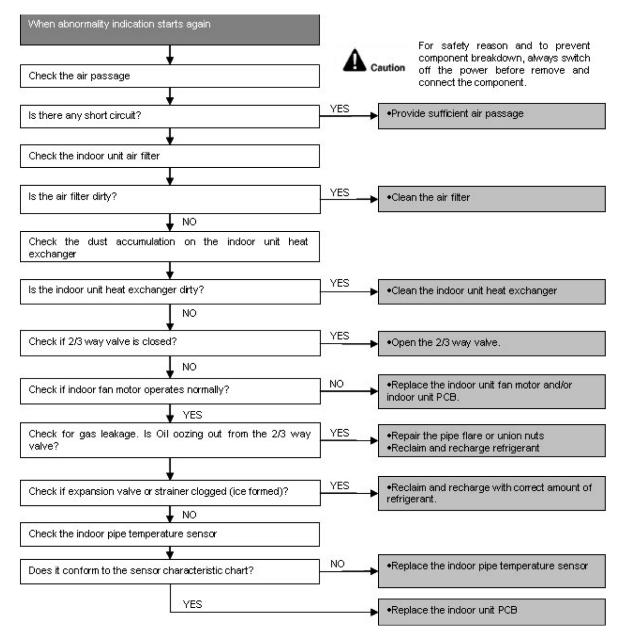

# 18.4.20 F11 (4-way Valve Switching Failure)


#### **Malfunction Decision Conditions**

• When indoor heat exchanger is cold during heating (except deice) or when indoor heat exchanger is hot during cooling and compressor operating, the 4-way valve is detected as malfunction.

#### **Malfunction Caused**

- Indoor heat exchanger (pipe) thermistor
- 4-way valve malfunction

#### Troubleshooting

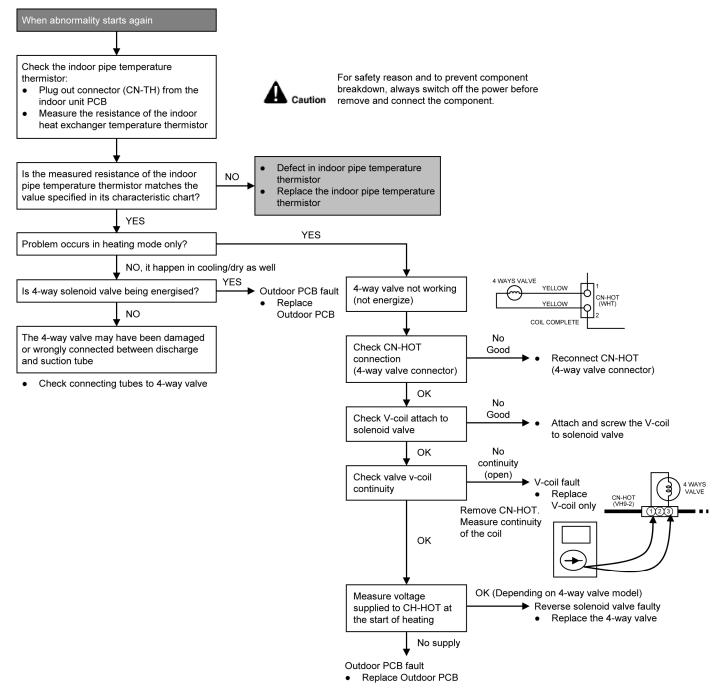

\* Check gas side pipe – for hot gas flow in cooling mode

# 18.4.21 F17 (Indoor Standby Units Freezing Abnormality)

#### **Malfunction Decision Conditions**


 When the different between indoor intake air temperature and indoor pipe temperature is above 10°C or indoor pipe temperature is below -1.0°C.

#### Remark:

When the indoor standby unit is freezing, the outdoor unit transfers F17 error code to the corresponding indoor unit and H39 to other indoor unit(s).

#### **Malfunction Caused**

- Wrong wiring connection
- Faulty sensor
- Faulty expansion valve

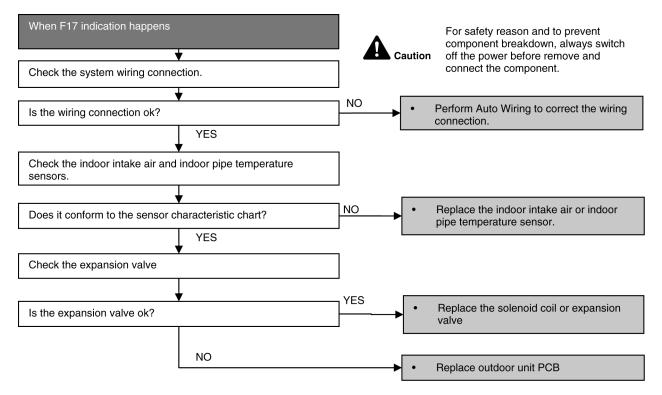


### 18.4.22 F90 (Power Factor Correction Protection)

### **Malfunction Decision Conditions**

- To maintain DC voltage level supply to power transistor.
- To detect high DC voltage level after rectification.

### **Malfunction Caused**

- During startup and operation of cooling and heating, when Power Factor Correction (PFC) protection circuitry at the outdoor unit main PCB senses abnormal DC voltage level for power transistors.
- When DC voltage detected is LOW, transistor switching will turn ON by controller to push-up the DC level.
- When DC voltage detected is HIGH (391Vdc 425Vdc), active LOW signal will send by the controller to turn OFF relay RY-C.

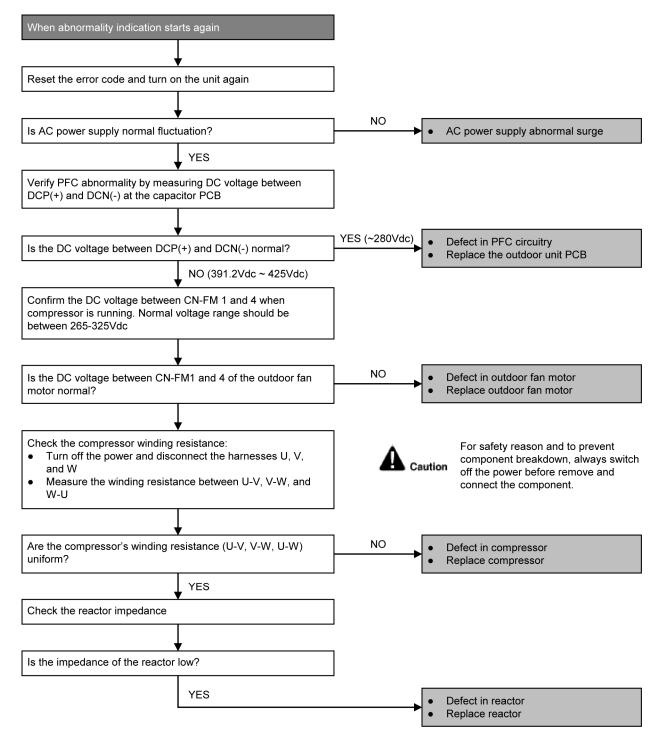


# 18.4.23 F91 (Refrigeration Cycle Abnormality)

#### **Malfunction Decision Conditions**

• The input current is low while the compressor is running at higher than the setting frequency.

#### **Malfunction Caused**

- Lack of gas.
- 3-way valve close.

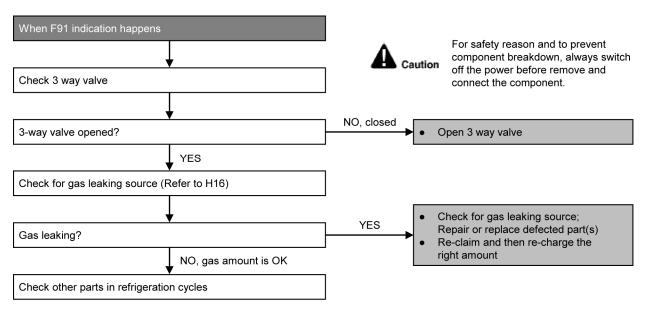


# 18.4.24 F93 (Compressor Rotation Failure)

#### **Malfunction Decision Conditions**

• A compressor rotation failure is detected by checking the compressor running condition through the position detection circuit.

#### **Malfunction Caused**

- Compressor terminal disconnect
- Faulty Outdoor PCB
- Faulty compressor

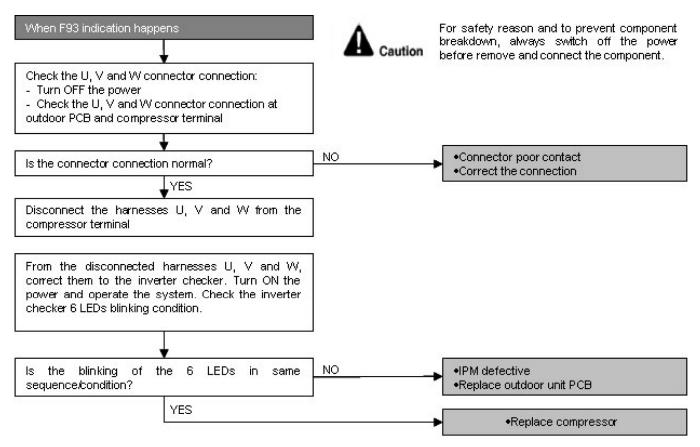


# 18.4.25 F95 (Outdoor High Pressure Protection: Cooling or Soft Dry)

#### **Malfunction Decision Conditions**

• During operation of cooling or soft dry, when outdoor unit heat exchanger high temperature data is detected by the outdoor unit heat exchanger thermistor.

#### **Malfunction Caused**

- Outdoor heat exchanger temperature rise due to short-circuit of hot discharge air flow.
- Outdoor heat exchanger temperature rise due to defective of outdoor fan motor.
- Outdoor heat exchange temperature rise due to defective outdoor heat exchanger thermistor.
- Outdoor heat exchanger temperature rise due to defective of outdoor unit PCB.

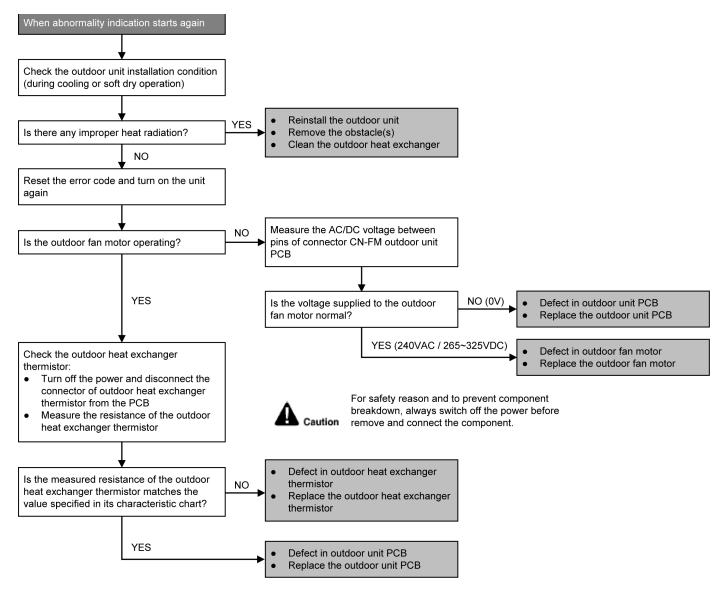

# 18.4.26 F96 (IPM Overheating)

### **Malfunction Decision Conditions**

 During operating of cooling and heating, when IPM temperature data (100°C) is detected by the IPM temperature sensor.

Multi Models only

- o Compressor Overheating: During operation of cooling and heating, when the compressor OL is activated.
- Heat Sink Overheating: During operation of cooling and heating, when heat sink temperature data (90°C) is detected by the heat sink temperature sensor.

#### **Malfunction Caused**

- IPM overheats due to short circuit of hot discharge air flow.
- IPM overheats due to defective of outdoor fan motor.
- IPM overheats due to defective of internal circuitry of IPM.
- IPM overheats due to defective IPM temperature sensor. *Multi Models Only* 
  - Compressor OL connector poor contact.
  - Compressor OL faulty.

When F96 indication happens Check the outdoor unit installation condition (during cooling or soft-dry operation	Caution	For safety reason and to prevent component breakdown, always switch off the power before remove and connect the component.
Is there any improper heat radiation?	YES	<ul> <li>Reinstall the outdoor unit</li> <li>Remove the obstacle(s)</li> <li>Clean the outdoor heat exchanger</li> </ul>
NO	_	
Is outdoor fan motor operating?	NO	<ul> <li>Replace the outdoor fan motor.</li> </ul>
YES		
		<ul> <li>Defect in IPM</li> <li>Replace the outdoor unit PCB</li> </ul>


# 18.4.27 F97 (Compressor Overheating)

#### **Malfunction Decision Conditions**

• During operation of cooling and heating, when compressor tank temperature data (112°C) is detected by the compressor tank temperature sensor.

#### **Malfunction Caused**

- Faulty compressor tank temperature sensor
- 2/3 way valve closed
- Refrigerant shortage (refrigerant leakage)
- Faulty outdoor unit PCB
- Faulty compressor

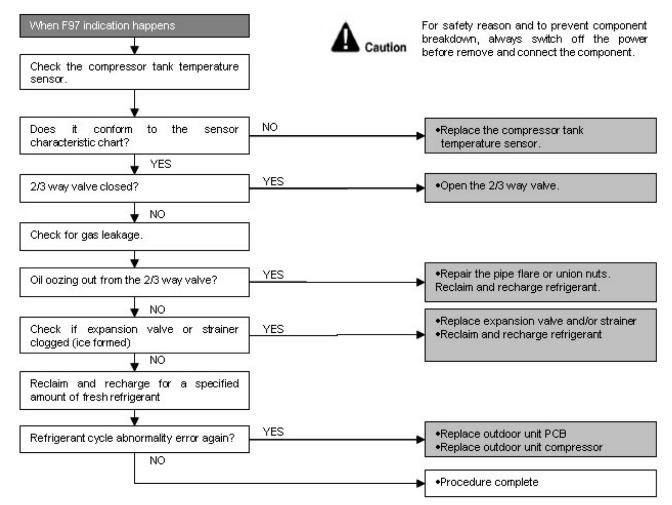


# 18.4.28 F98 (Input Over Current Detection)

### **Malfunction Decision Conditions**

• During operation of cooling and heating, when an input over-current (X value in Total Running Current Control) is detected by checking the input current value being detected by current transformer (CT) with the compressor running.

#### **Malfunction Caused**

- Excessive refrigerant.
- Faulty outdoor unit PCB.

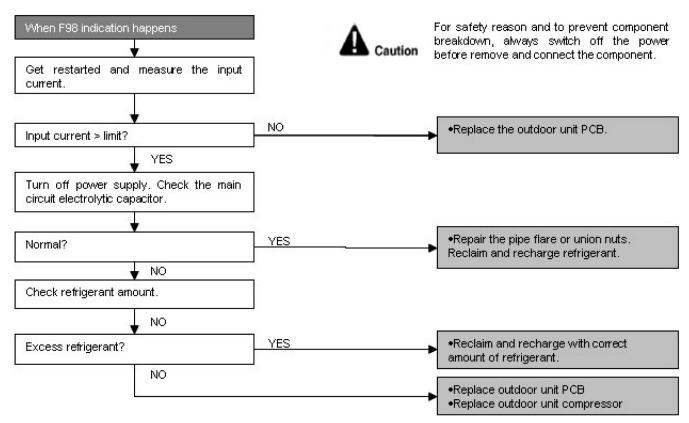


# 18.4.29 F99 (DC Peak Detection)

#### **Malfunction Decision Conditions**


During startup and operation of cooling and heating, when inverter DC peak data is received by the outdoor internal DC Peak sensing circuitry.


#### **Malfunction Caused**

- DC current peak due to compressor failure.
- DC current peak due to defective power transistor(s).
- DC current peak due to defective outdoor unit PCB.
- DC current peak due to short circuit.

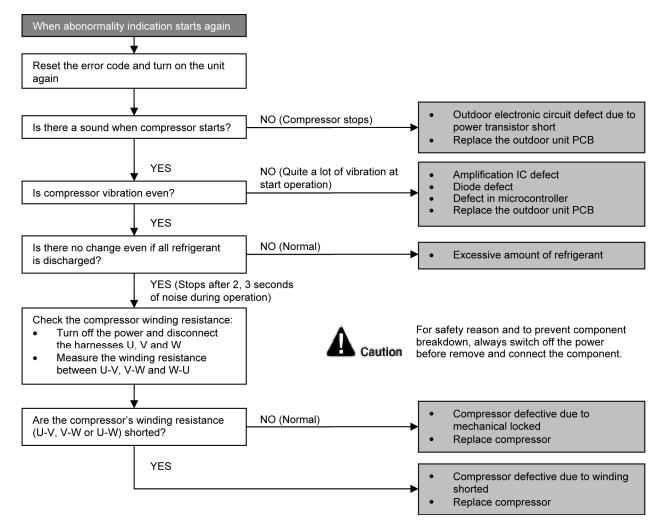


# 19. Disassembly and Assembly Instructions

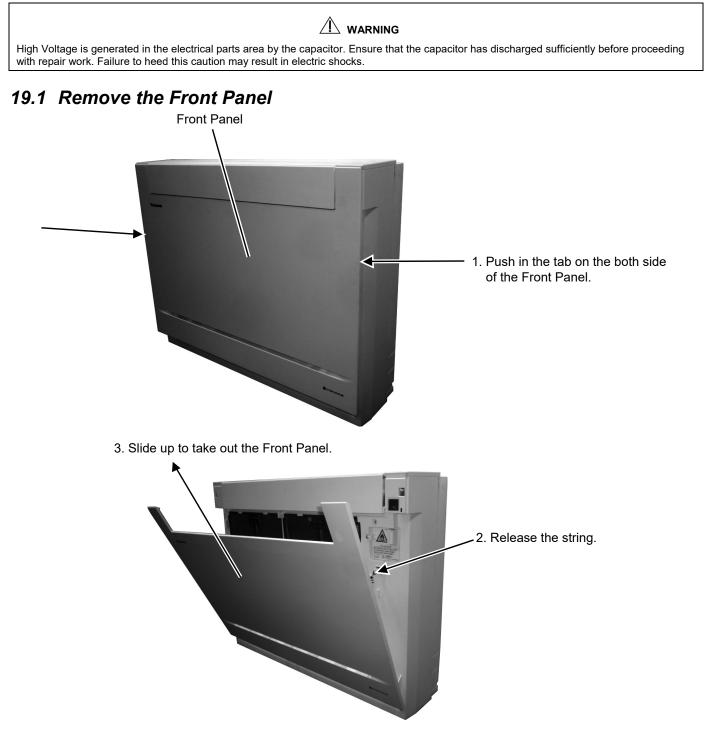


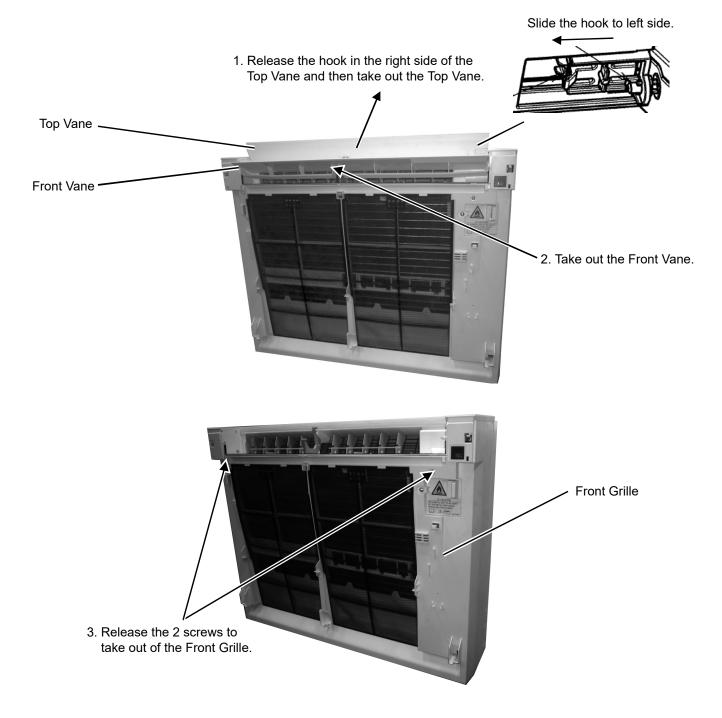


# 19.3 Remove the Discharge Grille.

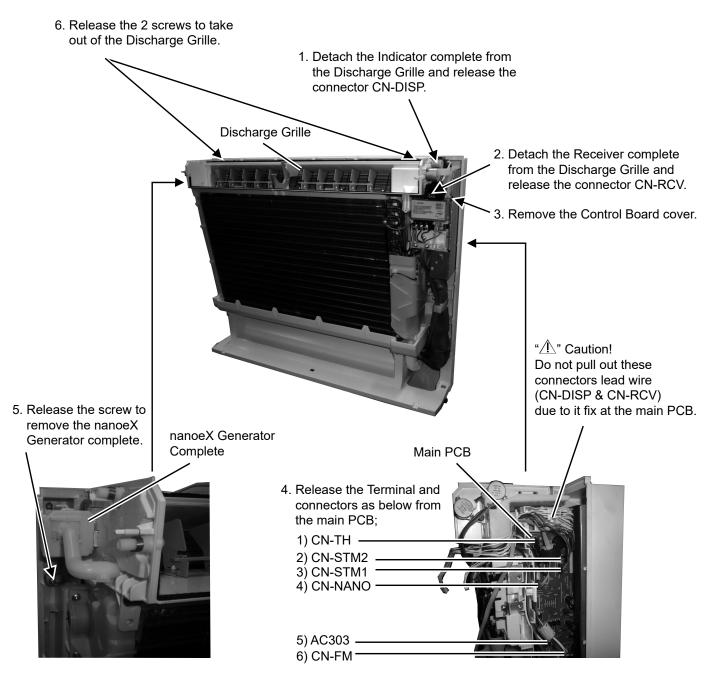


# 19.4 Remove the Control Board

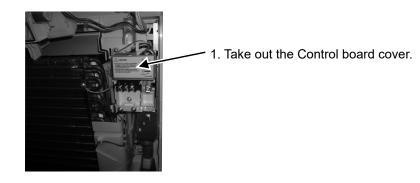

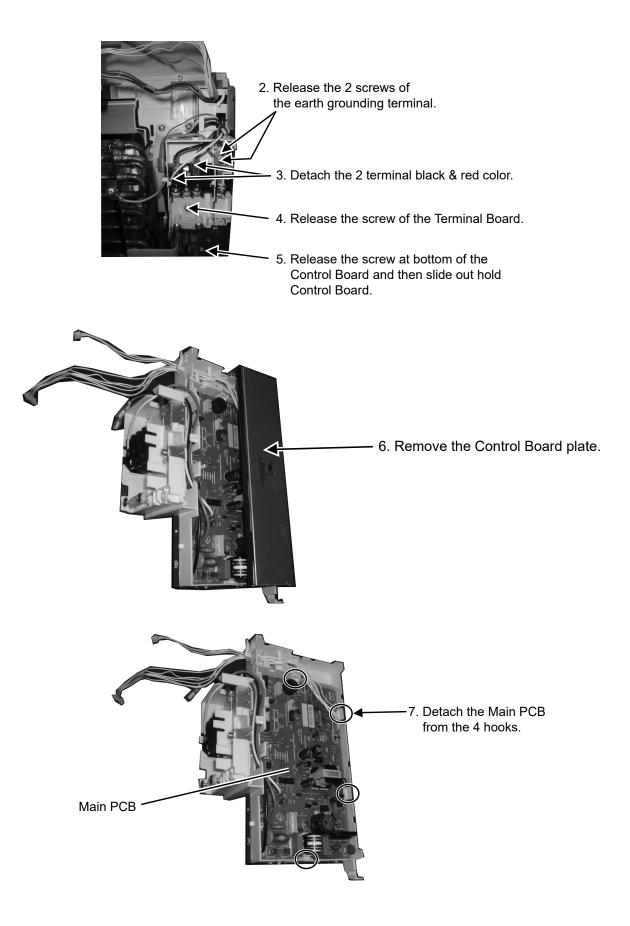



# 19.5 Remove the Drain Pan

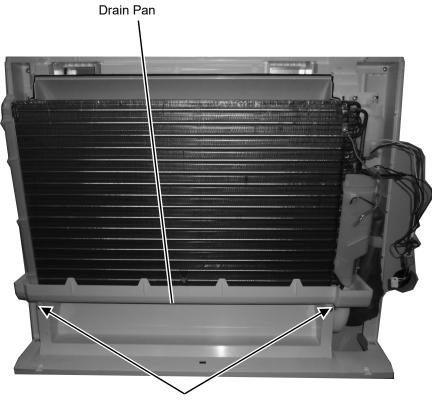

1. Release the 2 screws to remove the Drain Pan.

# 19.6 Remove the Cross Flow Fan and Fan Motor

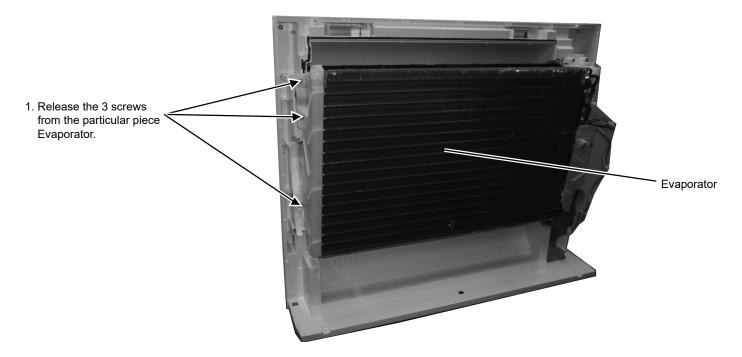

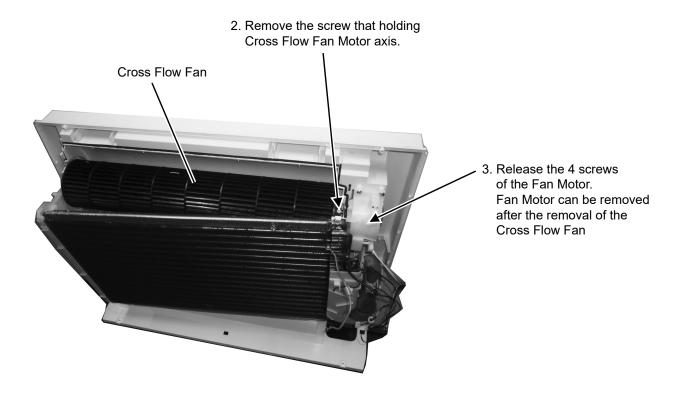


# 19.7 Outdoor Electronic Controller Removal Procedure


# 19.7.1 CU-Z25UBEA

 $\triangle$  Caution! When handling electronic controller, be careful of electrostatic discharge.


1 Remove the 5 screws of the Top Panel.

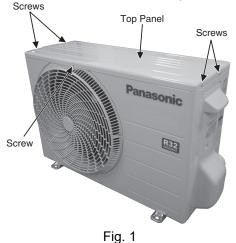


2 Remove the 6 screws of the Front Panel.

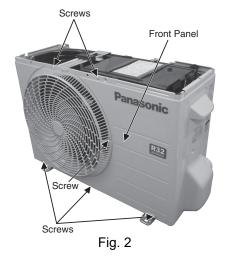

- 3 Remove the screw of the Terminal Board Cover.
- 4 Remove the Top Cover of the Control Board by 4 hooks.

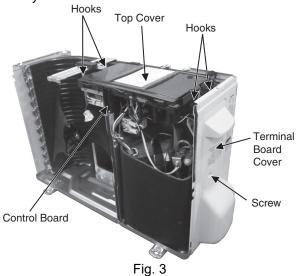

5 Remove the Control Board as follows:

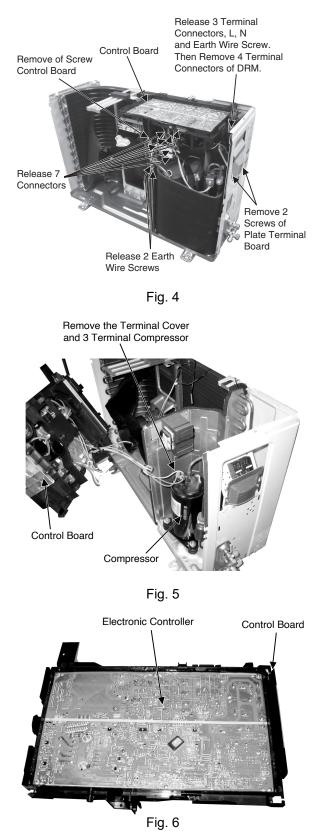

# 19.7.2 CU-Z35UBEA

 $\triangle$  Caution! When handling electronic controller, be careful of electrostatic discharge.

1 Remove the 5 screws of the Top Panel.



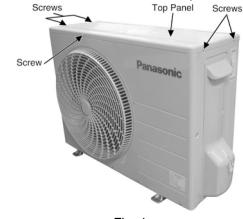



Fig. 1

2 Remove the 8 screws of the Front Panel.

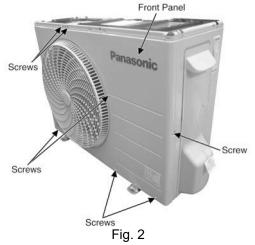


- 3 Remove the screw of the Terminal Board Cover.
- 4 Remove the Top Cover of the Control Board by 4 hooks.

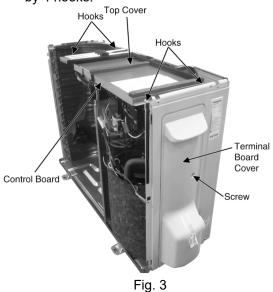

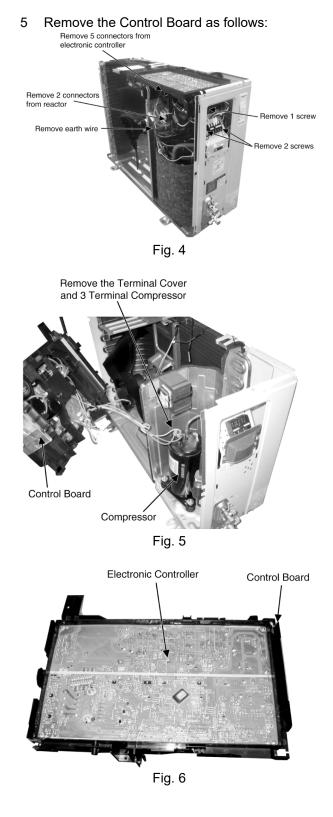


#### 19.7.3 **CU-Z50UBEA**

- $\triangle$  Caution! When handling electronic controller, be careful of electrostatic discharge.
- Remove the 5 screws of the Top Panel. 1

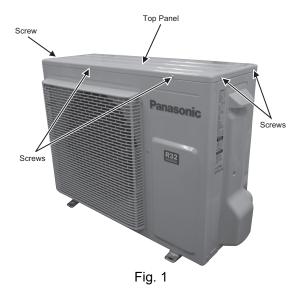

2 Remove the 8 screws of the Front Panel.

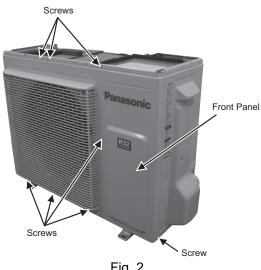



- Remove the screw of the Terminal Board Cover. 3
- 4 Remove the Top Cover of the Electronic Controller by 4 hooks.



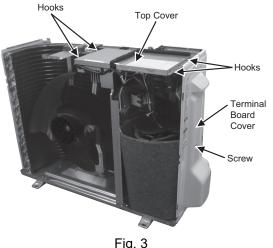


Fig. 3

5 Remove 2 screws for the plate of Terminal Board Cover.

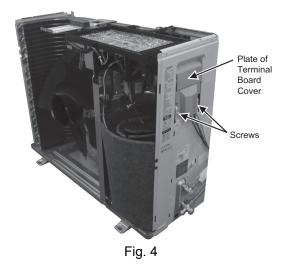

Remove the Control Board. 6

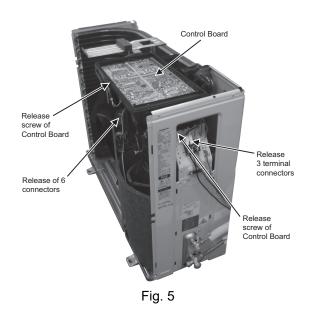

7. Remove the 4 screws of the Electronic Controller.

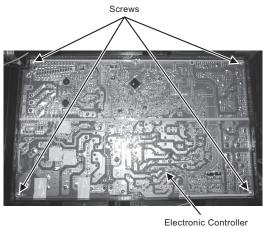


Fig. 6

# 20. Technical Data

Technical data provided are based on the air conditioner running under free frequency.

# 20.1 Cool Mode Performance Data

Unit setting: Standard piping length, Hi Fan, Cool mode at 16°C Voltage: 230V

# 20.1.1 CS-Z25UFEAW CU-Z25UBEA

Indoo	r (°C)										Outd	oor DE	8 (°C)									
DB	WB	-10		-7		0		5			16			25			35					
υв	VVD	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP
27	19.0	3028	2427	333	2905	2378	362	3033	2435	328	2981	2404	312	3081	2446	300	2793	2312	397	2500	2271	520
21	22.0	3291	1958	362	3330	1965	322	3317	1971	339	3316	1962	323	3479	2057	289	3173	1941	394	2779	1752	518
23	15.7	2545	2287	312	2495	2262	406	2708	2441	345	2539	2322	374	2706	2334	302	2584	2322	404	2142	2065	514
23	18.4	2332	1663	202	2797	1871	397	2978	2003	353	2978	1984	323	2990	1925	296	2849	1907	402	2341	1628	514
20	13.3	1956	1948	160	2032	1930	245	2079	1975	252	2090	1986	220	2172	2102	226	2292	2179	404	1996	1896	514
20	15.8	2403	1745	354	2487	1664	444	2723	1940	351	2541	1826	371	2853	1983	310	2541	1797	401	2262	1668	518

(Dry bulb value based on 46% humidity)

# 20.1.2 CS-Z35UFEAW CU-Z35UBEA

Indoc	or (°C)		Outdoor DB (°C)																			
DB			-10		-7		0		5		16			25			35					
	WB	TC	SHC	IP	TC	SHC	IP	тс	SHC	IP	TC	SHC	IP	тс	SHC	IP	TC	SHC	IP	TC	SHC	IP
27	19.0	4239	3138	550	4067	3074	598	4246	3148	543	4174	3109	515	4314	3163	496	3910	2989	657	3500	2937	860
21	22.0	4608	2532	599	4662	2541	533	4644	2549	560	4642	2537	535	4870	2660	479	4443	2510	651	3890	2265	857
23	15.7	3563	2957	517	3493	2925	671	3792	3156	571	3554	3003	618	3789	3018	500	3618	3002	668	2998	2670	851
23	18.4	3264	2150	334	3916	2420	657	4170	2589	584	4169	2565	534	4186	2489	490	3988	2466	665	3277	2106	850
20	13.3	2739	2519	265	2817	2627	405	2794	2688	416	2899	2702	363	3041	2718	374	3209	2818	669	2791	2581	850
20	15.8	3364	2257	585	3482	2152	734	3813	2508	580	3557	2361	614	3994	2564	512	3557	2324	664	3167	2157	856

(Dry bulb value based on 46% humidity)

## 20.1.3 CS-Z50UFEAW CU-Z50UBEA

Indoo	r (°C)										Outd	oor DE	8 (°C)									
DB	WB	-10			-7			0		5			16			25			35			
DB	VVD	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP
27	19.0	6055	3849	889	5809	3771	967	6066	3861	878	5962	3813	833	6162	3880	802	5586	3667	1061	5000	3602	1390
21	22.0	6583	3106	969	6660	3117	861	6635	3127	906	6631	3111	864	6957	3262	774	6346	3079	1053	5557	2779	1385
23	15.7	5090	3627	835	4989	3588	1085	5416	3871	923	5078	3684	999	5413	3702	808	5169	3682	1079	4283	3275	1375
23	18.4	4663	2637	539	5594	2968	1062	5957	3176	944	5956	3147	863	5980	3054	792	5698	3025	1074	4682	2583	1373
20	13.3	3913	3090	429	4024	3222	655	3991	3297	673	4141	3315	587	4345	3334	605	4584	3457	1081	3987	3166	1373
20	15.8	4806	2768	946	4975	2640	1186	5447	3077	937	5081	2896	993	5706	3145	828	5082	2851	1073	4524	2646	1383

(Dry bulb value based on 46% humidity)

TC - Total Cooling Capacity (W)

SHC - Sensible Heat Capacity (W)

IP - Input Power (W)

# 20.2 Heat Mode Performance Data

Unit setting: Standard piping length, Hi Fan, Heat mode at 30°C Voltage: 230V

# 20.2.1 CS-Z25UFEAW CU-Z25UBEA

Indoor (°C)		Outdoor WB (°C)									
DB	-1	5	-7		:	2	7	7	12		
DB	TC	IP	TC	IP	TC	IP	TC	IP	TC	IP	
24	2130	1067	2717	1165	3445	1216	3102	762	3007	613	
20	2260	1060	2880	1180	3620	1190	3400	760	3555	737	
16	2456	1030	2754	1117	3573	1102	3565	763	3835	760	

# 20.2.2 CS-Z35UFEAW CU-Z35UBEA

Indoor (°C)		Outdoor WB (°C)									
DB	-1	15	-	7	:	2	-	7	12		
DB	тс	IP	TC	IP	TC	IP	TC	IP	TC	IP	
24	2554	1188	3180	1392	4140	1584	3923	1083	3803	871	
20	2710	1180	3370	1410	4350	1550	4300	1080	4496	1047	
16	2945	1146	3223	1335	4294	1435	4509	1084	4851	1080	

# 20.2.3 CS-Z50UFEAW CU-Z50UBEA

Indoor (°C)		Outdoor WB (°C)								
DB	-1	15	-	7	2	2	7	7	12	
DB	TC	IP	TC	IP	TC	IP	TC	IP	TC	IP
24	3534	1792	4746	2034	5586	2361	5292	1555	5130	1250
20	3750	1780	5030	2060	5870	2300	5800	1550	6065	1502
16	4076	1729	4810	1950	5794	2129	6081	1556	6543	1550

TC - Total Heating Capacity (W) IP - Input Power (W)


# 21. Service Data

Service data provided are based on the air conditioner running under rated frequency during forced cooling / forced heating mode.

# 21.1 Cool Mode Outdoor Air Temperature Characteristic


#### Condition

- Indoor room temperature: 27°C Dry Bulb/19°C Wet Bulb
- Unit setting: Standard piping length, forced cooling at 16°C, Hi fan
- Compressor frequency: Rated for cooling operation
- Piping length: 5m
- Voltage: 230V

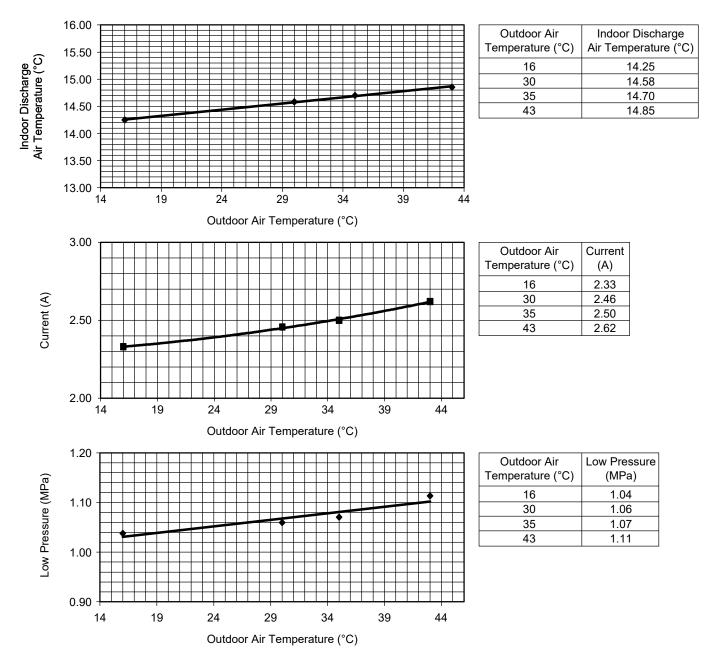

### 21.1.1 CS-Z25UFEAW CU-Z25UBEA

#### 21.1.2 CS-Z35UFEAW CU-Z35UBEA

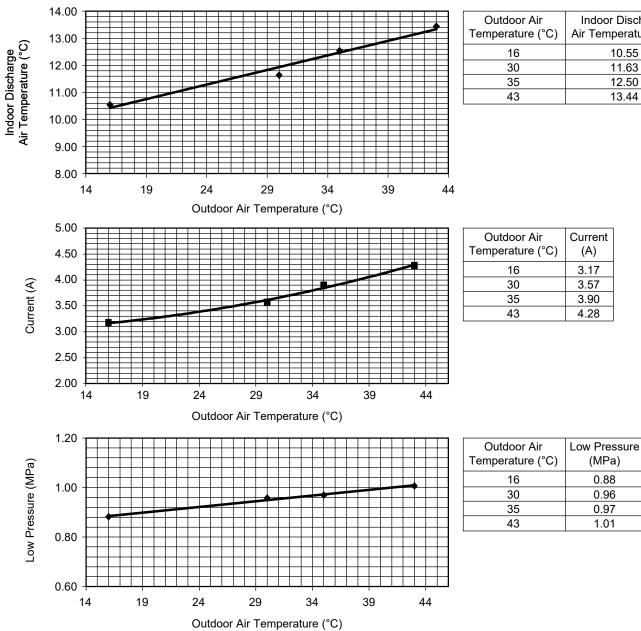

Outdoor Air Temperature (°C)	Indoor Discharge Air Temperature (°C)
16	10.55
30	11.63
35	12.50
43	13.44

(A)

3.17

3.57

3.90

4.28

(MPa)


0.88

0.96 0.97

1.01

136

### 21.1.3 CS-Z50UFEAW CU-Z50UBEA

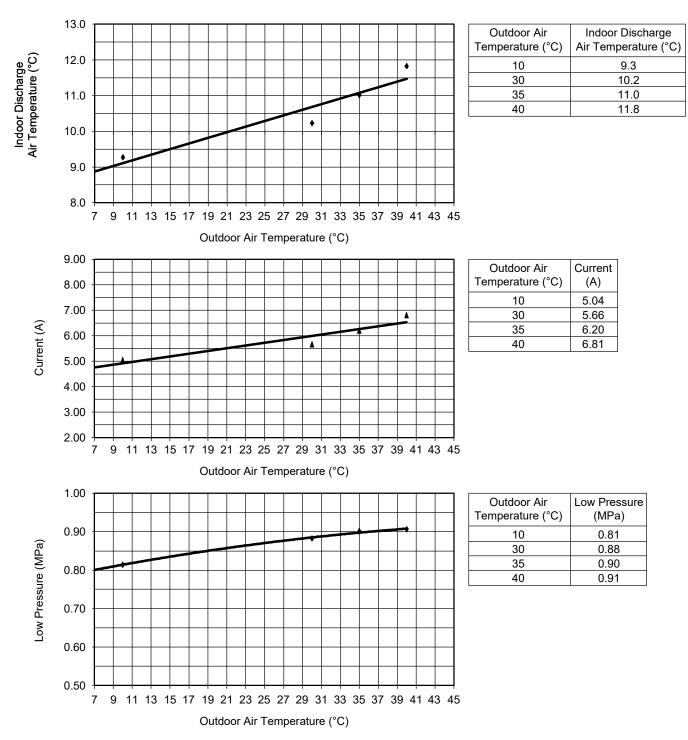


# 21.2 Heat Mode Outdoor Air Temperature Characteristic


#### Condition

- Indoor room temperature: 20°C Dry Bulb/ -°C Wet Bulb
- Unit setting: Standard piping length, forced heating at 30°C, Hi fan
- Compressor frequency: Rated for Heating operation
- Piping length: 5m
- Voltage: 230V


# 21.2.1 CS-Z25UFEAW CU-Z25UBEA

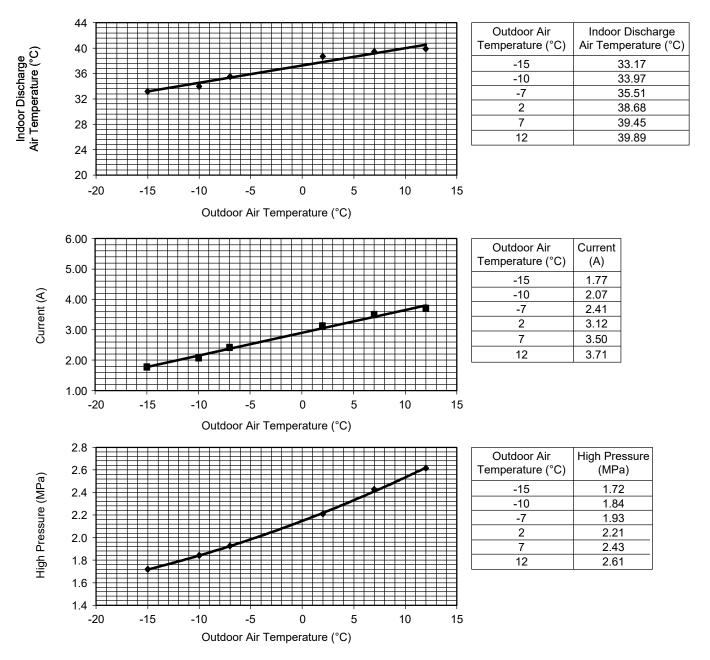

# 21.2.2 CS-Z35UFEAW CU-Z35UBEA

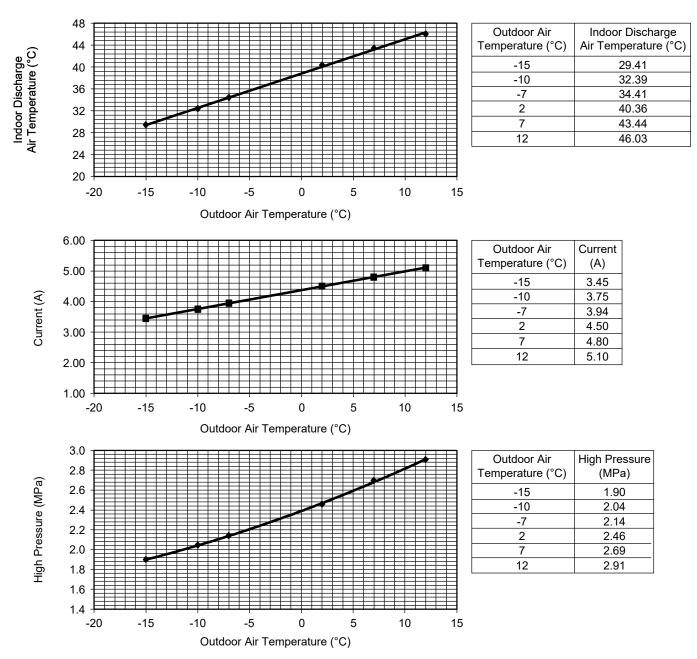


### 21.2.3 CS-Z50UFEAW CU-Z50UBEA

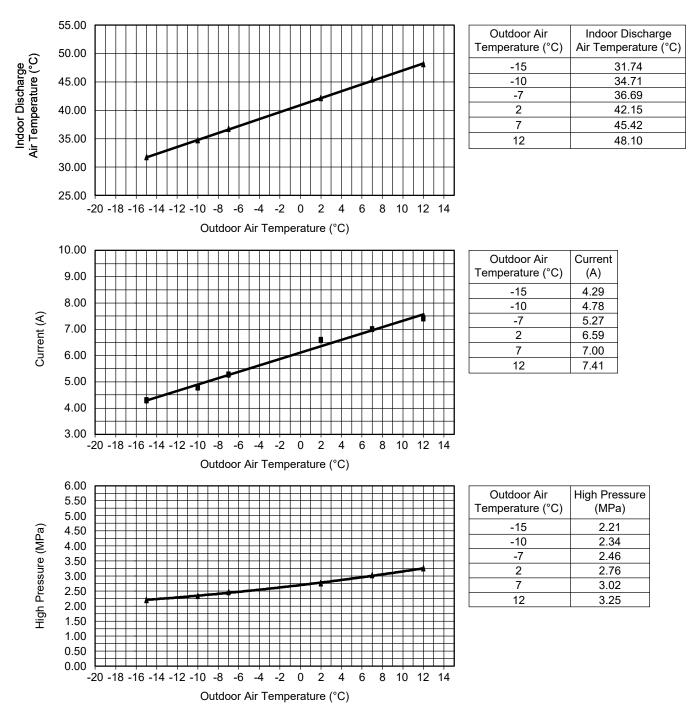


# 21.3 Piping Length Correction Factor

The characteristic of the unit has to be corrected in accordance with the piping length.


# 21.3.1 CS-Z25UFEAW CU-Z25UBEA

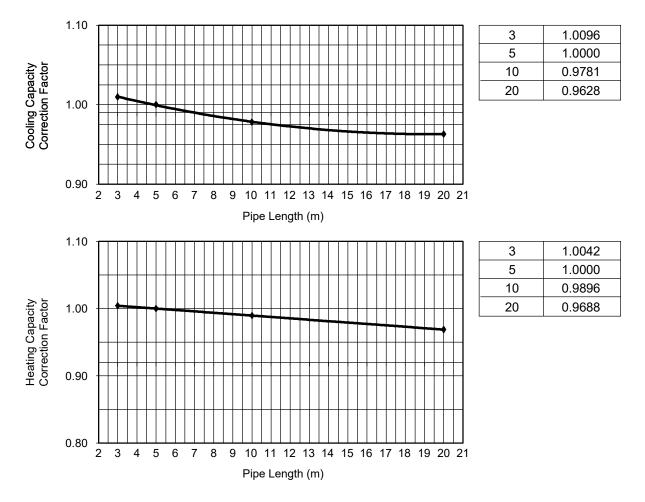

# 21.3.2 CS-Z35UFEAW CU-Z35UBEA

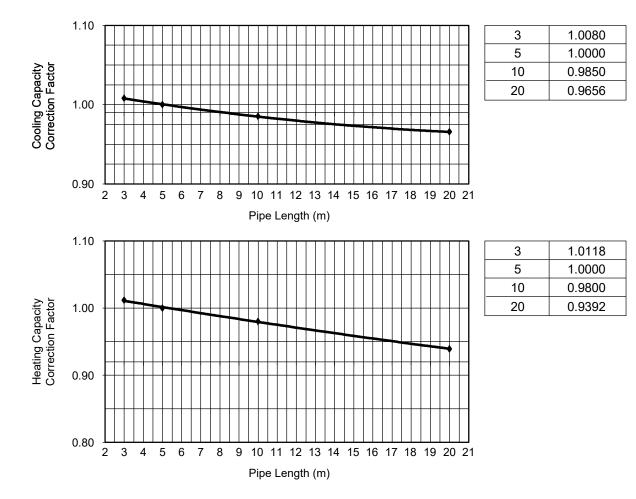


# 21.3.3 CS-Z50UFEAW CU-Z50UBEA

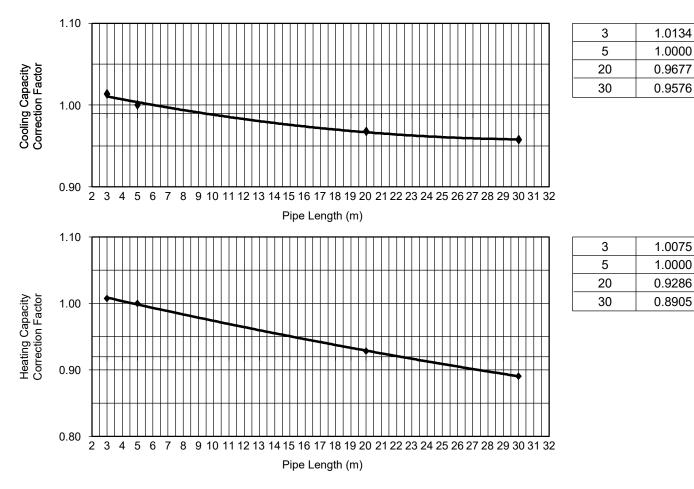

Note: The graphs show the factor after added right amount of additional refrigerant. Maximum piping length for Z25/35UBEA is 20 meters. Maximum piping length for Z50UBEA is 30 meters.

# 22. Exploded View and Replacement Parts List

# 22.1 Indoor Unit

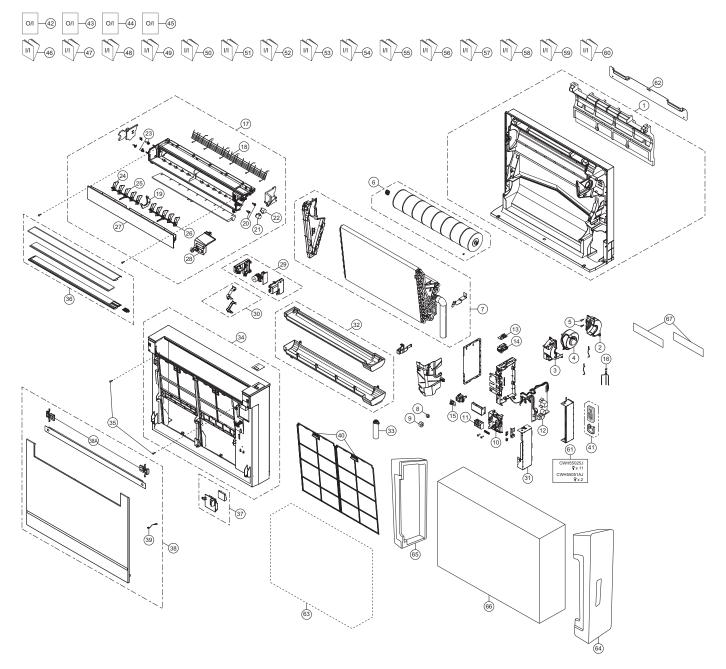

Note:

The above exploded view is for the purpose of parts disassembly and replacement. The non-numbered parts are not kept as standard service parts.

SAFETY	REF. NO.	PART NAME & DESCRIPTION	QTY	CS-Z25UFEAW	CS-Z35UFEAW	REMARK
	1	CHASSIS-COMPLETE	1	ACXD50C01620	$\leftarrow$	
	2	FAN MOTOR BRACKET (BOTTOM)	1	ACXD54-01370	←	
	3	FAN MOTOR BRACKET (TOP)	1	ACXD54-01380	←	
$\wedge$	4	FAN MOTOR	1	L6CBYYYL0253	←	0
	5	SCREW-BRACKET FAN MOTOR	2	XTN4+12CFJ	←	
	6	CROSS-FLOW FAN-COMPLETE	1	ACXH02C00850	←	
	7	EVAPORATER COMPLETE	1	ACXB30C17950	←	
	8	FLARE NUT (LIQUID)	1	CWT251048	<del>~</del>	
	9	FLARE NUT (GAS)	1	CWT251049	$\leftarrow$	
	10	PARTICULAR PIECE - TERMINAL	1	ACXD93-15770	<del>~</del>	
	11	TERMINAL BOARD-COMPLETE	1	ACXA28C05290	<del>~</del>	
	12	ELECTRONIC CONTROLLER - MAIN	1	ACXA73C41790	ACXA73C41800	0
A	13	ELECTRONIC CONTROLLER - INDICATOR	1	ACXA73-19200	<del>~</del>	0
	14	INDICATOR HOLDER	1	ACXD93-10910	←	
À	15	ELECTRONIC CONTROLLER - RECEIVER	1	ACXA73-19210	←	0
	16	SENSOR-CO. (PIPING AND SUCTION TEMP)	1	ACXA50C13490	←	
	17	DISCHARGE GRILLE-COMPLETE	1	ACXE20C02960	←	
	18	WIRE NET	1	ACXD04-00980A	←	
	19	FULCRUM	1	ACXH62-00470	←	
	20	SHAFT	2	ACXH63-01090	←	
Â	21	AIR SWING MOTOR (FRONT)	1	CWA981264	←	0
$\wedge$	22	AIR SWING MOTOR (TOP)	1	CWA981299	←	0
	23	SHAFT	2	ACXH63-01340	←	
	24	VERTICAL VANE	8	ACXE24-02100	←	
	25	VERTICAL VANE	2	ACXE24-02110	←	
	26	CONNECTING BAR	2	ACXE26-01530	←	
	27	HORIZONTAL VANE	1	ACXE24-02070	←	
	28	PARTICULAR PIECE	1	ACXD93-16690	←	
$\wedge$	29	GENERATOR COMPLETE	1	ACXH94C00580	←	0
	30	DUCT-COMPLETE	1	ACXD22C00190	←	
	31	CONTROL BOARD COVER-COMPLETE	1	ACXH13C05030	←	
	32	DRAIN PAN-COMPLETE	1	ACXH40C00700	←	
	33	FLEXIBLE PIPE	1	ACXH85-02890	←	
	34	FRONT GRILLE-COMPLETE	1	ACXE10C06700	←	
	35	SELF TAPPING SCREW-FRONT GRILLE	2	XTT4+16CFJ	←	
	36	VANE-COMPLETE	1	ACXE24C02790	$\rightarrow$	
	37	GRILLE DOOR-COMPLETE	1	ACXE14C00960	<del>~</del>	
	38	INTAKE GRILLE-COMPLETE	1	ACXE22C02330	←	
	38A	LOCK-INTAKE GRILLE	2	ACXD93-10630	<del>~</del>	
	39	STRING-COMPLETE	1	ACXH84C00190	<del>~</del>	
	40	AIR FILTER	2	ACXD00-01370	<b>—</b>	
	41	REMOTE CONTROL COMPLETE	1	ACXA75C13500	<del>~</del>	0
	42	OPERATING INSTRUCTION	1	ACXF55-19350	<b>—</b>	
	43	OPERATING INSTRUCTION	1	ACXF55-19360	<b>←</b>	
	44	OPERATING INSTRUCTION	1	ACXF55-19370	<b>←</b>	
	45	OPERATING INSTRUCTION	1	ACXF55-20140	<b>←</b>	
	46	INSTALLATION INSTRUCTION	1	ACXF60-28280	<i>←</i>	1

SAFETY	REF. NO.	PART NAME & DESCRIPTION	QTY	CS-Z25UFEAW	CS-Z35UFEAW	REMARK
	47	INSTALLATION INSTRUCTION	1	ACXF60-28290	←	
	48	INSTALLATION INSTRUCTION	1	ACXF60-28300	←	
	49	INSTALLATION INSTRUCTION	1	ACXF60-28310	←	
	50	INSTALLATION INSTRUCTION	1	ACXF60-28320	←	
	51	INSTALLATION INSTRUCTION	1	ACXF60-28330	←	
	52	INSTALLATION INSTRUCTION	1	ACXF60-28340	←	
	53	INSTALLATION INSTRUCTION	1	ACXF60-28350	←	
	54	INSTALLATION INSTRUCTION	1	ACXF60-28360	←	
	55	INSTALLATION INSTRUCTION	1	ACXF60-28370	←	
	56	INSTALLATION INSTRUCTION	1	ACXF60-28380	←	
	57	INSTALLATION INSTRUCTION	1	ACXF60-28390	←	
	58	INSTALLATION INSTRUCTION	1	ACXF60-28400	←	
	59	INSTALLATION INSTRUCTION	1	ACXF60-28410	←	
	60	INSTALLATION INSTRUCTION	1	ACXF60-28420	←	
	61	ACCESSORY-COMPLETE	1	ACXH82C06370	←	
	62	INSTALLING HOLDER	1	CWH361122	←	
	63	BAG	1	ACXG86-03890	←	
	64	SHOCK ABSORBER (R)	1	ACXG70-09890	←	
	65	SHOCK ABSORBER (L)	1	ACXG70-09900	←	
	66	C.C. CASE	1	ACXG50-45330	ACXG50-45340	
	67	MODEL LABEL	2	-	ACXF85-13392	

(Note)

- All parts are supplied from PAPAMY, Malaysia (Vendor Code: 00029488).
- "O" marked parts are recommended to be kept in stock.

SAFETY	REF. NO.	PART NAME & DESCRIPTION	QTY	CS-Z50UFEAW	REMARK
	1	CHASSIS-COMPLETE	1	ACXD50C01620	
	2	FAN MOTOR BRACKET (BOTTOM)	1	ACXD54-01370	
	3	FAN MOTOR BRACKET (TOP)	1	ACXD54-01380	
$\wedge$	4	FAN MOTOR	1	L6CBYYYL0253	0
	5	SCREW-BRACKET FAN MOTOR	2	XTN4+12CFJ	
	6	CROSS-FLOW FAN-COMPLETE	1	ACXH02C00850	
	7	EVAPORATER COMPLETE	1	ACXB30C17150	
	8	FLARE NUT (LIQUID)	1	CWT251048	
	9	FLARE NUT (GAS)	1	CWT251032	
	10	PARTICULAR PIECE - TERMINAL	1	ACXD93-15770	
$\wedge$	11	TERMINAL BOARD-COMPLETE	1	ACXA28C05290	
$\wedge$	12	ELECTRONIC CONTROLLER - MAIN	1	ACXA73C41810	0
$\wedge$	13	ELECTRONIC CONTROLLER - INDICATOR	1	ACXA73-19200	0
	14	INDICATOR HOLDER	1	ACXD93-10910	
$\wedge$	15	ELECTRONIC CONTROLLER - RECEIVER	1	ACXA73-19210	0
	16	SENSOR-CO. (PIPING AND SUCTION TEMP)	1	ACXA50C13490	
	17	DISCHARGE GRILLE-COMPLETE	1	ACXE20C02960	
	18	WIRE NET	1	ACXD04-00980A	
	19	FULCRUM	1	ACXH62-00470	
	20	SHAFT	2	ACXH63-01090	
$\wedge$	21	AIR SWING MOTOR (FRONT)	1	CWA981264	0
A	22	AIR SWING MOTOR (TOP)	1	CWA981299	0
	23	SHAFT	2	ACXH63-01340	
	24	VERTICAL VANE	8	ACXE24-02100	
	25	VERTICAL VANE	2	ACXE24-02110	
	26	CONNECTING BAR	2	ACXE26-01530	
	27	HORIZONTAL VANE	1	ACXE24-02070	
	28	PARTICULAR PIECE	1	ACXD93-16690	
Â	29	GENERATOR COMPLETE	1	ACXH94C00580	0
	30	DUCT-COMPLETE	1	ACXD22C00190	
	31	CONTROL BOARD COVER-COMPLETE	1	ACXH13C05030	
	32	DRAIN PAN-COMPLETE	1	ACXH40C00700	
	33	FLEXIBLE PIPE	1	ACXH85-02890	
	34	FRONT GRILLE-COMPLETE	1	ACXE10C06700	
	35	SELF TAPPING SCREW-FRONT GRILLE	2	XTT4+16CFJ	
	36	VANE-COMPLETE	1	ACXE24C02790	
	37	GRILLE DOOR-COMPLETE	1	ACXE14C00960	
	38	INTAKE GRILLE-COMPLETE	1	ACXE22C02330	
	38A	LOCK-INTAKE GRILLE	2	ACXD93-10630	
	39	STRING-COMPLETE	1	ACXH84C00190	
	40	AIR FILTER	2	ACXD00-01370	
	41	REMOTE CONTROL COMPLETE	1	ACXA75C13500	0
	42	OPERATING INSTRUCTION	1	ACXF55-19350	
	43	OPERATING INSTRUCTION	1	ACXF55-19360	
	44	OPERATING INSTRUCTION	1	ACXF55-19370	
	45	OPERATING INSTRUCTION	1	ACXF55-20140	
	46	INSTALLATION INSTRUCTION	1	ACXF60-28280	

SAFETY	REF. NO.	PART NAME & DESCRIPTION	QTY	CS-Z50UFEAW	REMARK
	47	INSTALLATION INSTRUCTION	1	ACXF60-28290	
	48	INSTALLATION INSTRUCTION	1	ACXF60-28300	
	49	INSTALLATION INSTRUCTION	1	ACXF60-28310	
	50	INSTALLATION INSTRUCTION	1	ACXF60-28320	
	51	INSTALLATION INSTRUCTION	1	ACXF60-28330	
	52	INSTALLATION INSTRUCTION	1	ACXF60-28340	
	53	INSTALLATION INSTRUCTION	1	ACXF60-28350	
	54	INSTALLATION INSTRUCTION	1	ACXF60-28360	
	55	INSTALLATION INSTRUCTION	1	ACXF60-28370	
	56	INSTALLATION INSTRUCTION	1	ACXF60-28380	
	57	INSTALLATION INSTRUCTION	1	ACXF60-28390	
	58	INSTALLATION INSTRUCTION	1	ACXF60-28400	
	59	INSTALLATION INSTRUCTION	1	ACXF60-28410	
	60	INSTALLATION INSTRUCTION	1	ACXF60-28420	
	61	ACCESSORY-COMPLETE	1	ACXH82C06370	
	62	INSTALLING HOLDER	1	CWH361122	
	63	BAG	1	ACXG86-03890	
	64	SHOCK ABSORBER (R)	1	ACXG70-09890	
	65	SHOCK ABSORBER (L)	1	ACXG70-09900	
	66	C.C. CASE	1	ACXG50-45350	
	67	MODEL LABEL	2	-	


(Note)

• All parts are supplied from PAPAMY, Malaysia (Vendor Code: 00029488).

• "O" marked parts are recommended to be kept in stock.

# 22.2 Outdoor Unit

### 22.2.1 CU-Z25UBEA

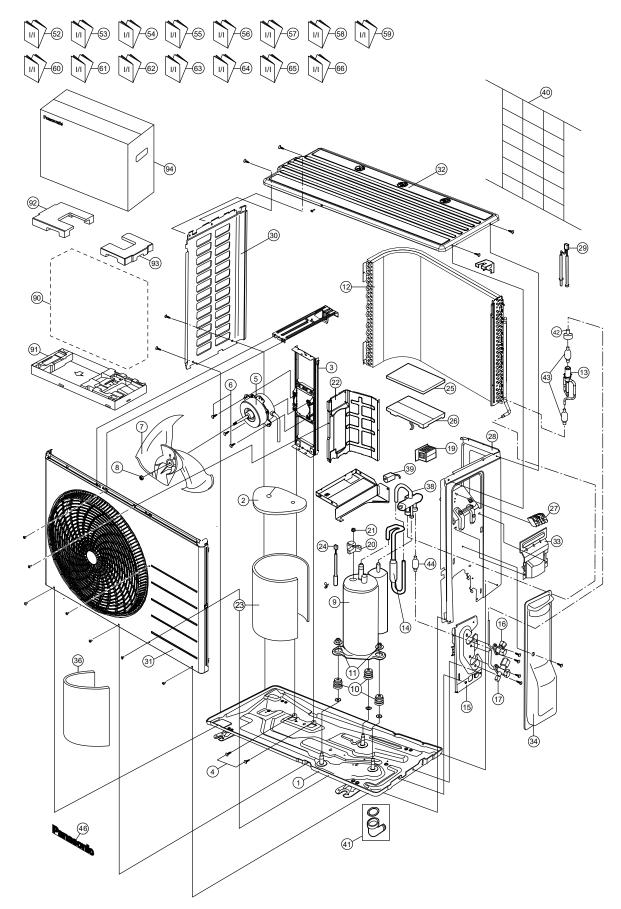

### Note

The above exploded view is for the purpose of parts disassembly and replacement. The non-numbered parts are not kept as standard service parts.


SAFETY	REF. NO.	PART NAME & DESCRIPTION	QTY.	CU-Z25UBEA	REMARK
	1	CHASSIS COMPLETE	1	CWD52K1399	
	2	SOUND PROOF MATERIAL (TOP)	1	CWG302314	
	3	FAN MOTOR BRACKET	1	CWD541157	
	4	SCREW - FAN MOTOR BRACKET	2	CWH551217	
$\triangle$	5	FAN MOTOR	1	L6CAYYYL0064	0
	6	SCREW - FAN MOTOR MOUNT	4	CWH55252J	
	7	PROPELLER FAN ASSY	1	CWH03K1100	
	8	NUT - PROPELLER FAN	1	CWH56053J	
$\triangle$	9	COMPRESSOR	1	9RS102XFA21	0
	10	ANTI - VIBRATION BUSHING	3	CWH50077	
	11	NUT - COMPRESSOR MOUNT	3	CWH561096	
	12	CONDENSER	1	ACXB32C00760	
	13	EXPANSION VALVE	1	CWB051078	
	14	DISCHARGE MUFFLER (4 W.VALVE)	1	CWB121010	
	15	HOLDER COUPLING	1	CWH351233	
	16	2-WAYS VALVE (LIQUID)	1	ACXB02-02650	0
	17	3-WAY VALVE (GAS)	1	CWB011581	0
	19	REACTOR	1	G0C392J00028	0
	20	TERMINAL COVER	1	CWH171039A	
	21	NUT - TERMINAL COVER	1	CWH7080300J	
	22	SOUND PROOF BOARD	1	CWH151428	
	23	SOUND PROOF MATERIAL	1	CWG302948	
	24	SENSOR CO - COMP TEMP	1	CWA50C2205	0
	25	CONTROL BOARD COVER - TOP	1	ACXH13-00450	
$\wedge$	26	ELECTRONIC CONTROLLER - MAIN	1	ACXA73C39660R	0
$\overline{\mathbb{A}}$	27	TERMINAL BOARD ASSY	1	CWA28K1110J	0
	28	CABINET SIDE PLATE CO.	1	ACXE04C00460	
	29	SENSOR CO - AIR TEMP AND PIPE TEMP	1	CWA50C3079	0
	30	CABINET SIDE PLATE (LEFT)	1	CWE041858A	
	31	CABINET FRONT PLATE CO.	1	CWE06C1566	
	32	CABINET TOP PLATE	1	CWE031230A	
	33	PLATE - C. B. COVER TERMINAL	1	CWH131301	
	34	CONTROL BOARD COVER CO.	1	CWH13C1359	
	36	SOUND PROOF MATERIAL	1	CWG302316	
	38	4-WAYS VALVE	1	ACXB00-00130	0
$\triangle$	39	V-COIL COMPLETE (4-WAY VALVE)	1	ACXA43C00250	0
	40	WIRE NET	1	ACXD04-00040A	
	41	BAG - COMPLETE	1	CWG87C900	
$\triangle$	42	V-COIL COMPLETE (EXP. VALVE)	1	ACXA43C00640	0
	43	STRAINER	2	CWB111032	
	44	RECEIVER	1	CWB14011	
	46	PANASONIC BADGE	1	CWE373439	
	52	INSTALLATION INSTRUCTION	1	ACXF60-27460	
	53	INSTALLATION INSTRUCTION	1	ACXF60-27470	
	54	INSTALLATION INSTRUCTION	1	ACXF60-27480	
	55	INSTALLATION INSTRUCTION	1	ACXF60-27490	
	56	INSTALLATION INSTRUCTION	1	ACXF60-27500	

SAFETY	REF. NO.	PART NAME & DESCRIPTION	QTY.	CU-Z25UBEA	REMARK
	57	INSTALLATION INSTRUCTION	1	ACXF60-27510	
	58	INSTALLATION INSTRUCTION	1	ACXF60-27520	
	59	INSTALLATION INSTRUCTION	1	ACXF60-27530	
	60	INSTALLATION INSTRUCTION	1	ACXF60-27540	
	61	INSTALLATION INSTRUCTION	1	ACXF60-27550	
	62	INSTALLATION INSTRUCTION	1	ACXF60-27560	
	63	INSTALLATION INSTRUCTION	1	ACXF60-27570	
	64	INSTALLATION INSTRUCTION	1	ACXF60-27580	
	65	INSTALLATION INSTRUCTION	1	ACXF60-27590	
	66	INSTALLATION INSTRUCTION	1	ACXF60-27600	
	90	BAG	1	CWG861078	
	91	BASE BOARD-COMPLETE	1	CWG62C1223	
	92	SHOCK ABSORBER (L)	1	CWG713779	
	93	SHOCK ABSORBER (R)	1	CWG713778	
	94	C.C. CASE	1	ACXG50-06590	

(NOTE)

- All parts are supplied from PAPAMY, Malaysia (Vendor Code: 00029488). "O" marked parts are recommended to be kept in stock. •
- •

## 22.2.2 CU-Z35UBEA

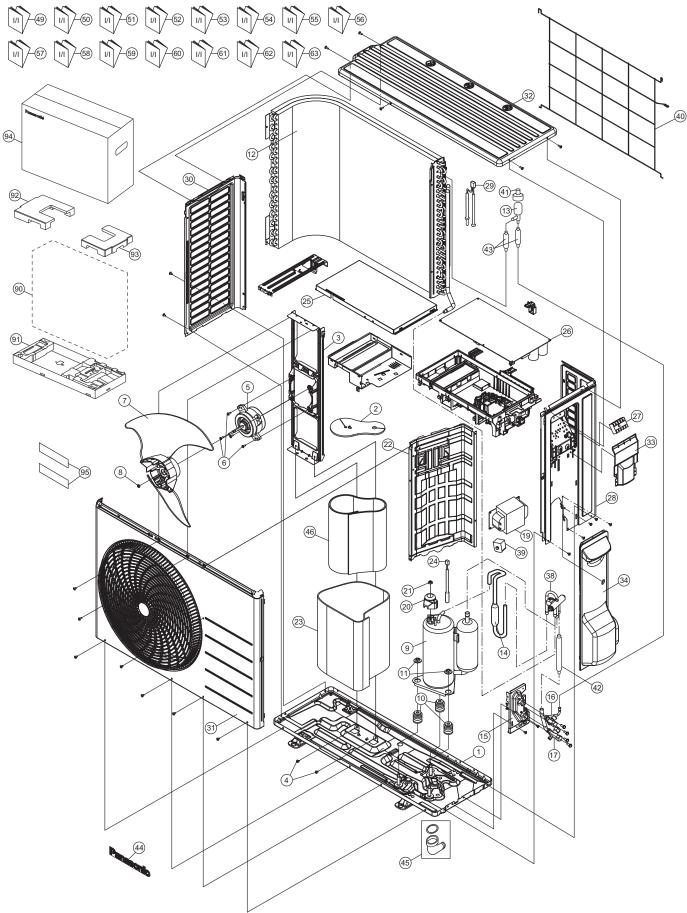

### Note

The above exploded view is for the purpose of parts disassembly and replacement. The non-numbered parts are not kept as standard service parts.


SAFETY	REF. NO.	PART NAME & DESCRIPTION	QTY.	CU-Z35UBEA	REMARK
	1	CHASSIS COMPLETE	1	CWD52K1277	
	2	SOUND PROOF MATERIAL (TOP)	1	CWG302719	
	3	FAN MOTOR BRACKET	1	CWD541167	
	4	SCREW - FAN MOTOR BRACKET	2	CWH551217	
$\triangle$	5	FAN MOTOR	1	L6CAYYYL0064	0
	6	SCREW - FAN MOTOR MOUNT	4	CWH55252J	
	7	PROPELLER FAN ASSY	1	CWH03K1066	
	8	NUT - PROPELLER FAN	1	CWH56053J	
$\triangle$	9	COMPRESSOR	1	9RS102XFA21	0
	10	ANTI - VIBRATION BUSHING	3	CWH50077	
	11	NUT - COMPRESSOR MOUNT	3	CWH561096	
	12	CONDENSER	1	CWB32C3547	
	13	EXPANSION VALVE	1	CWB051078	
	14	DISCHARGE MUFFLER (4 W.VALVE)	1	CWB121010	
	15	HOLDER COUPLING	1	CWH351233	
	16	2-WAYS VALVE (LIQUID)	1	ACXB02-02650	0
	17	3-WAY VALVE (GAS)	1	CWB011581	0
$\wedge$	19	REACTOR	1	G0C392J00028	0
	20	TERMINAL COVER	1	CWH171039A	
	21	NUT - TERMINAL COVER	1	CWH7080300J	
	22	SOUND PROOF BOARD	1	ACXH15-01590	
	23	SOUND PROOF MATERIAL (BODY)	1	CWG302949	
	24	SENSOR CO - COMP TEMP	1	CWA50C2894	0
	25	CONTROL BOARD COVER - TOP	1	CWH131473	
$\triangle$	26	ELECTRONIC CONTROLLER - MAIN	1	ACXA73C39670R	0
$\triangle$	27	TERMINAL BOARD ASSY	1	CWA28K1110J	0
	28	CABINET SIDE PLATE CO. (RIGHT)	1	CWE04C1411	
	29	SENSOR CO - AIR TEMP AND PIPE TEMP	1	CWA50C3078	0
	30	CABINET SIDE PLATE	1	CWE041579A	
	31	CABINET FRONT PLATE CO.	1	ACXE06C02830	
	32	CABINET TOP PLATE	1	CWE031148A	
	33	PLATE - C. B. COVER TERMINAL	1	CWH131470	
	34	CONTROL BOARD COVER CO.	1	CWH13C1253	
	38	4-WAYS VALVE	1	ACXB00-00130	0
$\triangle$	39	V-COIL COMPLETE (4 WAY VALVE)	1	ACXA43C00250	0
	40	WIRE NET	1	CWD041200A	
$\triangle$	41	V-COIL COMPLETE (EXP. VALVE)	1	ACXA43C00640	0
	42	RECEIVER	1	CWB14011	
	43	STRAINER	2	CWB111032	
	44	PANASONIC BADGE	1	CWE373439	
	45	BAG - COMPLETE	1	CWG87C900	
	46	SOUND PROOF MATERIAL	1	CWG302701	
	49	INSTALLATION INSTRUCTION	1	ACXF60-27460	
	50	INSTALLATION INSTRUCTION	1	ACXF60-27470	
	51	INSTALLATION INSTRUCTION	1	ACXF60-27480	
	52	INSTALLATION INSTRUCTION	1	ACXF60-27490	
	53	INSTALLATION INSTRUCTION	1	ACXF60-27500	
	54	INSTALLATION INSTRUCTION	1	ACXF60-27510	
	55	INSTALLATION INSTRUCTION	1	ACXF60-27520	

SAFETY	REF. NO.	PART NAME & DESCRIPTION	QTY.	CU-Z35UBEA	REMARK
	56	INSTALLATION INSTRUCTION	1	ACXF60-27530	
	57	INSTALLATION INSTRUCTION	1	ACXF60-27540	
	58	INSTALLATION INSTRUCTION	1	ACXF60-27550	
	59	INSTALLATION INSTRUCTION	1	ACXF60-27560	
	60	INSTALLATION INSTRUCTION	1	ACXF60-27570	
	61	INSTALLATION INSTRUCTION	1	ACXF60-27580	
	62	INSTALLATION INSTRUCTION	1	ACXF60-27590	
	63	INSTALLATION INSTRUCTION	1	ACXF60-27600	
	90	BAG	1	ACXG86-03760	
	91	BASE BOARD-COMPLETE	1	CWG62C1144	
	92	SHOCK ABSORBER (L)	1	CWG713416	
	93	SHOCK ABSORBER (R)	1	CWG713415	
	94	C.C. CASE	1	CWG568358	
	95	MODEL LABEL	2	ACXF82-77801	

(NOTE)

All parts are supplied from PAPAMY, Malaysia (Vendor Code: 00029488). "O" marked parts are recommended to be kept in stock. ٠

•

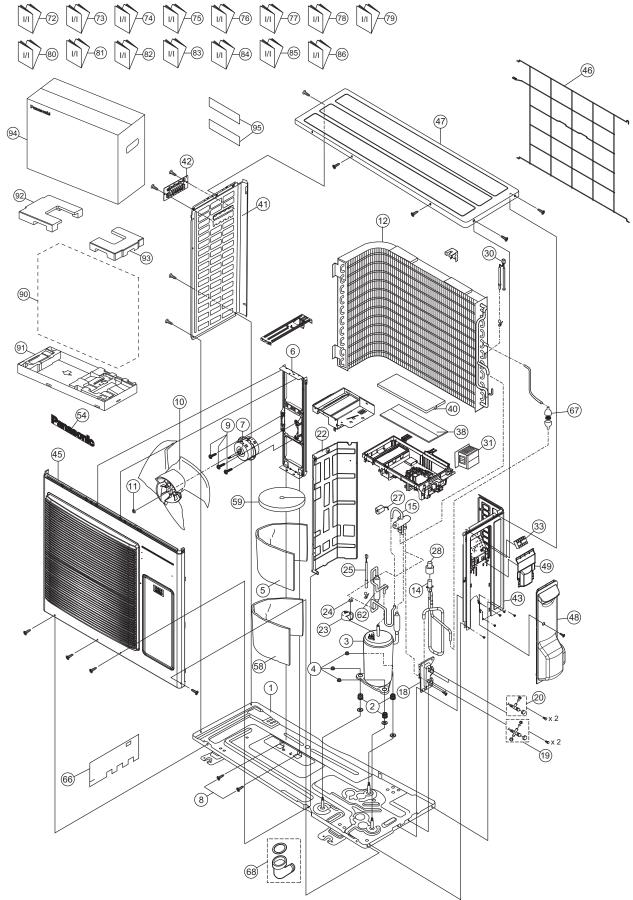

#### Note

The above exploded view is for the purpose of parts disassembly and replacement. The non-numbered parts are not kept as standard service parts.

SAFETY	REF. NO.	PART NAME & DESCRIPTION	QTY.	CU-Z50UBEA	REMARK
	1	CHASSIS COMPLETE	1	ACXD52K00320	
	2	ANTI - VIBRATION BUSHING	3	CWH50077	
$\triangle$	3	COMPRESSOR	1	9RD132XAA21	0
	4	NUT - COMPRESSOR MOUNT	3	CWH561096	
	5	SOUND PROOF MATERIAL	1	CWG302950	
	6	FAN MOTOR BRACKET	1	ACXD54-00140	
$\triangle$	7	FAN MOTOR	1	L6CAYYYL0076	0
	8	SCREW - FAN MOTOR BRACKET	2	CWH551217	
	9	SCREW - FAN MOTOR MOUNT	4	CWH551106J	
	10	PROPELLER FAN ASSY	1	ACXH03K00070	
	11	NUT - PROPELLER FAN	1	CWH56053J	
	12	CONDENSER	1	ACXB32C08610	
	14	EXPANSION VALVE	1	CWB051078	
	15	4-WAYS VALVE	1	ACXB00-00140	0
	18	HOLDER COUPLING	1	ACXH35-00080	
	19	3-WAY VALVE (GAS)	1	ACXB01-00580	0
	20	2-WAYS VALVE (LIQUID)	1	ACXB02-00210	0
	22	SOUND PROOF BOARD	1	ACXH15-00200	
	23	TERMINAL COVER	1	CWH171039A	
	24	NUT - TERMINAL COVER	1	CWH7080300J	
	25	SENSOR CO - COMP. TEMP.	1	CWA50C2185	0
$\triangle$	27	V-COIL COMPLETE (4-WAY VALVE)	1	ACXA43C00250	0
$\triangle$	28	V-COIL COMPLETE (EXP. VALVE)	1	ACXA43C00640	0
	30	SENSOR - COMPLETE (AIR & PIPE TEMP.)	1	CWA50C3079	
$\triangle$	31	REACTOR	1	G0C392J00027	0
$\triangle$	33	TERMINAL BOARD ASSY	1	CWA28K1110J	0
$\triangle$	38	ELECTRONIC CONTROLLER - MAIN	1	ACXA73C39680R	0
	40	CONTROL BOARD COVER - TOP	1	ACXH13-00490	
	41	CABINET SIDE PLATE (LEFT)	1	ACXE04-00580	
	42	HANDLE	1	CWE161010	
	43	CABINET SIDE PLATE (RIGHT)	1	ACXE04C00720	
	45	CABINET FRONT PLATE CO.	1	ACXE06K00050	
	46	WIRE NET	1	ACXD04-00130A	
	47	CABINET TOP PLATE	1	ACXE03-00170A	
	48	CONTROL BOARD COVER - COMPLETE	1	ACXH13C00170	
	49	CONTROL BOARD COVER	1	CWH131470	
	54	PANASONIC BADGE	1	CWE373439	
	58	SOUND PROOF MATERIAL	1	CWG302636	
	59	SOUND PROOF MATERIAL	1	CWG302630	
	62	RECEIVER	1	CWB14011	
	66	SOUND PROOF MATERIAL	1	CWG302632	
	67	STRAINER	1	CWB11094	
	68	BAG - COMPLETE	1	CWG87C900	
	72	INSTALLATION INSTRUCTION	1	ACXF60-27460	
	73	INSTALLATION INSTRUCTION	1	ACXF60-27470	
	74	INSTALLATION INSTRUCTION	1	ACXF60-27480	
	75	INSTALLATION INSTRUCTION	1	ACXF60-27490	
	76	INSTALLATION INSTRUCTION	1	ACXF60-27500	
	77	INSTALLATION INSTRUCTION	1	ACXF60-27510	

SAFETY	REF. NO.	PART NAME & DESCRIPTION	QTY.	CU-Z50UBEA	REMARK
	78	INSTALLATION INSTRUCTION	1	ACXF60-27520	
	79	INSTALLATION INSTRUCTION	1	ACXF60-27530	
	80	INSTALLATION INSTRUCTION	1	ACXF60-27540	
	81	INSTALLATION INSTRUCTION	1	ACXF60-27550	
	82	INSTALLATION INSTRUCTION	1	ACXF60-27560	
	83	INSTALLATION INSTRUCTION	1	ACXF60-27570	
	84	INSTALLATION INSTRUCTION	1	ACXF60-27580	
	85	INSTALLATION INSTRUCTION	1	ACXF60-27590	
	86	INSTALLATION INSTRUCTION	1	ACXF60-27600	
	90	BAG	1	CWG861461	
	91	BASE BOARD-COMPLETE	1	CWG62C1131	
	92	SHOCK ABSORBER (L)	1	CWG713217	
	93	SHOCK ABSORBER (R)	1	CWG713218	
	94	C.C. CASE	1	CWG568359	
	95	MODEL LABEL	2	ACXF82-77811	

(NOTE)

- All parts are supplied from PAPAMY, Malaysia (Vendor Code: 00029488). "O" marked parts are recommended to be kept in stock. ٠
- •