

INSTALLATION AND MAINTENANCE MANUAL

Original instructions

ECOi-W AQUA-Z

70 / 75 / 85 / 100 / 115 / 130

Air Cooled Water Chillers and Heat Pumps

These air cooled water chillers and heat pumps use the refrigerant R32.

Model No.

Size	Standard Cooling only	Standard Heat pump
70	P-AQAZ0070C	P-AQAZ0070H
75	P-AQAZ0075C	P-AQAZ0075H
85	P-AQAZ0085C	P-AQAZ0085H
100	P-AQAZ0100C	P-AQAZ0100H
115	P-AQAZ0115C	P-AQAZ0115H
130	P-AQAZ0130C	P-AQAZ0130H



Read through the Installation Instructions before you proceed with the installation. In particular, you will need to read under the “IMPORTANT !” section at the top of the page.

As part of our ongoing product improvement programme, our products are subject to change without prior notice. Non contractual photos.

English

Français

Deutsch

Italiano

Español

CONTENTS

1. GENERAL RECOMMENDATIONS	4	12. WIRING DIAGRAM AND LEGEND	30
1.1. Safety directions	4	12.1. Wiring diagram	30
1.2. Warning	4	12.1.1. Power supply	30
1.3. Pressure equipment safety	4	12.1.2. Wiring diagram key descriptions	30
1.4. Equipment safety data	5	12.2. Range and settings of thermal protection	30
2. INSPECTION AND STORAGE	6	13. ELECTRICAL CONNECTIONS	31
3. DISPOSAL	6	13.1. Unit power supply	32
4. WARRANTY	7	13.2. Options variable flow pump	33
5. PRESENTATION	7	13.3. Electric heating option	33
5.1. Name plate	7	13.4. Alarm indicators	34
5.2. Models designation	8	13.5. Remote control	34
6. CONTENTS OF PACKAGE	9	13.6. Remote sensors	35
6.1. Optionals accessories	9	13.7. Communication	36
7. DIMENSIONS	9	14. REGULATION	37
8. WEIGHT	9	14.1. Order of priority for control systems	37
8.1. Net weight	9	14.2. User interface	37
8.2. Gravity center position	10	14.2.1. Keypad	37
8.2.1. Without buffer tank	10	14.2.2. Home page	38
8.2.2. With buffer tank and double pump	10	14.2.3. Main menu	38
8.3. General maintenance	11	14.2.4. Menus	38
8.3.1. Handling with a forklift	11	14.3. Initial settings	39
8.3.2. Handling by slinging	12	14.3.1. Language settings	39
9. TECHNICAL SPECIFICATIONS	13	14.3.2. Time settings	39
9.1. Physical characteristics	13	14.3.3. Defining the glycol rate	39
9.1.1. ECOi-W AQUA-Z C - AC version	13	14.3.4. Configuring input ON/OFF (D1)	40
9.1.2. ECOi-W AQUA-Z C - EC / EC S version	14	14.3.5. Configuring input Summer/Winter (D2)	41
9.1.3. ECOi-W AQUA-Z H - AC version	15	14.3.6. Configuring input Reduced mode (DL1)	41
9.1.4. ECOi-W AQUA-Z H - EC / EC S version	16	14.3.7. Configuring Smart Grid input (X4 and X6)	42
9.2. Refrigeration specifications	17	14.3.8. Configuration of Air law inlet (X2)	43
9.2.1. Refrigerant circuit diagram	17	14.4. Launching the ECOi-W AQUA-Z system	44
9.2.2. Refrigerant charge	17	14.4.1. Selecting the operating mode	44
9.2.3. Fluorocarbon gas regulations	17	14.4.2. Selecting the operating status	45
9.2.3.1. Calculating greenhouse gas quantities	17	14.4.3. User temperature setpoints and actual setpoints	45
9.3. Electric specifications	18	14.5. Alarms	46
9.3.1. ECOi-W AQUA-Z with ac fans	18	14.5.1. Alarm details	46
9.3.2. ECOi-W AQUA-Z with ec/hpf fans	18	14.5.2. The list of active alarms	46
9.3.3. Electric heating coil	18	14.5.3. Alarms history	47
9.4. Operating limits	19	15. COMMISSIONING	48
9.4.1. ECOi-W AQUA-Z H heating mode	19	15.1. Pre-start check list	48
9.4.2. ECOi-W AQUA-Z H cooling mode	20	15.1.1. Visual check	48
9.4.3. ECOi-W AQUA-Z C	20	15.1.2. Hydraulic check	48
10. INSTALLATION	21	15.1.3. Refrigeration check	49
10.1. Siting the installation	21	15.1.4. Electrical check	49
10.1.1. Siting depending on prevailing wind	21	15.2. Unit start-up	50
10.1.2. Condensate water management in heating mode	21	15.2.1. Phase rotation protection	50
10.1.3. Reduction of noise pollution	22	15.2.2. First start-up	50
10.2. Clearance	22	15.2.3. Operating check list	50
10.3. Anchoring to the ground	22	15.2.4. Pump management	50
10.3.1. Load distribution	23	15.2.5. Final check	51
10.3.1.1. Without buffer tank	23	16. IN CASE OF WARRANTY - MATERIAL RETURN	51
10.3.1.2. With buffer tank and double pump	23	PROCEDURE	51
11. HYDRAULIC LINKS	24	17. ORDERING SERVICE AND SPARE PARTS ORDER	51
11.1. Main hydraulic circuit	24	18. MAINTENANCE	52
11.2. Anti-clogging protection	24	18.1. Table of periodic service and maintenance	52
11.3. Minimum water volume requirements	25	18.2. Maintenance procedures	56
11.3.1. ECOi-W AQUA-Z cooling only version	25	18.2.1. Generalities	56
11.3.2. ECOi-W AQUA-Z heat pump version	25	18.2.2. Refrigerant fluid draining	56
11.4. Maximum water volume requirements	25	18.2.3. Refrigerant fluid charge	56
11.5. Rinsing the circuit	25	18.2.4. Repairs	57
11.6. Frost protection	26	18.2.5. Specific components	58
11.7. Water quality	27	18.2.5.1. Compressors	58
11.8. Heat insulation	28	18.2.5.2. Filter drier	58
11.9. Water low pressure switch	28	18.2.5.3. External exchanger	58
11.10. Differential pressure transducer	28	18.2.5.4. Plate heat exchanger	59
11.11. Filling the system with water	29	18.2.5.5. Procedure to switch from one pump to other	59
		18.2.6. Winter protection	59
		19. TROUBLE SHOOTING	60

IMPORTANT!

Please Read Before Starting

This Chiller must be installed by the sales dealer or installer.

This information is provided for use only by authorized persons.

For safe installation and trouble-free operation, you must:

Carefully read this instruction booklet before beginning.

- Follow each installation or repair step exactly as shown.
- This Chiller shall be installed in accordance with National Wiring Regulations.
- This equipment complies with the requirements of the following EU legislation:
 - 2014/30/EU (EMC), 2006/42/EC (Machinery),
 - 2014/68/EU (PED), 2011/65/EU (RoHS),
 - 2009/125/EC (ErP) and all applicable Standards (see EC Declaration for details).
- Pay close attention to all warning and caution notices given in this manual.

! **WARNING** This symbol refers to a hazard or unsafe practice which can result in severe personal injury or death.

! **CAUTION** This symbol refers to a hazard or unsafe practice which can result in personal injury or product or property damage.

If Necessary, Get Help

These instructions are all you need for most installation sites and maintenance conditions. If you require help for a special problem, contact our sales/service outlet or your certified dealer for additional instructions.

In Case of Improper Installation

The manufacturer shall in no way be responsible for improper installation or maintenance service, including failure to follow the instructions in this document.

Notice

The English text is the "Original language".
 The content of this document is intended for use by the manufacturer professional personnel only.

SPECIAL PRECAUTIONS



CAUTION When Wiring

ELECTRICAL SHOCK CAN CAUSE SEVERE PERSONAL INJURY OR DEATH. ONLY A QUALIFIED, EXPERIENCED ELECTRICIAN SHOULD ATTEMPT TO WIRE THIS SYSTEM.

- Do not supply power to the unit until all wiring and tubing are completed or reconnected and checked.
- Highly dangerous electrical voltages are used in this system. Carefully see the wiring diagram and section 2 when wiring. Improper connections and inadequate grounding can cause **accidental injury or death**.
- Connect all wiring tightly. Loose wiring may cause overheating at connection points and a possible fire hazard.
- Provide a power outlet to be used exclusively for each unit.
- Differential circuit breaker must be incorporated in the fixed wiring. Circuit breaker must be incorporated in the fixed wiring in accordance with the wiring regulations.
- Provide a power outlet exclusively for each unit, and full disconnection means having a contact separation by 3mm in all poles must be incorporated in the fixed wiring in accordance with the wiring rules.
- To prevent possible hazards from insulation failure, the unit must be grounded. 
- This equipment is strongly recommended to be installed with Residual Current Device (RCD). Otherwise, it may cause electrical shock and fire in case of equipment breakdown or insulation breakdown.

When Transporting

- It may need two or more people to carry out the installation work.
- Care should be taken when lifting or moving the chiller to reduce the chance of serious injury. Do not attempt to move the equipment without the correct means of lifting.

When Installing...

Select an installation location which is rigid and strong enough to support or hold the unit, and select a location for easy maintenance.

...In Moist or Uneven Locations

Use a raised concrete pad or concrete blocks to provide a solid, level foundation for the outdoor unit. This prevents water damage and abnormal vibration.

...In an Area with High Winds

Securely anchor the outdoor unit down with bolts and a metal frame. Provide a suitable air baffle.

...In a Snowy Area (for Heat Pump-type Systems)

Install the outdoor unit on a raised platform that is higher than drifting snow. Provide snow protection.

When Servicing

- Turn the power OFF at the main power box (mains), wait at least 10 minutes until it is discharged, then open the unit to check or repair electrical parts and wiring.
- Keep your fingers and clothing away from any moving parts.
- Clean up the site after you finish, remembering to check that no metal scraps or bits of wiring have been left inside the unit.



WARNING

- This product must not be modified or disassembled under any circumstances. Modified or disassembled unit may cause fire, electric shock or injury.
- Users must not clean inside the unit. Engage authorized dealer or specialist for cleaning.
- In case of malfunction of this unit, please contact to the sales dealer or service dealer for a repair and disposal.
- Any operation carried out by unauthorized personnel is prohibited and can cause serious damage to people and things.



CAUTION

- Ventilate any enclosed areas when installing or testing the refrigeration system. Leaked refrigerant gas, on contact with fire or heat, can produce dangerously toxic gas.
- Confirm after installation that no refrigerant gas is leaking. If the gas comes in contact with a burning stove, gas water heater, electric room heater or other heat source, it can cause the generation of toxic gas.

Others

When disposal of the product, comply with national regulations.



CAUTION

- Do not touch the air inlet or the sharp aluminum fins of the outdoor unit. You may get injured.
- Do not sit or step on the unit, you may fall down accidentally.
- Do not stick any object into the FAN CASE. You may be injured and the unit may be damaged.





POWER SUPPLY MUST BE SWITCHED OFF BEFORE STARTING WORK IN THE ELECTRIC CONTROL BOX

1. GENERAL RECOMMENDATIONS

The purpose of this Manual is to provide users with instructions for installing, commissioning, using and maintaining the units. It also contains instructions on starting up the machine as well as recommendations to avoid bodily injury and risks of damage to the device during its operation.

It does not contain the complete description of all the maintenance operations guaranteeing the unit's long life and reliability. Only the services of a qualified technician can guarantee the unit's safe operation over a long service life.

Please read the following safety precautions very carefully before installing the unit.

1.1. SAFETY DIRECTIONS

Follow the safety rules in force when you are working on your appliance.

The installation, commissioning, use and maintenance of these units should be performed by qualified personnel who have a good knowledge of standards and local regulations, as well as experience of this type of equipment.

This appliance has not been designed for use by persons (including children) with reduced physical, sensorial or mental faculties or by persons without any experience or knowledge of heating systems, unless they act under the safety and supervision of a responsible person or have received prior training concerning the use of the appliance.

The unit should be handled using lifting and handling equipment appropriate to the unit's size and weight.

Any wiring produced on site must comply with the corresponding national electrical regulations.

Make sure that the power supply and its frequency are adapted to the required electric current of operation, taking into account specific conditions of the location and the current required for any other appliance connected to the same circuit.

The unit must be EARTHED to avoid any risks caused by insulation defects.

Work must not be carried out on the electrical components if water or high humidity is present at the installation site.

SAFETY SYMBOLS



ELECTRIC VOLTAGE



ROTATING PART



RISK OF CUTTING



RISK OF BURNS



RISK OF ASPHYXIA



PRESSURIZED EQUIPMENT



FLAMMABLE GAS

1.2. WARNING

Cut off the power supply before starting work on the appliance.

When forming the hydraulic connections, ensure that no impurities are introduced into the pipe work.

The manufacturer declines any responsibility and the warranty becomes void if these instructions are not complied with.

If you encounter a problem, please call the Technical Department for your area.

If possible, assemble the compulsory or optional accessories before placing the appliance in its final location (see instructions provided with each accessory).

To familiarize yourself fully with the appliance, we recommend that you also read our Technical Instructions.

The information contained in these Instructions is subject to modification without advance notice.

1.3. PRESSURE EQUIPMENT SAFETY

Gas	Fluid Group	PS (bar)	Category (1)	Evaluation module (2)	Notified body
R32	1	45	III	H	0062

(1) According to the 14 § 6 b) article of the directive 2014/68/EU.

(2) According to the 14 § 2 article of the directive 2014/68/EU.

- These units contain pressurised refrigerant. The pressurised elements within these units should only be disturbed during maintenance by fully qualified and trained personnel.
- Do not damage, bend, or impact the pressurised pipe work.
- Failure to follow these recommendations may result in serious or fatal injury.

1.4. EQUIPMENT SAFETY DATA

Safety Data	Difluoromethane R32
Toxicity level	Low
In contact with skin	Skin contact with the rapidly evaporating liquid may cause tissue chilblains. In case of skin contact with the liquid, warm the frozen tissue with water and call a doctor. Remove contaminated clothing and footwear. Wash the clothing prior to re-use.
In contact with eyes	Vapours have no effect. Liquid splashes or sprays may cause freeze burns. In these cases rinse your eyes with running water or with a solution for eye lavages for at least 10 minutes. Immediately contact a doctor.
Ingestion	In this case, burns may result. Do not attempt to make the patient vomit. If the patient is conscious, rinse the mouth with water. Call a doctor immediately.
Inhalation	In case of inhalation, move the patient to an area with fresh air and provide oxygen if necessary. Perform artificial respiration if the patient has stopped breathing or lacks air. In case of cardiac arrest, perform external cardiac massage. Call a doctor immediately.
Further Medical Advice	Exposure to high concentrations can be dangerous for individuals with cardiac problems, as the presence of catecholamines such as adrenalin in the bloodstream may lead to increased arrhythmia and possible cardiac arrest.
Occupational exposure limits	R32: Recommended limits: 1,000 ppm v/v 8 hours TWA.
Stability	Stable product
Conditions to avoid	Increased pressure due to high temperatures may cause the container to explode. Keep out of the sun and do not expose to a temperature >50°C.
Hazardous reactions	Possibility of dangerous reactions in case of fire due to the presence of F and/or Cl radicals
General precautions	Avoid the inhalation of high concentrations of vapours. The concentration in the atmosphere shall be kept at the minimum value and anyway below the occupational limits. Since vapours are heavier than air and they tend to stagnate and to build up in closed areas, any opening for ventilation shall be made at the lowest level.
Breathing protection	In case of doubt about the actual concentration, wear breathing apparatus. It should be self-contained and approved by the bodies for safety protection.

Safety Data	Difluoromethane R32
Conditions for safe storage, including any incompatibilities	All electrical equipment in the storage areas should be compatible with the risk of a potentially explosive atmosphere. Segregate from oxidant gases and other oxidants being stored. Containers should not be stored in conditions likely to encourage corrosion. Stored containers should be periodically checked for general conditions and leakage. Container valve guards or caps should be in place. Store containers in location free from fire risk and away from sources of heat and ignition. Keep away from combustible material.
Protection clothes	Wear boots, safety gloves and glasses or masks for facial protection.
Behaviour in case of leaks or escapes	Never forget to wear protection clothes and breathing apparatus. Isolate the source of the leakage, provided that this operation may be performed in safety conditions. Any small quantity of refrigerant which may have escaped in its liquid state may evaporate provided that the room is well ventilated. In case of a large leakage, ventilate the room immediately. Stop the leakage with sand, earth or any suitable absorbing material. Prevent the liquid refrigerant from flowing into drains, sewers, foundations or absorbing wells since its vapours may create an asphyxiating atmosphere.
Disposal	The best procedure involves recovery and recycle. If this is not possible, the refrigerant shall be given to a plant which is well equipped to destroy and neutralise any acid and toxic by-product which may derive from its disposal.
Fire-fighting measures	Promptly isolate the scene by removing all persons from the vicinity of the incident if there is a fire. No action shall be taken involving any personal risk or without suitable training. Contact supplier immediately for specialist advice. Move containers from fire area if this can be done without risk. Use water spray to keep fire-exposed containers cool. If involved in fire, shut off flow immediately if it can be done without risk. If this is impossible, withdraw from area and allow fire to burn. Fight fire from protected location or maximum possible distance. Eliminate all ignition sources if safe to do so.
Special protective equipment for fire-fighters	Fire-fighters should wear appropriate protective equipment and self-contained breathing apparatus (SCBA) with a full face-piece operated in positive pressure mode. For incidents involving large quantities, thermally insulated undergarments and thick textile or leather gloves should be worn.
Containers	If they are exposed to the fire, they shall be constantly cooled down by water sprays. Containers may explode if they are overheated.

2. INSPECTION AND STORAGE

At the time of receiving the equipment carefully cross check all the elements against the shipping documents to ensure that all the crates and boxes have been received. Inspect all the units for any visible or hidden damage.

In the event of shipping damage, write precise details of the damage on the shipper's delivery note and send immediately a registered letter to the shipper within 48 hours, clearly stating the damage caused. Forward a copy of this letter to the manufacturer or his representative.

Never store or transport the unit upside down. It must be stored indoors, completely protected from rain, snow etc. The unit must not be damaged by changes in the weather (high and low temperatures). Excessively high temperatures (above 60 °C) can harm certain plastic materials and cause permanent damage. Moreover, the performance of certain electrical or electronic components can be impaired.

Environmental conditions must be within the following limits:

- Minimum ambient temperature : -20 °C
- Maximum ambient temperature : +60 °C
- Maximum R.H. : 95% not condensing

Storage at a temperature below the minimum can cause damage to the components, instead at a temperature above the maximum causes a pressure increasing that could be above the limit (Ps). High humidity atmosphere may damage electrical components.

3. DISPOSAL

Units must be disposed of in accordance with local regulations

Information for Users on Collection and Disposal of Old Equipment and Used Batteries

 These symbols on the products, packaging, and/or accompanying documents mean that used electrical and electronic products and batteries should not be mixed with general household waste.

For proper treatment, recovery and recycling of old products and used batteries, please take them to applicable collection points, in accordance with your national legislation and the Directives 2012/19/EU of 4 July 2012 on waste electrical and electronic equipment (WEEE).

By disposing of these products and batteries correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling. For more information about collection and recycling of old products and batteries, please contact your local municipality, your waste disposal service or the point of sale where you purchased the items.

Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

For business users in the European Union

If you wish to discard electrical and electronic equipment, please contact your dealer or supplier for further information.

[Information on Disposal in other Countries outside the European Union]

These symbols are only valid in the European Union. If you wish to discard these items, please contact your local authorities or dealer and ask for the correct method of disposal.

Note for the battery symbol

 This symbol might be used in combination with a chemical symbol. In this case it complies with the requirement set by the Directive for the chemical involved. 

The disposal of refrigerating systems and their component parts must be carried out in accordance with applicable local and national regulations.

Used refrigerant which is not going to be reutilized must be treated as a waste material requiring safe disposal.

The discharge of refrigerants is only permissible when there will be no harm to persons, property or the environment, and provided it is in accordance with legal requirements.

Used oil that cannot be reprocessed must be stored in a suitable separate container and must be treated as a waste material requiring safe disposal.

Other components of the refrigerating system which contain refrigerant and oil must also be disposed of in an appropriate manner.

If necessary, you should seek the advice of a competent person on the disposal of waste refrigerant and oil products.



INFORMATION

For additional information on the recovery, reutilization and disposal of refrigerating systems, please see NF EN 378-4, sect. 6.

4. WARRANTY

The appliances are delivered fully assembled, factory tested and ready to operate.

Any modification to the units without the manufacturer’s prior approval, shall automatically render the warranty null and void.

The following conditions must be respected in order to maintain the validity of the warranty:

- Commissioning shall be performed by specialised technicians from technical services approved by the manufacturer.
- Maintenance shall be performed by technicians trained for this purpose.
- Only Original Equipment spare parts shall be used.
- All the operations listed in the present manual shall be performed within the required time limits.



THE WARRANTY SHALL BE NULL AND VOID IN THE EVENT OF NON-COMPLIANCE WITH ANY OF THE ABOVE CONDITIONS.

5. PRESENTATION

All the models in the **ECOi-W AQUA-Z** liquid coolers range are produced to state-of-the-art design and manufacturing standards. In this way, they offer guarantees of high performance and reliability as well as the capability of adapting to all types of air conditioning installations operating with both chilled water and glycol solutions (and with hot water for the Heat pump units). The unit, designed for an outdoor mounted application, is not suitable for any use other than those specified in the present manual.

Improper usage of the unit or a use for purposes other than those originally intended, without the prior approval by the manufacturer or its agents, could result in the unit functioning outside its safe operating limits and could present risks to both personnel and property.

The **ECOi-W AQUA-Z** units are monobloc-type units, designed to cool or heat water for air conditioning applications.

The Cooling only models can produce chilled water at the unit outlet at temperatures varying from +5°C to +18°C or chilled water/glycol solution at temperatures varying from -10°C to +18°C.

The Heat pump models can produce hot water at the unit outlet at temperatures varying from +20°C to +55°C.

Following assembly of the units in the factory:

1. the electrical circuits are tested.
2. refrigeration circuits receive their operational refrigerant charge and are subject to pressurized leak detection tests.
3. The **ECOi-W AQUA-Z** units are tested.

These tests are conducted to guarantee the correct operation and quality of our products.

5.1. NAME PLATE

 Contact in UK: Panasonic UK, a branch of Panasonic Marketing Europe GmbH Maxx 2, Western Road, Bracknell, Berkshire RG12 1RT, United Kingdom Manufactured by Panasonic Heating & Ventilation Air-Conditioning France SAS Route de Verneuil 27570 Tillières-sur-Avre FRANCE	HEAT PUMP CHILLER		ECOi-W AQUA-Z	← Model name
	P-AQAZ0075H.1P-SP.CG.AVM			← Model designation
	CP-AQAZ0075H			
	SN : 1008114270-01			← Serial number
Power source 400V/3~/50Hz		I_{max} A	I_{start} A	
Nominal waterflow l/h	P_{max} Hydro MPa	IP 24	Year	CE 0062
kW	kW	Made in France	2024	
R32 fluid group : I C1 : kg	GWP 675 Authorized Representative in the UE Panasonic Marketing Europe GmbH Panasonic Testing Centre Winsbergweg 15, 22525 Hamburg Germany			PS - high side MPa
				TS max/min -/-°C

5.2. MODELS DESIGNATION



REP.	Description	
①	Size	<p>P-AQAZ0070H :size 70 - Heat pump P-AQAZ0075H :size 75 - Heat pump P-AQAZ0085H :size 85 - Heat pump P-AQAZ0100H :size 100 - Heat pump P-AQAZ0115H :size 115 - Heat pump P-AQAZ0130H :size 130 - Heat pump</p> <p>P-AQAZ0070C :size 70 - Cooling only P-AQAZ0075C :size 75 - Cooling only P-AQAZ0085C :size 85 - Cooling only P-AQAZ0100C :size 100 - Cooling only P-AQAZ0115C :size 115 - Cooling only P-AQAZ0130C :size 130 - Cooling only</p>
②	Hydraulic circuit	<p>Empty: Without pump 1P-SP: Single pump standard pressure 1P-HP: Single pump high pressure</p> <p>2P-SP: Double pump standard pressure 2P-HP: Double pump high pressure</p>
③	Acoustics	<p>STD: Standard S: Super Low Noise</p> <p>CJ: Compressor Jacket</p>
④	Fan type	<p>AC: Standard AC fans</p> <p>EC: EC fans HPF: High pressure fans</p>
⑤	Option	<p>CG: Outdoor coil protection grid EPO: Finned coil treatment - Epoxy WPS: Low water pressure sensor AVS: Spring dampers AVM: Rubber pads VI: Water isolation valves KM: Refrigerant gauge T: Buffer tank SS: Soft Starter PFC: Power factor capacitor</p> <p>CC: Container transport VS: Variable pump triple speed / constant ΔT VS +: Variable pump triple speed / Variable pump constant outlet pressure / constant ΔT / constant ΔP DES: Desuperheater EH12: Electric heating 12kW EH24: Electric heating 24kW EH36: Electric heating 36kW 4G: 4G Modem</p>

The nameplate on the machine provides the complete reference and ensures that the unit matches the model that was ordered. It also includes the following information:

- Overall information
 - ✓ Serial number
 - ✓ Year of manufacture
 - ✓ IP protection rating
- Electrical data
 - ✓ Supply voltage
 - ✓ Maximum operating intensity
 - ✓ Starting current
- Thermodynamic data
 - ✓ Type of refrigerant fluid
 - ✓ Refrigerant load in each circuit
 - ✓ Service pressure in the cooling circuit
 - ✓ Service temperatures in the cooling circuit
- Hydraulic data
 - ✓ Nominal flow rate
 - ✓ Maximal water pressure

6. CONTENTS OF PACKAGE

- 1 ECOi-W AQUA-Z
- 1 Water filter
- 1 Bag with the documentation

6.1. OPTIONAL ACCESSORIES

Anti-vibration rubber pads Isolating valve Hydraulic pressure transducer
 Spring pads Lack of water pressure switch

On opening the box, check that all of the accessories required for installation are present.



CAUTION

The packaging around the ECOi-W AQUA-Z unit must be opened in an outdoor area in case any refrigerant has leaked out in transit.

7. DIMENSIONS

SEE APPENDIX

8. WEIGHT

8.1. NET WEIGHT

		P-AQAZ0070	P-AQAZ0075	P-AQAZ0085	P-AQAZ0100	P-AQAZ0115	P-AQAZ0130
Without pump	kg	621	637	701	731	813	815
Single pump	1P-SP	kg	+33	+33	+41	+41	+44
	1P-HP	kg	+34	+34	+44	+44	+44
Double pump	2P-SP	kg	+44	+44	+63	+63	+71
	2P-HP	kg	+47	+47	+70	+70	+74
Fans	EC	kg	+25	+25	+25	+25	+25
	HPF	kg	+33	+33	+33	+33	+33
S version	kg	+21	+21	+21	+21	+21	+21
Desuperheater	kg	+12	+12	+12	+12	+12	+12
Buffer tank	without electric heating coil	kg	+115*	+115*	+115*	+115*	+115*
	with electric heating coil	kg	+120*	+120*	+121*	+121*	+121*

* including extra metal frame.



INFORMATION The values are for information only. The correct values are shown on the unit nameplate.

ECOi-W AQUA-Z 70-130

8.2. GRAVITY CENTER POSITION

8.2.1. WITHOUT BUFFER TANK

		P-AQAZ0070	P-AQAZ0075	P-AQAZ0085	P-AQAZ0100	P-AQAZ0115	P-AQAZ0130
X _G	mm	970	956	986	968	947	944
Y _G	mm	521	530	571	561	610	619
Z _G	mm	893	893	978	966	964	964

ECOi-W AQUA-Z 70/75




ECOi-W AQUA-Z 85/100/115/130



8.2.2. WITH BUFFER TANK AND DOUBLE PUMP

		P-AQAZ0070	P-AQAZ0075	P-AQAZ0085	P-AQAZ0100	P-AQAZ0115	P-AQAZ0130
X _G	mm	1 225	1 208	1 215	1 195	1 163	1 162
Y _G	mm	512	520	532	526	568	568
Z _G	mm	823	818	900	892	892	891

**ECOi-W AQUA-Z 70/75
WITH BUFFER TANK**

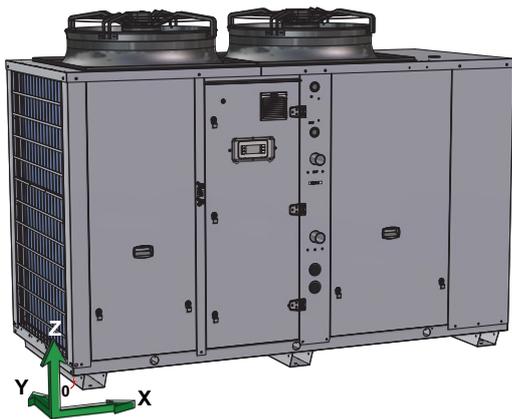

**ECOi-W AQUA-Z 85/100/115/130
WITH BUFFER TANK**



8.3. GENERAL MAINTENANCE

The method of handling depends on the model of **ECOi-W AQUA-Z** and its final destination.

- Take care to avoid any rough handling or impacts when unloading and moving the appliance.
- Before hoisting into position, test lift to insure stability and balance. Avoid twisting or uneven lifting of the units.
- The units shall be carefully inspected before unit installation to make sure this has not happened.
- If these sections have been inspected before leaving the factory. It is therefore important to insure that no bolts, screws or other fixing system are loosened or missing before the commissioning.



CAUTION

Never submit the metal work (panels, posts) of the **ECOi-W AQUA-Z** to handling constraints, as only its base is designed for that purpose.



CAUTION

Do not tilt the **ECOi-W AQUA-Z** 45° or more during handling, as it would be damaged irreversibly.



CAUTION


Never move the **ECOi-W AQUA-Z** on rollers.



CAUTION

When handling the **ECOi-W AQUA-Z**, beware not to damage the finned coil block. Protect it with cardboard or particle panels.

8.3.1. HANDLING WITH A FORKLIFT

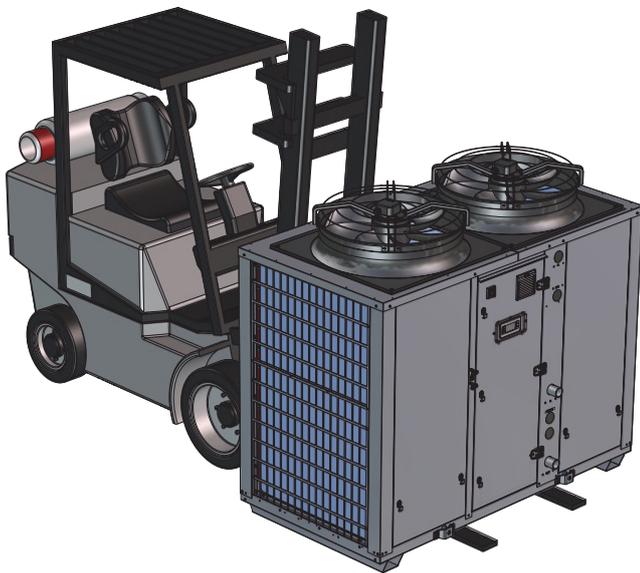

When a forklift is used to handle the **ECOi-W AQUA-Z 70/75/85/100/115/130** units, lift them only along their width.

Place a safety wedge between the unit base and the fork lift truck to avoid damaging the unit's structure and casing.



ECOi-W AQUA-Z 70-130

8.3.2. HANDLING BY SLINGING

Lifting is also possible by slinging.

Lifting brackets allow you to fit lifting shackles.

A spreader must be used to prevent damage to the machine edges.

		P-AQAZ0070	P-AQAZ0075	P-AQAZ0085	P-AQAZ0100	P-AQAZ0115	P-AQAZ0130
Shackle hole diameter	mm	24	24	24	24	24	24



CAUTION Slings must never touch the unit casing of ECOi-W AQUA-Z.

ECOi-W AQUA-Z 70/75/85/100/115/130



ECOi-W AQUA-Z 70/75/85/100/115/130 WITH BUFFER TANK



9. TECHNICAL SPECIFICATIONS

9.1. PHYSICAL CHARACTERISTICS

9.1.1. ECOI-W AQUA-Z C - AC VERSION

		70 AC	75 AC	85 AC	100 AC	115 AC	130 AC	
Cooling capacity (1)	kW	69.7	78.2	82.8	100.0	116.0	126.0	
Power input (1)	kW	22.4	24.0	26.8	31.4	37.4	42.3	
Total EER 100% (1)		3.11	3.26	3.09	3.18	3.10	2.98	
SEER (2)		4.61	4.72	4.45	4.88	4.59	4.43	
η_{sc} (2)	%	181.3	185.6	175.0	192.3	180.5	174.2	
ELECTRICAL POWER SUPPLY								
Power supply		400V/3~/50Hz						
Startup type		Direct						
Maximum operating current	A	60	69	75	87	94	104	
Startup current	Without Soft Starter	A	200	209	215	326	333	343
	With Soft Starter	A	156	160	168	234	246	257
REFRIGERANT								
Type		R32						
Number of refrigerant circuit		1						
Charge	kg	9.5	10.5	11.5	14	15	15.0	
CO ₂ equivalent charge	kg	6 413	7 088	7 763	9 450	10 125	10 125	
COMPRESSORS								
Number / Type		2 / Scroll						
Part load steps	%	0/40/60/100	0/46/54/100	0/50/50/100	0/35/65/100	0/44/56/100	0/50/50/100	
Crankcase heater	W	70/66	66/66	66/66	66/66	66/66	66/66	
PLATE HEAT EXCHANGER								
Number / Type		1 / Plate						
Cooling mode	Water flow	m ³ /h	11.99	13.45	14.24	17.2	19.95	21.67
	Water pressure drop	kPa	33.0	38.2	22.6	33.4	46.5	58.0
Water volume	L	8.4	8.4	11.7	11.7	11.7	11.7	
Antifreeze heater	W	2 x 30	2 x 30	2 x 30	2 x 30	2 x 30	2 x 30	
FINNED COIL								
Number		2	2	2	2	2	2	
Frontal surface	m ²	5.6	5.6	6.4	6.4	6.4	6.4	
Number of rows		2	2	2	2	3	3	
FAN								
Number		2	2	2	2	2	2	
Air flow	m ³ /h	30 000	30 000	41 300	41 300	41 300	41 300	
Rotational speed	rpm	690	690	870	870	870	870	
Power input each fan	kW	1.0	1.0	2.1	2.1	1.6	1.6	
WATER CONNECTIONS								
Plate heat exchanger	Type		Male gas threaded					
	Inlet diameter	inch	2"	2"	2"1/2	2"1/2	2"1/2	2"1/2
	Outlet diameter	inch	2"	2"	2"1/2	2"1/2	2"1/2	2"1/2
Desuperheater	Type		Male gas threaded					
	Inlet diameter	inch	1"1/4	1"1/4	1"1/4	1"1/4	1"1/4	1"1/4
	Outlet diameter	inch	1"1/4	1"1/4	1"1/4	1"1/4	1"1/4	1"1/4
BUFFER TANK (OPTION)								
Volume	L	300	300	300	300	300	300	
DIMENSIONS								
Length without / with tank	mm	2 180/2 680	2 180/2 680	2180/2680	2180/2680	2180/2680	2180/2680	
Width	mm	1 160	1 160	1 160	1 160	1 160	1 160	
Height	mm	1 986	1 986	2 286	2 286	2 286	2 286	
WEIGHT								
Operating weight (STD)	kg	629	645	713	743	825	827	
ACOUSTIC DATA								
Sound power level	dB(A)	81.3	81.3	84.4	86.0	87.0	87.4	
Sound pressure level (*)	dB(A)	49.5	49.5	52.5	54.1	55.1	55.5	

(1) According EN14511: chilled water inlet/outlet temperature: 12/7°C, outdoor ambient temperature 35°C DB.

(*) Sound pressure levels calculated at 10 meters. Sound pressure levels refer to ISO 3744 standard, parallelepiped shape.

(2) According EN14825 and Following COMMISSION REGULATION (EU) 2016/2281.

		70 EC/EC S	75 EC/EC S	85 EC/EC S	100 EC/EC S	115 EC/EC S	130 EC/EC S	
Cooling capacity (1)	kW	69.7	78.2	82.8	100.0	116.0	126.0	
Power input (1)	kW	21.2	22.9	25.6	30.3	36.2	41.1	
Total EER 100% (1)		3.29	3.41	3.23	3.30	3.20	3.07	
SEER (2)		5.19	5.29	4.96	5.19	5.01	4.71	
η_{sc} (2)	%	204.7	208.7	195.6	204.9	197.3	185.6	
ELECTRICAL POWER SUPPLY								
Power supply		400V/3~/50Hz						
Startup type		Direct						
Maximum operating current	A	62	71	74	86	93	103	
Startup current	Without Soft Starter	A	202	211	214	325	332	342
	With Soft Starter	A	158	162	167	233	245	256
REFRIGERANT								
Type		R32						
Number of refrigerant circuit		1						
Charge	kg	9.5	10.5	11.5	14	15	15.0	
CO ₂ equivalent charge	kg	6 413	7 088	7 763	9 450	10 125	10 125	
COMPRESSORS								
Number / Type		2 / Scroll						
Part load steps	%	0/40/60/100	0/46/54/100	0/50/50/100	0/35/65/100	0/44/56/100	0/50/50/100	
Crankcase heater	W	70/66	66/66	66/66	66/66	66/66	66/66	
PLATE HEAT EXCHANGER								
Number / Type		1 / Plate						
Cooling mode	Water flow	m ³ /h	11.99	13.45	14.24	17.2	19.95	21.67
	Water pressure drop	kPa	33.0	38.2	22.6	33.4	46.5	58.0
Water volume	L	8.4	8.4	11.7	11.7	11.7	11.7	
Antifreeze heater	W	2 x 30	2 x 30	2 x 30	2 x 30	2 x 30	2 x 30	
FINNED COIL								
Number		2	2	2	2	2	2	
Frontal surface	m ²	5.6	5.6	6.4	6.4	6.4	6.4	
Number of rows		2	2	2	2	3	3	
FAN								
Number		2	2	2	2	2	2	
Air flow	m ³ /h	30 000	30 000	41 300	41 300	41 300	41 300	
Rotational speed	rpm	620	620	780	780	780	780	
Power input each fan	kW	0.6	0.6	0.8	0.8	1.0	1.0	
WATER CONNECTIONS								
Plate heat exchanger	Type		Male gas threaded					
	Inlet diameter	inch	2"	2"	2"1/2	2"1/2	2"1/2	2"1/2
	Outlet diameter	inch	2"	2"	2"1/2	2"1/2	2"1/2	2"1/2
Desuperheater	Type		Male gas threaded					
	Inlet diameter	inch	1"1/4	1"1/4	1"1/4	1"1/4	1"1/4	1"1/4
	Outlet diameter	inch	1"1/4	1"1/4	1"1/4	1"1/4	1"1/4	1"1/4
BUFFER TANK (OPTION)								
Volume	L	300	300	300	300	300	300	
DIMENSIONS								
Length without / with tank	mm	2 180/2 680	2 180/2 680	2180/2680	2180/2680	2180/2680	2180/2680	
Width	mm	1 160	1 160	1 160	1 160	1 160	1 160	
Height	mm	2 034	2 034	2 334	2 334	2 334	2 334	
WEIGHT								
Operating weight (STD)	kg	650	666	846	848	1 309	1 323	
ACOUSTIC DATA								
Sound power level	dB(A)	78.3	78.2	81.7	83.2	84.0	84.4	
Sound pressure level (*)	dB(A)	46.5	46.4	49.8	51.3	52.1	52.5	
Sound power level (EC / S)	dB(A)	89.2	89.3	89.3	89.7	90.0	90.2	
Sound pressure level (EC / S) (*)	dB(A)	57.4	57.5	57.4	57.8	58.1	58.3	

(1) According EN14511: chilled water inlet/outlet temperature: 12/7°C, outdoor ambient temperature 35°C DB. (*) Sound pressure levels calculated at 10 meters. Sound pressure levels refer to ISO 3744 standard, parallelepiped shape.

(2) According EN14825 and Following COMMISSION REGULATION (EU) 2016/2281.

9.1.3. ECOi-W AQUA-Z H - AC VERSION

		70 AC	75 AC	85 AC	100 AC	115 AC	130 AC
Cooling capacity (1)	kW	69.0	77.4	82.0	99.3	115.0	125.0
Power input (1)	kW	22.6	24.3	27.1	31.8	37.7	42.7
Total EER 100% (1)		3.05	3.19	3.03	3.12	3.05	2.93
SEER (2)		4.51	4.61	4.33	4.77	4.44	4.23
η_{sc} (2)	%	177.5	181.5	170.3	187.7	174.6	166.0
Heating capacity (3)	kW	71.8	78.5	86.5	107.6	122.3	137.5
Power input (3)	kW	22.1	24.2	27.2	32.5	37.0	41.0
Low temperature application W30/35°C	SCOP (4)	3.47	3.65	3.60	3.64	3.66	3.72
	η_{sh} (4)	135.6	143.2	141.2	142.5	143.2	145.7
	Energy class SCOP	A+	A+	A+	A+	A+	A+
ELECTRICAL POWER SUPPLY							
Power supply	400V/3~50Hz						
Startup type	Direct						
Maximum operating current	A	60	69	75	87	94	104
Startup current	without Soft Starter	A	200	209	215	326	333
	with Soft Starter	A	156	160	168	234	246
REFRIGERANT							
Type	R32						
Number of refrigerant circuit	1						
Charge	kg	9.5	11	11.5	14	15	15
CO ₂ equivalent charge	kg	6 413	7 425	7 763	9 450	10 125	10 125
COMPRESSORS							
Number / Type	2 / Scroll						
Part load steps	%	0/40/60/100	0/46/54/100	0/50/50/100	0/35/65/100	0/44/56/100	0/50/50/100
Crankcase heater	W	70/66	66/66	70/66	66/66	66/66	66/66
PLATE HEAT EXCHANGER							
Number / Type	1 / Plate						
Cooling mode	Water flow	m ³ /h	11.87	13.31	14.11	17.08	19.78
	Water pressure drop	kPa	33.0	38.2	22.6	33.4	46.5
Heating mode	Water flow	m ³ /h	12.47	13.64	15.03	18.69	21.24
	Water pressure drop	kPa	34.4	42.8	23.6	35.3	48.4
Water volume	L	8.4	8.4	11.7	11.7	11.7	11.7
Antifreeze heater	W	2 x 30	2 x 30	2 x 30	2 x 30	2 x 30	2 x 30
FINNED COIL							
Number	2						
Frontal surface	m ²	5.6	5.6	6.4	6.4	6.4	6.4
Number of rows	2						
FAN							
Number	1						
Air flow	m ³ /h	30 000	30 000	41 300	41 300	41 300	41 300
Rotational speed	rpm	620	620	780	780	780	780
Power input each fan	kW	0.6	0.6	0.8	0.8	1.0	1.0
WATER CONNECTIONS							
Plate heat exchanger	Type	Male gas threaded					
	Inlet diameter	inch	2"	2"	2"	2"	2"
	Outlet diameter	inch	2"	2"	2"	2"	2"
Desuperheater	Type	Male gas threaded					
	Inlet diameter	inch	1"1/4	1"1/4	1"1/4	1"1/4	1"1/4
	Outlet diameter	inch	1"1/4	1"1/4	1"1/4	1"1/4	1"1/4
BUFFER TANK (OPTION)							
Volume	L	300	300	300	300	300	300
DIMENSIONS							
Length without / with tank	mm	2 180/2 680	2 180/2 680	2 180/2 680	2 180/2 680	2 180/2 680	2 180/2 680
Width	mm	1 160	1 160	1 160	1 160	1 160	1 160
Height	mm	1 986	1 986	2 286	2 286	2 286	2 286
WEIGHT							
Operating weight (STD)	kg	629	645	713	743	825	827
ACOUSTIC DATA							
Sound power level (EC)	dB(A)	81.3	81.3	84.4	86.0	87.0	87.4
Sound pressure level (EC) (*)	dB(A)	49.5	49.5	52.5	54.1	55.1	55.5

(1) According EN14511: chilled water inlet/outlet temperature: 12/7°C, outdoor ambient temperature 35°C DB.

(2) According EN14825 and Following COMMISSION REGULATION (EU) 2016/2281.

(3) According EN14511: warm water inlet/outlet temperature: 40/45°C, outdoor ambient temperature 7°C DB/6°C WB.

(4) According EN14825 and Following COMMISSION REGULATION (EU) No 813/2013: Climate average - low temperature application.

(*) Sound pressure levels calculated at 10 meters. Sound pressure levels refer to ISO 3744 standard, parallelepiped shape.

		70 EC/EC S	75 EC/EC S	85 EC/EC S	100 EC/EC S	115 EC/EC S	130 EC/EC S
Cooling capacity (1)	kW	69.0	77.4	82.0	99.4	115.0	125.0
Power input (1)	kW	21.4	23.1	25.9	30.6	36.6	41.6
Total EER 100% (1)		3.22	3.35	3.17	3.25	3.14	3.00
SEER (2)		5.04	4.99	4.80	4.93	4.82	4.51
η_{sc} (2)	%	198.8	196.7	188.9	194.1	190.0	177.2
Heating capacity (3)	kW	72.0	80.2	86.7	108.3	122.3	137.5
Power input (3)	kW	21.0	23.5	26.3	31.4	35.7	40.2
Low temperature application W30/35°C	SCOP (4)	3.71	3.80	4.02	4.10	4.02	3.97
	η_{sh} (4)	145.3	148.8	157.8	160.9	157.9	155.9
	Energy class SCOP	A+	A+	A++	A++	A+	A++
ELECTRICAL POWER SUPPLY							
Power supply		400V/3~50Hz					
Startup type		Direct					
Maximum operating current	A	60	69	74	86	93	103
Startup current	without Soft Starter	A	200	209	214	325	332
	with Soft Starter	A	156	160	167	233	245
REFRIGERANT							
Type		R32					
Number of refrigerant circuit		1					
Charge	kg	9.5	11	11.5	14	15	15
CO ₂ equivalent charge	kg	6 413	7 425	7 763	9 450	10 125	10 125
COMPRESSORS							
Number / Type		2 / Scroll					
Part load steps	%	0/40/60/100	0/46/54/100	0/50/50/100	0/35/65/100	0/44/56/100	0/50/50/100
Crankcase heater	W	70/66	66/66	66/66	66/66	66/66	66/66
PLATE HEAT EXCHANGER							
Number / Type		1 / Plate					
Cooling mode	Water flow	m ³ /h	11.87	13.31	14.11	17.08	19.78
	Water pressure drop	kPa	33.0	38.2	22.6	33.4	46.5
Heating mode	Water flow	m ³ /h	12.51	13.93	15.06	18.81	21.24
	Water pressure drop	kPa	34.4	42.8	23.6	35.3	48.4
Water volume	L	8.4	8.4	11.7	11.7	11.7	11.7
Antifreeze heater	W	2 x 30	2 x 30	2 x 30	2 x 30	2 x 30	2 x 30
FINNED COIL							
Number		2	2	2	2	2	2
Frontal surface	m ²	5.6	5.6	6.4	6.4	6.4	6.4
Number of rows		2	2	2	2	3	3
FAN							
Number		1	1	2	2	2	2
Air flow	m ³ /h	30 000	30 000	41 300	41 300	41 300	41 300
Rotational speed	rpm	620	620	780	780	780	780
Power input each fan	kW	0.6	0.6	0.8	0.8	1.0	1.0
WATER CONNECTIONS							
Plate heat exchanger	Type		Male gas threaded				
	Inlet diameter	inch	2"	2"	2"	2"	2"
	Outlet diameter	inch	2"	2"	2"	2"	2"
Desuperheater	Type		Male gas threaded				
	Inlet diameter	inch	1"1/4	1"1/4	1"1/4	1"1/4	1"1/4
	Outlet diameter	inch	1"1/4	1"1/4	1"1/4	1"1/4	1"1/4
BUFFER TANK (OPTION)							
Volume	L	300	300	300	300	300	300
DIMENSIONS							
Length without / with tank	mm	2 180/2 680	2 180/2 680	2 180/2 680	2 180/2 680	2 180/2 680	2 180/2 680
Width	mm	1 160	1 160	1 160	1 160	1 160	1 160
Height	mm	1 986	1 986	2 286	2 286	2 286	2 286
WEIGHT							
Operating weight (STD)	kg	629	645	713	743	825	827
ACOUSTIC DATA							
Sound power level (EC)	dB(A)	81.3	81.3	84.4	86.0	87.0	87.4
Sound pressure level (EC) (*)	dB(A)	49.5	49.5	52.5	54.1	55.1	55.5
Sound power level (EC / S)	dB(A)	89.2	89.3	89.3	89.7	90.0	90.2
Sound pressure level (EC / S) (*)	dB(A)	57.4	57.5	57.4	57.8	58.1	58.3

- (1) According EN14511: chilled water inlet/outlet temperature: 12/7°C, outdoor ambient temperature 35°C DB.
- (2) According EN14825 and Following COMMISSION REGULATION (EU) 2016/2281.
- (3) According EN14511: warm water inlet/outlet temperature: 40/45°C, outdoor ambient temperature 7°C DB/6°C WB.
- (4) According EN14825 and Following COMMISSION REGULATION (EU) No 813/2013: Climate average - low temperature application.
- (*) Sound pressure levels calculated at 10 meters. Sound pressure levels refer to ISO 3744 standard, parallelepiped shape.

9.2. REFRIGERATION SPECIFICATIONS

9.2.1. REFRIGERANT CIRCUIT DIAGRAM

SEE APPENDIX

9.2.2. REFRIGERANT CHARGE



CAUTION

This equipment contains fluorinated gas with greenhouse gas effects covered by the Kyoto agreement.

The type and quantity of refrigerating fluid per circuit are indicated on the product plate.

The installer and end user will get informed on local environmental regulations for the installation, operation and disposal of the equipment ; more particularly, for the collection of substances hazardous for the environment (refrigerating fluid, oil, antifreeze, etc.). A refrigerating fluid, whatever it is, must not be vented. Refrigerating fluids must be handled by skilled personnel.



CAUTION

ECOi-W AQUA-Z units use the R32 HFC refrigerant which is a flammable gas classified A2L (Slightly flammable). This gas is subject to significant safety regulations due to its flammability, so some precautions are required to prevent accidental build-up of refrigerant, especially during the unit charge. Manufacturers recommend use of extract fans while charging, particularly if the outdoor unit is used in an enclosed area. The standard EN378 defines requirements for safe concentration levels of the refrigerants.



CAUTION

According to the Pressure Equipment Directive (PED) 2014/68/UE and the harmonized standard EN378 (1 to 4), the **ECOi-W AQUA-Z** units are ranked Category III.

9.2.3. FLUOROCARBON GAS REGULATIONS

The EC No. 517/2014 regulation covering fluorinated greenhouse gases requires of refrigeration equipment operators to comply with the following five obligations:

1. Installation, servicing, maintenance as well as checking the sealing must be carried out by qualified personnel.
2. The fluorinated gas must be recovered during servicing and maintenance as well as the end of the installation.
3. All the necessary measures must be taken to prevent the leakage of fluorinated gases and any leaks must be repaired as rapidly as possible.
4. Regular checks on any leaks must be performed according to the following conditions:
 - ✓ for equipment containing fluorinated greenhouse gases in quantities greater than or equal to the equivalent of 5 tonnes of CO₂ but less than the equivalent of 50 tonnes of CO₂: at least every twelve months or, if a leak detection system is installed, at least every twenty-four months
 - ✓ for equipment containing fluorinated greenhouse gases in quantities greater than or equal to the equivalent of 50 tonnes of CO₂ but less than the equivalent of 500 tonnes of CO₂: at least every six months or, if a leak detection system is installed, at least every twelve months
 - ✓ for equipment containing fluorinated greenhouse gases in quantities greater than or equal to the equivalent of 500 tonnes of CO₂: at least every three months or, if a leak detection system is installed, at least every six months.
5. A document grouping a description of all the operations carried out on the cooling circuit must be drafted and conserved.



CAUTION

Non-compliance with one of these obligations constitutes an offense and can result in financial penalties.

Furthermore, compliance of the equipment with the fluorinated gases regulation must be proven to the insurance company.

9.2.3.1. CALCULATING GREENHOUSE GAS QUANTITIES

$$\text{Greenhouse gas quantity (kg of CO}_2\text{)} = \text{Quantity of gas (kg) x gas' GWP}$$

Quantity of greenhouse gas expressed in weight (kg) and CO₂ equivalent

Quantity of gas: amount of gas contained in the machine in kg (see ID plate)

GWP (Global Warming Potential) of the gas contained in the machine (see ID plate)

➤ **GWP for the R32 = 675**

9.3. ELECTRIC SPECIFICATIONS

9.3.1. ECOi-W AQUA-Z WITH AC FANS

			P-AQAZ0070	P-AQAZ0075	P-AQAZ0085	P-AQAZ0100	P-AQAZ0115	P-AQAZ0130
Power supply			400V / 3~ / 50Hz +/- 10%					
Without pump	Maximum current	A	57	61	69	81	94	104
	Total starting current (without soft starter)	A	212	216	224	320	332	343
	Total starting current (with soft starter)	A	156	160	168	234	246	257
With pump 1P-SP 2P-SP	Maximum current	A	59	64	72	85	98	109
	Total starting current (without soft starter)	A	214	219	227	323	337	347
	Total starting current (with soft starter)	A	159	163	172	237	251	261
With pump 1P-HP 2P-HP	Maximum current	A	60	64	75	87	100	110
	Total starting current (without soft starter)	A	215	219	230	326	338	348
	Total starting current (with soft starter)	A	159	164	174	240	252	262

9.3.2. ECOi-W AQUA-Z WITH EC/HPF FANS

			P-AQAZ0070	P-AQAZ0075	P-AQAZ0085	P-AQAZ0100	P-AQAZ0115	P-AQAZ0130
Power supply			400V / 3~ / 50Hz +/- 10%					
Without pump	Maximum current	A	59	63	68	81	93	103
	Total starting current (without soft starter)	A	214	218	223	319	331	342
	Total starting current (with soft starter)	A	158	162	167	233	245	256
With pump 1P-SP 2P-SP	Maximum current	A	61	65	72	84	98	108
	Total starting current (without soft starter)	A	216	220	227	322	336	346
	Total starting current (with soft starter)	A	160	165	171	236	250	260
With pump 1P-HP 2P-HP	Maximum current	A	62	66	74	86	99	109
	Total starting current (without soft starter)	A	217	221	229	325	337	348
	Total starting current (with soft starter)	A	161	165	173	239	251	262

9.3.3. ELECTRIC HEATING COIL

			P-AQAZ0070	P-AQAZ0075	P-AQAZ0085	P-AQAZ0100	P-AQAZ0115	P-AQAZ0130
Power supply			400V / 3~ / 50Hz					
Low power heating	Power	kW	12	12	24	24	24	24
	Maximum intensity	A	19	19	38	38	38	38
High power heating	Power	kW	24	24	36	36	36	36
	Maximum intensity	A	38	38	57	57	57	57


9.4. OPERATING LIMITS

9.4.1. ECOi-W AQUA-Z H HEATING MODE

Models ECOi-W AQUA-Z H			P-AQAZ0070				P-AQAZ0075				P-AQAZ085			
			AC		EC		AC		EC		AC		EC	
			Min.	Max.	Min.	Max.	Min.	Max.	Min.	Max.	Min.	Max.	Min.	Max.
Water	Water outlet temperature	°C	See diagrams											
	Water ΔT **	K	3.0	7.0	3.0	7.0	3.0	7.0	3.0	7.0	3.0	7.0	3.0	7.0
	Flow rate **	m³/h	8.82	20.58	8.85	20.64	9.64	22.50	9.85	22.98	10.63	24.80	10.65	24.85
Air temperature		°C	See diagrams											

Models ECOi-W AQUA-Z H			P-AQAZ0110				P-AQAZ0115				P-AQAZ0130			
			AC		EC		AC		EC		AC		EC	
			Min.	Max.	Min.	Max.	Min.	Max.	Min.	Max.	Min.	Max.	Min.	Max.
Water	Water outlet temperature	°C	See diagrams											
	Water ΔT **	K	3.0	7.0	3.0	7.0	3.0	7.0	3.0	7.0	3.0	7.0	3.0	7.0
	Flow rate **	m³/h	9.32	13.22	13.30	31.03	15.03	35.06	15.02	35.05	16.90	39.42	16.89	39.42
Air temperature		°C	See diagrams											

** considered at nominal unit capacity

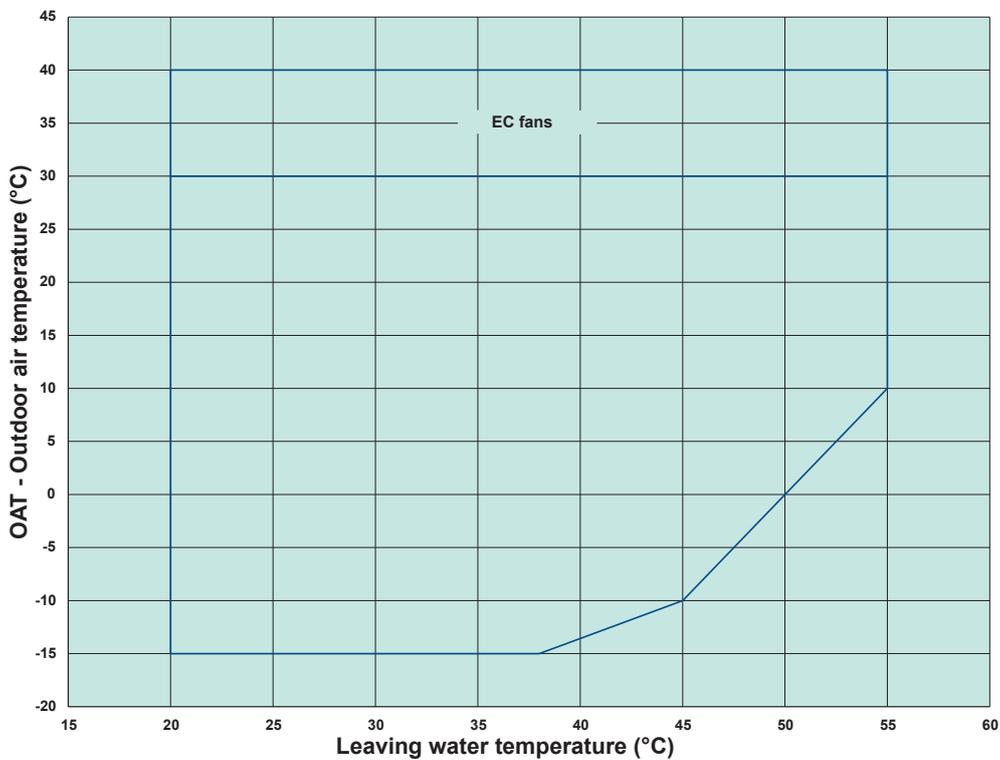

9.4.2. ECOi-W AQUA-Z H COOLING MODE

Models ECOi-W AQUA-Z H			P-AQAZ0070				P-AQAZ0075				P-AQAZ085			
			AC		EC		AC		EC		AC		EC	
			Min.	Max.	Min.	Max.	Min.	Max.	Min.	Max.	Min.	Max.	Min.	Max.
Water	Water outlet temperature *	°C	See diagrams											
	Water ΔT **	K	3.0	7.0	3.0	7.0	3.0	7.0	3.0	7.0	3.0	7.0	3.0	7.0
	Flow rate **	m ³ /h	8.48	19.78	8.48	19.78	9.51	22.19	9.51	22.19	10.07	23.51	10.07	23.51
Air temperature		°C	See diagrams											

Models ECOi-W AQUA-Z H			P-AQAZ0110				P-AQAZ0115				P-AQAZ0130			
			AC		EC		AC		EC		AC		EC	
			Min.	Max.	Min.	Max.	Min.	Max.	Min.	Max.	Min.	Max.	Min.	Max.
Water	Water outlet temperature *	°C	See diagrams											
	Water ΔT **	K	3.0	7.0	3.0	7.0	3.0	7.0	3.0	7.0	3.0	7.0	3.0	7.0
	Flow rate **	m ³ /h	12.20	28.47	12.21	28.49	14.13	32.97	14.13	32.97	15.36	35.83	15.36	35.83
Air temperature		°C	See diagrams											

* Below 5 °C, glycol is required.

** considered at nominal unit capacity


9.4.3. ECOi-W AQUA-Z C

Models ECOi-W AQUA-Z C			P-AQAZ0070				P-AQAZ0075				P-AQAZ085			
			AC		EC		AC		EC		AC		EC	
			Min.	Max.	Min.	Max.	Min.	Max.	Min.	Max.	Min.	Max.	Min.	Max.
Water	Water outlet temperature *	°C	See diagrams											
	Water ΔT **	K	3.0	7.0	3.0	7.0	3.0	7.0	3.0	7.0	3.0	7.0	3.0	7.0
	Flow rate **	m ³ /h	8.56	19.98	8.56	19.98	9.61	22.42	9.61	22.42	10.17	23.74	10.17	23.74
Air temperature		°C	See diagrams											

Models ECOi-W AQUA-Z C			P-AQAZ0110				P-AQAZ0115				P-AQAZ0130			
			AC		EC		AC		EC		AC		EC	
			Min.	Max.	Min.	Max.	Min.	Max.	Min.	Max.	Min.	Max.	Min.	Max.
Water	Water outlet temperature *	°C	See diagrams											
	Water ΔT **	K	3.0	7.0	3.0	7.0	3.0	7.0	3.0	7.0	3.0	7.0	3.0	7.0
	Flow rate **	m ³ /h	12.29	28.67	12.29	28.67	14.25	33.25	14.25	33.25	15.48	36.12	15.48	36.12
Air temperature		°C	See diagrams											

* Below 5 °C, glycol is required.

** considered at nominal unit capacity

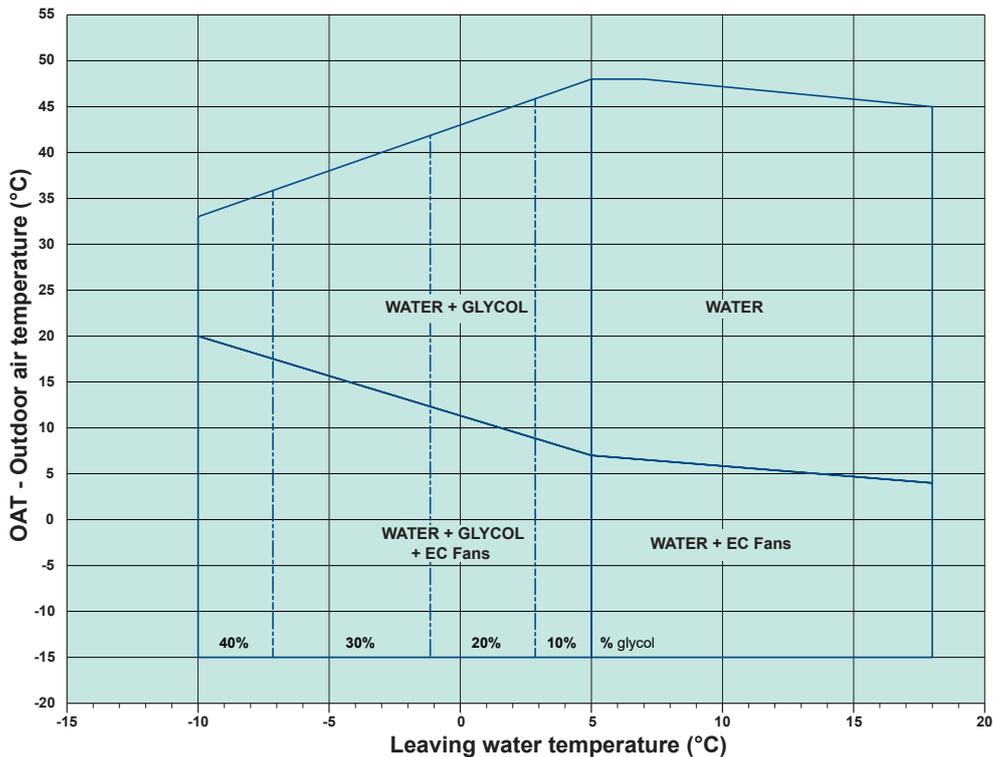

10. INSTALLATION



CAUTION

The unit is not designed to withstand weights or stresses from adjacent equipment, pipe work or constructions. Any foreign weight or stress on the unit structure could lead to a malfunction or a degradation with dangerous consequences for personnel and property. In such an event, the warranty shall be null and void.



CAUTION

The unit base shall be arranged as indicated in the manual. There could be a risk of personal injury or damage to property in the event of the unit being incorrectly supported.

10.1. SITING THE INSTALLATION

According to the standard EN378-1 §5.1, the **ECOi-W AQUA-Z** units are Access category "a" with a class III in terms of location.

The **ECOi-W AQUA-Z** must be installed outdoors with sufficient surrounding clearance to enable unobstructed air circulation through the appliance and access for maintenance work.

Refrigeration systems installed outdoors must be located in such a way that no refrigerant leakage can enter the building or endanger persons and property. The refrigerant must not be able to spill into a ventilation duct, under a door, a hatch or similar opening in the event of a leak. When a shelter is provided for refrigeration equipment situated in the open air, this shelter must be equipped with a natural or forced ventilation device.



INFORMATION

ECOi-W AQUA-Z units can also be installed in a machine room in accordance with local and national regulations and the standards of EN 378-3:2016. This regulation also applies to machines installed outside where any release of refrigerant may stagnate.



CAUTION

Do not expose the **ECOi-W AQUA-Z** to rejections from chimneys or vents. Fumes charged with soot or grease as well as acid rejections are likely to clog or damage the condenser irreversibly. This would cancel the warranty.

10.1.1. SITING DEPENDING ON PREVAILING WIND

In the case of the unit being sited in areas exposed to high winds, you must avoid the wind hitting the fan blowing surface areas directly to avoid any risk of recycling cooled air. Exchanger fan operation can be disrupted by strong winds, which can cause de-icing problems and fan malfunctions.



CAUTION

Unit operation depends on air temperature. Any recycling of air extracted by the fan lowers the air intake temperature across the exchanger fins and alters the standard operating conditions.

10.1.2. CONDENSATE WATER MANAGEMENT IN HEATING MODE

Depending on temperature and outdoor air humidity conditions, water vapour contained in the air can condense on the finned heat exchanger and even form ice under low outdoor temperature conditions (around $< 5^{\circ}\text{C}$). This condensate water and defrosted water runs off via outlets provided under the exchanger. To aid water run-off and avoid frozen water remaining in the appliance in winter, we recommend that it is mounted at a height of around 10cm off the ground. In this way, these water can run off freely and be absorbed into the ground or channelled to a basin built under the appliance in order to protect the environment.

In areas where outdoor temperatures fall below 1°C , the system can be equipped with a condensate anti-freeze protection system (e.g. a heated pipe sheath, Not supplied).

ECOi-W AQUA-Z 70-130

10.1.3. REDUCTION OF NOISE POLLUTION

In order to contain noise levels, we equip our appliances with quiet fans and encase the technical compartment in sound-proofed panels. However, noise levels can be reduced even further by taking a few installation precautions:

- Do not install the unit in enclosed or confined yards, narrow locations where noise may bounce off walls.
- Install the rubber pads supplied or anti-vibration pads (available as an option) under the appliance.
- Do not join the concrete slab supporting the appliance to the building structure (structure-borne noise transmission).
- Electrical and hydraulic connections to the unit must be flexible to avoid the transmission of vibrations.




INFORMATION

The operator must ensure that hearing protection (PPE and CPE) is properly implemented in the event of prolonged work near the unit.

10.2. CLEARANCE

During installation, it is important to leave sufficient clearance around the **ECOi-W AQUA-Z**.

These minimum clearance dimensions must be complied with to ensure correct operation of the unit, to enable the unit to be accessed and maintained, and, above all, to guarantee the safety of personnel.

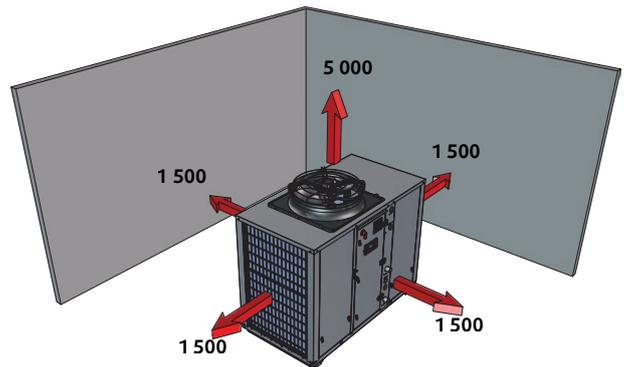

CAUTION

When several **ECOi-W AQUA-Z** units are installed, ensure proper clearance is implemented around the condensers specific to each machine.

10.3. ANCHORING TO THE GROUND


The surface of the floor or structure located under the **ECOi-AQUA-Z** must be flat, and with sufficient strength to withstand the unit's weight with its full liquid load, and occasional presence of maintenance equipment.

The **ECOi-W AQUA-Z** does not require anchoring on the foundations, except in regions exposed to a high earthquake risk or if the device is installed on a high level on a steel frame.


For normal applications, rigidity of the **ECOi-W AQUA-Z** and the positions of supports allow for an installation minimizing vibrations. However, the installers can use anti-vibration rubber pads (supplied in option).

When fitting anti-vibration pads, refer to the manual supplied with the kit.

**ECOi-W AQUA-Z
70/75/85/100/115/130**

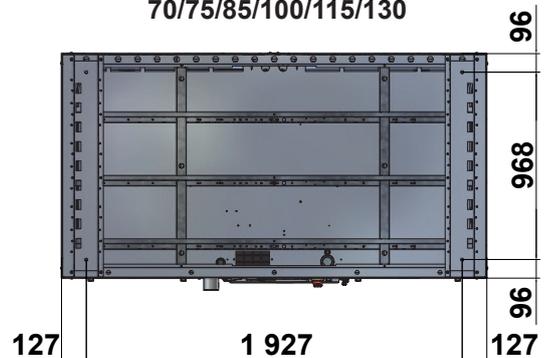

**ECOi-W AQUA-Z 70/75/85/100/115/130
WITH BUFFER TANK**

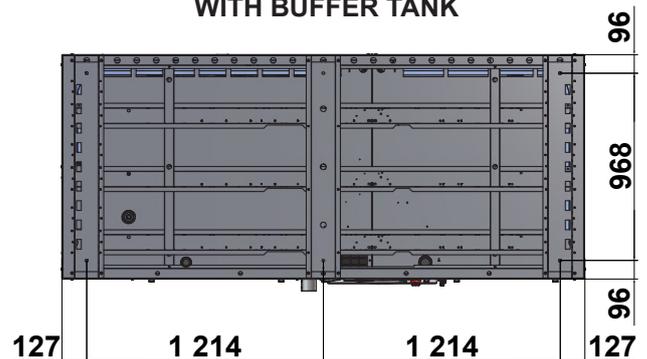


10.3.1. LOAD DISTRIBUTION



INFORMATION The load distribution is given for the unit in working order.


10.3.1.1. WITHOUT BUFFER TANK

		P-AQAZ0070	P-AQAZ0075	P-AQAZ0085	P-AQAZ0100	P-AQAZ0115	P-AQAZ0130
M	kg	621	637	701	731	813	815
X_G	mm	970	956	986	968	947	944
Y_G	mm	521	530	571	561	610	619
Z_G	mm	893	893	978	966	964	964
P1	kg	190	194	195	210	218	215
P2	kg	155	164	189	196	242	247
P3	kg	124	128	156	157	186	188
P4	kg	152	152	161	168	167	165

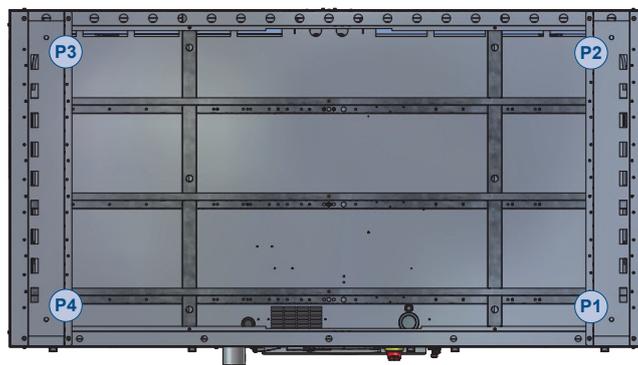

10.3.1.2. WITH BUFFER TANK AND DOUBLE PUMP

		P-AQAZ0070	P-AQAZ0075	P-AQAZ0085	P-AQAZ0100	P-AQAZ0115	P-AQAZ0130
M	kg	1 061	1 077	1 160	1 188	1 269	1 271
X_G	mm	1 547	1 530	1 514	1 492	1 448	1 447
Y_G	mm	455	462	475	472	507	507
Z_G	mm	714	712	779	776	784	783
P1	kg	193	196	229	234	250	250
P2	kg	133	135	154	158	168	168
P3	kg	126	128	156	159	171	171
P4	kg	169	171	158	162	173	174
P5	kg	253	257	233	239	255	255
P6	kg	186	189	230	236	252	253

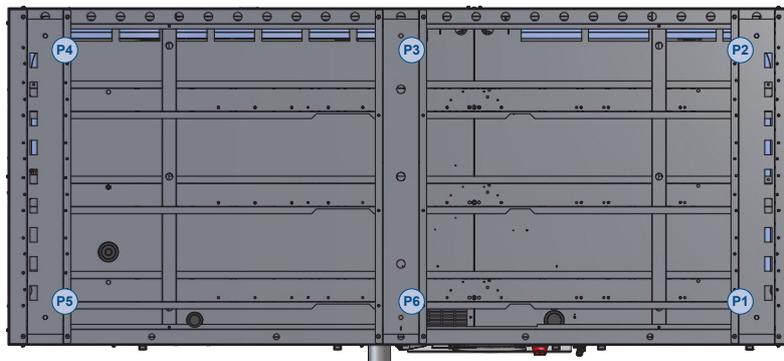

11. HYDRAULIC LINKS



CAUTION

When choosing and installing water pipes, you must consult and observe all current local standards, regulations and instructions.

11.1. MAIN HYDRAULIC CIRCUIT



CAUTION

The mains hydraulic circuit will provide a constant water flow on the refrigerating fluid/ water plate exchanger and in case of load variation.

You must design the pipe network with the minimum number of bends and keep the number of hydraulic components generating pressure drops to the strict minimum. This will reduce installation costs and ensure optimum system performance. The pipe network must include:

- A vibration elimination system (e.g.: link hoses) on all pipes connected to the appliance in order to reduce vibrations and noise transmitted to the building fabric.
- A balancing valve on the water outlet pipe in order to adjust the water flow.
- Stop cocks to isolate the hydraulic circuit during maintenance.
- Manual or automatic bleed valves at the highest point on the water circuit.
- Draining connectors at all low points to allow complete circuit draining.
- A circulation pump guaranteeing flow necessary for the operation of the **ECOi-W AQUA-Z** unit if the model does not already include a pump.
- A diaphragm expansion tank fitted with a safety and draining valve must be visible.
- A low water pressure sensor to secure the water pump against cavitation if the water pressure in the circuit decreases.
- The installation of thermometers and pressure gages on the heat exchanger inlet and outlet to facilitate day-to-day controls and system maintenance.
- An element ensuring ground continuity of all piping. An unbalance of grounding connection points can cause electrolytic corrosion.



CAUTION

The expansion tank must be dimensioned to be able to absorb an expansion corresponding to 2% total volume of water contained in the installation (exchanger, piping, installations and buffer tank, if present).



CAUTION

THE WARRANTY DOES NOT COVER DAMAGE DUE TO CORROSION RESULTING FROM ELECTROLYTIC PHENOMENA.


11.2. ANTI-CLOGGING PROTECTION



CAUTION

To avoid any risk of foreign bodies entering the appliance and to guarantee operating performance, IT IS IMPERATIVE TO INSTALL WATER FILTER on the ECOi-W AQUA-Z inlet pipe.

Failing that, **ECOi-W AQUA-Z's** heat plate exchanger would clog up soon after being commissioned. Proper operation of the **ECOi-W AQUA-Z** would be disturbed by a reduced water flow or the partial blockage of certain heat plates. The heat plate exchanger could be **IRREVERSIBLY** damaged if the water flow were not sufficiently high. A link smaller than or equal to 800µm is recommended

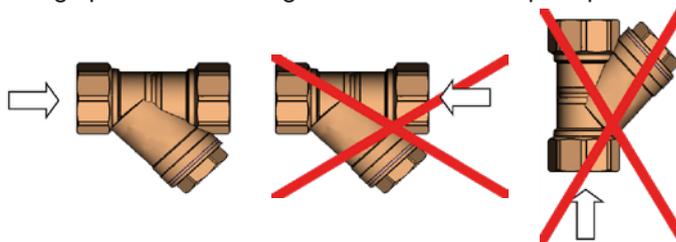

CAUTION

THE MANUFACTURER'S WARRANTY IS VOID IF THE FILTER SUPPLIED WITH THE ECOi-W AQUA-Z IS NOT INSTALLED TO PROTECT THE APPLIANCE

11.3. MINIMUM WATER VOLUME REQUIREMENTS

To ensure that the system operates correctly you must use suitably sized and properly routed pipes for the hydraulic links between the **ECOi-W AQUA-Z** and the mains network. Proper operation of the regulation and safety devices is ensured only when the water volume is sufficient.

For refrigeration only units, the total the total volume at the primary water circuit must never be below

- comfort application
 - ✓ 3.5 L/kW in reference to the cooling nominal capacity of the unit
- process application
 - ✓ 6.5 L/kW in reference to the cooling nominal capacity of the unit

For reversible units, a water volume equal to 6.5 L/kW, in reference to the heating nominal capacity of the unit, is recommended, so that energy reserves are full enough to ensure the defrosting cycle without any discomfort for the end user.

If the total volume of the primary hydraulic circuit does not allow to reach these recommendations, a buffer tank must be added to the installation to increase the water volume up to the value required.

If the unit runs with a low volume of water (with air treatment plant...) or if it is used for industrial processes, a buffer tank is compulsory to guarantee sufficient thermal inertia and satisfactory temperature stability.

		70	75	85	100	110	130
Buffer tank (optional)	L	300	300	300	300	300	300

11.3.1. ECOi-W AQUA-Z COOLING ONLY VERSION



INFORMATION It is recommended that the hydraulic circuit be sized by a thermal engineer

			P-AQAZ0070	P-AQAZ0075	P-AQAZ0085	P-AQAZ0100	P-AQAZ0115	P-AQAZ0130
Minimum water volume in the system application air conditioning	without buffer tank	L	244	274	290	350	406	441
	with buffer tank	L	/	/	/	50	106	141
Minimum water volume in the system application process	without buffer tank	L	453	508	538	650	754	819
	with buffer tank	L	153	208	238	350	454	519

11.3.2. ECOi-W AQUA-Z HEAT PUMP VERSION

			P-AQAZ0070	P-AQAZ0075	P-AQAZ0085	P-AQAZ0100	P-AQAZ0115	P-AQAZ0130
Minimum water volume in the system	without buffer tank	L	474	525	563	710	805	898
	with buffer tank	L	174	225	263	410	505	598

11.4. MAXIMUM WATER VOLUME REQUIREMENTS

The maximum water volume is limited by the sizing of the unit's expansion tank and/or the expansion tank present in the facility's hydraulic circuit. Expansion tanks must be sized according to the glycol percentage in the hydraulic circuit.

The expansion tank should be installed at the pump suction, and the pressure inside will be adjusted by taking into account the whole hydraulic circuit.

The volume of the expansion tanks selected with Single pump and double pump options is:

			P-AQAZ0070	P-AQAZ0075	P-AQAZ0085	P-AQAZ0100	P-AQAZ0115	P-AQAZ0130
Volume of the expansion tank supplied with hydraulic options	L		12	12	18	18	18	18

11.5. RINSING THE CIRCUIT



CAUTION

Before filling the installation, check it and remove any contamination such as sand, stone, welding chips and other materials likely to damage the **ECOi-W AQUA-Z**.

Fully rinse all water pipes before final connection to the **ECOi-W AQUA-Z**.

When using an off-the-shelf acid rinsing solution, implement a temporary branching around the **ECOi-W AQUA-Z** to prevent damaging internal components (particularly the plate exchanger, flow switch, pump...).

ECOi-W AQUA-Z 70-130

11.6. FROST PROTECTION

If the ECOi-W AQUA-Z is exposed to ambient temperatures between 1°C and -18°C, protect the water circuit against frost.



CAUTION The use of a glycol-based solution is the only effective frost-protection means

The glycol-based water solution must be sufficiently concentrated to ensure appropriate protection and prevent ice from forming at the minimum outdoor temperatures planned for the installation. Take precautions when using non inert MEG antifreeze solutions (Mono Ethylene Glycol or MPG Mono Propylene Glycol). With this type of antifreeze solution, corrosion may occur in the presence of oxygen.

Contact glycol resellers to ensure that its characteristics are compatible with environmental directive applicable on site (this is not under manufacturer responsibility).



CAUTION

The glycol percentage in the installation's hydraulic circuit must be entered in the regulation upon start-up. This parameter setting changes the safety and alarm triggering threshold limits. An incorrect value may cause malfunctions and a destruction of the unit's heat exchanger.



WARNING

It is strongly recommended to post, on the electric box of the unit, glycol type and concentration in the hydraulic circuit.

The glycol-based solution slightly modifies the installation's performance, particularly in terms of load loss:

% glycol	Freezing point (°C)	Thermodynamic power		Power input	Water flow	Pressure drop
		Cooling mode	Heating mode			
0	0	1.000	1.000	1.000	1.000	1.000
10	-4	0.992	1.000	1.007	1.028	1.110
20	-10	0.986	1.000	1.013	1.056	1.272
30	-17	0.975	1.000	1.020	1.085	1.461
40	-26	0.965	1.000	1.033	1.115	1.679

Example for a solution with 20% Glycol:

- Increase the pressure drop: with glycol = 1.272 x without glycol
- Increase the flow rate: with glycol = 1.056 x without glycol
- Decrease the cooling capacity: with glycol = 0.986 x without glycol

Draining the water circuit is not recommended for frost protection, for the following reasons:

- The water circuit will rust, which will shorten its lifetime.
- Water will remain at the bottom of the plate exchangers and freezing may cause damage.



CAUTION

Never fill the hydraulic circuit with pure glycol. Maximum glycol concentration is 40%. The water and glycol mixture must be precisely prepared before filling the hydraulic circuit. If the mixture is too much concentrated, the hydraulic could be damaged and the unit ECOi-W AQUA-Z should not perform normally. **In this case, the unit warranty will be automatically voided.**



CAUTION

For heat pump models, if the outdoor temperature is likely to fall below +1°C, provide a system to prevent the condensates from freezing (e.g. heating cord).

11.7. WATER QUALITY

The water must be analyzed; the hydraulic network system installed must include all elements necessary for water treatment: filters, additives, intermediate exchangers, drain valves, vents, check valves, etc., according to the results of the analysis.



CAUTION

The **ECOi-W AQUA-Z** must not run on a network with open loops, likely to cause incidents related to oxygenation, or with non treated table water.

Using improperly treated or non treated water in the **ECOi-W AQUA-Z** may cause scaling, erosion, corrosion or algae or sludge deposits in the exchangers. Refer to a specialist skilled in water treatment to determine any treatment to apply. The manufacturer will not be held liable for damages caused when non treated or improperly treated water, demineralized water, salty water or sea water are used.

Apply the following guidelines:

- No NH_4^+ ammonium ions in the water, highly detrimental to copper. <10mg/l
- Cl- chloride ions are detrimental to copper with a risk of puncture by picking corrosion. <10mg/l.
- SO_4^{2-} sulphate ions may cause perforating corrosion. < 30mg/l.
- No fluoride ions (<0.1 mg/l)
- No Fe^{2+} and Fe^{3+} ions, particularly in case of dissolved oxygen. Fe < 5mg/l with dissolved oxygen < 5mg/l. The presence of these ions with dissolved oxygen indicates corrosion of steel parts, likely to generate corrosion of copper parts under Fe deposits, particularly in the case of multitubular exchangers.
- Dissolved silica: silica is an acid element of water and may also cause corrosion. Content < 1mg/l.
- Water hardness: Values between 10°FH and 30°FH may be recommended. This facilitates scaling deposits likely to limit copper corrosion. Excess TH values may lead to clogging the pipes.
- TAC < 100
- Dissolved oxygen: Prevent any sudden change in the water's oxygenation conditions. Also, avoid deoxygenating water by sparging inert gas as well as overoxygenating it by pure oxygen sparging. Disturbing oxygenation conditions destabilizes copper hydroxides and particle salting-out.
- Electrical Resistivity - Conductivity: The higher the resistivity, the slower the corrosion. Values above 3000 ohm/cm are preferred. A neutral environment favours maximum resistivity. For electrical conductivity, values around 200-600 S/cm can be recommended.
- pH: neutral pH at 20°C (7 < pH < 9)



CAUTION

If the water circuit is to be drained for a time exceeding one month, the circuit must be fully charged with nitrogen to prevent any risk of corrosion by differential venting.



CAUTION

The manufacturer is not liable for recommendations in terms of water treatment (call a specialized company).

However, this matter has a critical nature, and particular care must be given to ensure that the type of treatment applied is effective.

The liability of the manufacturer or its representative will not be sought when non treated water or non compliant quality water is used.

ECOi-W AQUA-Z 70-130

11.8. HEAT INSULATION

To guarantee proper energy efficiency and compliance with current standards, water pipes passing through uninhabited zones should be properly lagged to retain heat.


To achieve correct insulation with conductivity of 0.04 W/mK, lag the pipes with insulating material with a radial thickness between 25mm and 30 mm.

11.9. WATER LOW PRESSURE SWITCH

The optional low-water pressure switch (PSW-0.1) can be installed inside or outside the machine. It must be set to the following specifications:

- RANGE: 1bar
- DIFF: 0.5bar

If the pressure in the circuit drops below 0.5 bar, the machine stops. When the pressure rises above 1.5 bar again, the machine restarts.

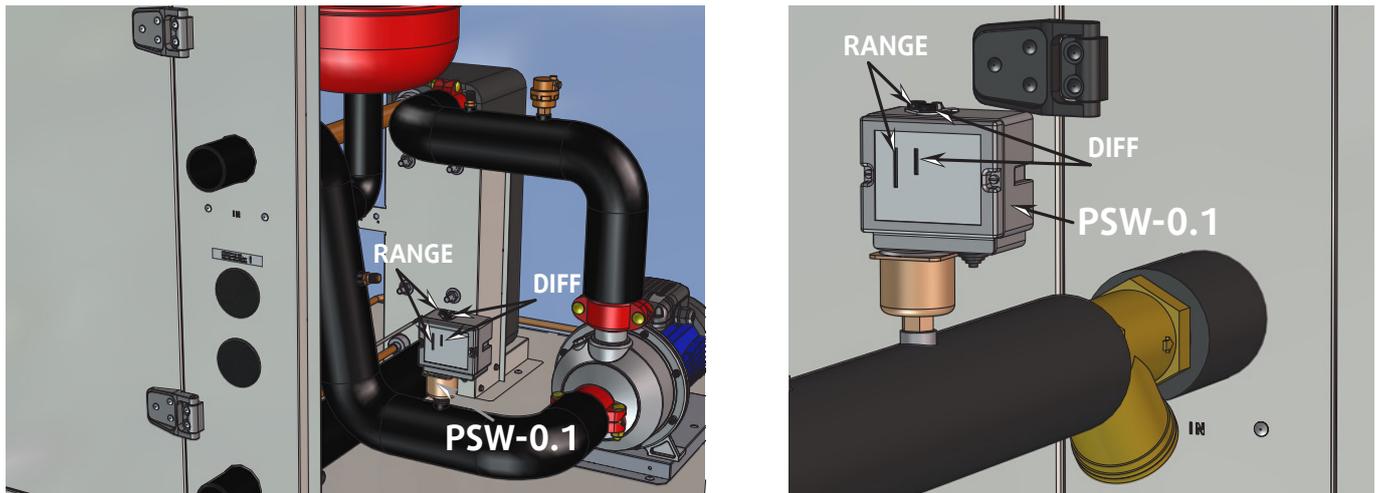

For installation inside the unit, a 3/8" pressure test point fitting is provided on the pump supply pipe.



INFORMATION

In the case of a **ECOi-W AQUA-Z** without a pump, the "Water low pressure switch" (PSW-0.1) must be fitted to the external pump supply pipes



INFORMATION

The low water pressure switch (PSW-0.1) must be connected to terminals 24 and 25 on terminal block X2.


11.10. DIFFERENTIAL PRESSURE TRANSDUCER



The differential pressure transducer (PTWDP-0.1) supplied with the "VS+" option must be fitted between the water return and flow pipes.

Rigid plastic tubes with an external diameter of 6 mm are required to connect the hydraulic pipes to the sensor:

- P1** connected to the flow water piping
- P2** connected to the return water piping

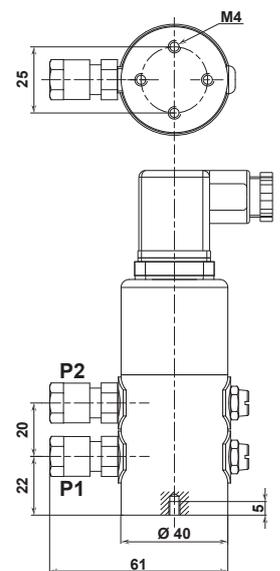

INFORMATION

The pressure taps of the differential pressure transducer (PTWDP-0.1) must be positioned in the middle of a straight pipe at least 40 cm long.



INFORMATION

The differential pressure transducer (PTWDP-0.1) must be connected to inputs X1 and +24V on terminal T1 of the POL94E.

11.11. FILLING THE SYSTEM WITH WATER



CAUTION

The water circuit must be filled and drained by skilled persons using the appropriate devices provided on the external hydraulic circuit by the installer.

It is important to ensure that the mains water supply pressure is sufficient to fill the installation.

Once the installation is complete and after cleaning and rinsing the circuit network, you must fill the water circuit in accordance with current professional standards until you obtain the service pressure which will be:


0.5 bar < Service Pressure < 3.0 bar

A valve set at 3.0 bar is supplied with the "single pump" or "double pump" options.

A valve set at 6.0 bar is supplied with the buffer tank option.

Always check that manual or automatic air drains are installed at all the high points of the hydraulic network.

When two or three units are connected in parallel, it is advisable to reverse the return circuit connections (Tichelmann loop) in order to reduce the pressure loss in each unit's circuit.

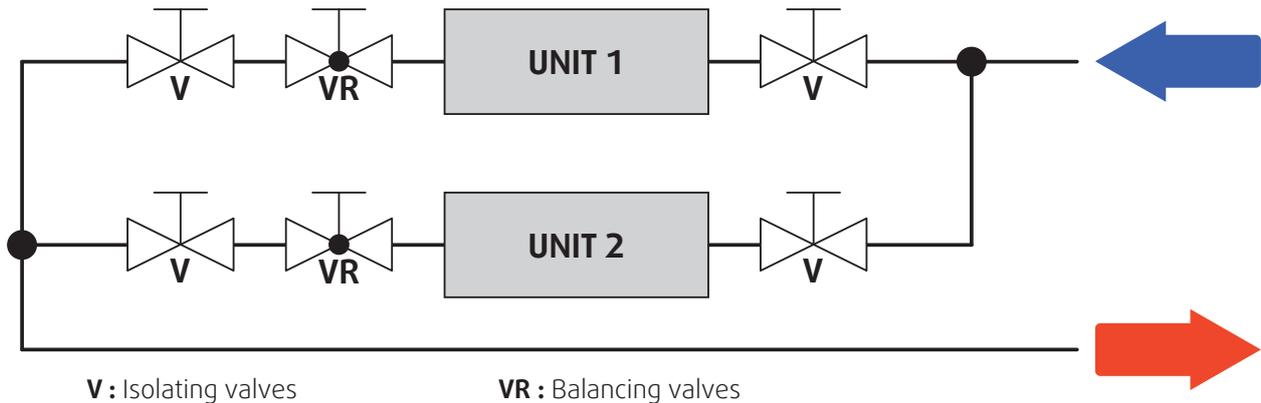


Install a balancing valve on the output pipe to adjust the water flow.



CAUTION

The water inlets and outlets must be connected as described on the labels affixed near the connections.

When the hydraulic pump option is selected, a safety valve, set to 3.0 bar, (SS-01) is mounted at the water circuit inlet to prevent overpressure in the circuit. The installer must install a pipe at the safety valve outlet for water evacuation.

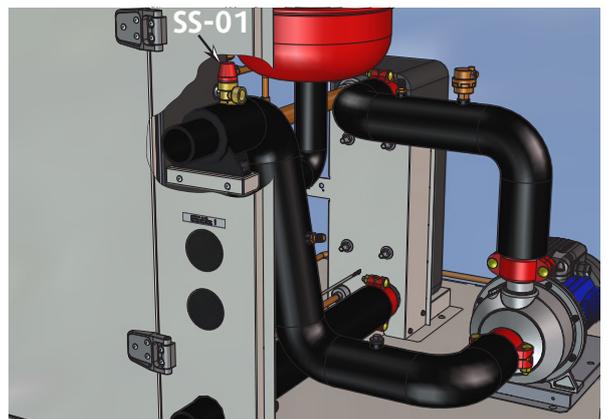

When the unit is fitted with a buffer storage tank, a safety valve (SS-02), set at 6.0 bar, is installed at the storage tank inlet. The installer must connect a tube to the valve to drain the water away from the machine.

12. WIRING DIAGRAM AND LEGEND

12.1. WIRING DIAGRAM

SEE APPENDIX

SE4914	models 70 / 75 / 85 / 100 / 115 / 130	Power / Control	400V/3~/50Hz
--------	---------------------------------------	-----------------	--------------

12.1.1. POWER SUPPLY

The power cable must be connected to the main power supply switch QG-0.1 (copper cable is recommended).

The power supply must be protected at source by a general fuse holder supplied by the installer. It must be fitted next to the unit. Refer to the § **Electric specifications**, page 18

The electrical installation and wiring of this unit must comply with local electrical installation standards.

➤ Three phase 400 V~ 50Hz + Ground:

On the L1, L2, L3 terminals of the QG-0.1 section switch

On the ground screw of the earth cable.

12.1.2. WIRING DIAGRAM KEY DESCRIPTIONS


SEE APPENDIX

12.2. RANGE AND SETTINGS OF THERMAL PROTECTION

MODELES			P-AQAZ0070	P-AQAZ0075	P-AQAZ0085	P-AQAZ0100	P-AQAZ0115	P-AQAZ0130	
FTC-1.1		Range	A	24-32	24-32	24-32	37-50	37-50	37-50
		Setting	A	31	31	31	45	45	45
FTC-1.2		Range	A	17-23	24-32	24-32	24-32	30-40	37-50
		Setting	A	21	26	31	26	35	45
FTOF-1.1	AC	Range	A	4-6.3	4-6.3	6-10	6-10	6-10	6-10
		Setting	A	5	5	8	8	8	8
FTOF-1.1	EC	Value	A	6.3	6.3	6.3	6.3	6.3	6.3
FTOF-1.2	AC	Range	A	4-6.3	4-6.3	6-10	6-10	6-10	6-10
		Setting	A	5	5	8	8	8	8
FTOF-1.2	EC	Value	A	6.3	6.3	6.3	6.3	6.3	6.3
FTWP-0.1	1P-SP / 2P-SP	Range	A	2.5-4	2.5-4	2.5-4	2.5-4	4-6.3	4-6.3
		Setting	A	2.5	2.5	3.4	3.4	4.5	4.5
	1P-HP / 2P-HP	Range	A	2.5-4	2.5-4	6-10	6-10	6-10	6-10
		Setting	A	3.2	3.2	6	6	6	6
FTWP-0.2	2P-SP	Range	A	2.5-4	2.5-4	2.5-4	2.5-4	4-6.3	4-6.3
		Setting	A	2.5	2.5	3.4	3.4	4.5	4.5
	2P-HP	Range	A	2.5-4	2.5-4	6-10	6-10	6-10	6-10
		Setting	A	3.2	3.2	6	6	6	6
FTWP-0.1 VS / VS+	1P-SP / 2P-SP	Setting	A	2.5	2.5	4	4	6.3	6.3
	1P-HP / 2P-HP	Setting	A	4	4	10	10	10	10

13. ELECTRICAL CONNECTIONS

WARNING

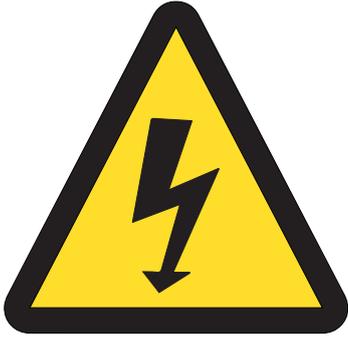

BEFORE CARRYING OUT ANY WORK ON THE EQUIPMENT, MAKE SURE THE ELECTRICAL POWER SUPPLY IS DISCONNECTED AND THERE IS NO POSSIBILITY OF THE UNIT BEING STARTED INADVERTENTLY. ALSO MAKE SURE THAT THE ALARM INDICATOR CABLES ARE DISCONNECTED.

NON-COMPLIANCE WITH THE ABOVE INSTRUCTIONS CAN LEAD TO INJURY OR DEATH BY ELECTROCUTION.

The electrical installation must be performed by a fully qualified electrician, and in accordance with local electrical standards and the wiring diagram corresponding to the unit model.


Any modification made without our consent will void the unit's warranty.

The power supply cable section must be sufficient to provide the appropriate voltage to the unit's power supply terminals, both at start-up and under full load operating conditions.

The power supply cable shall be selected in accordance with the following criteria:

1. Power supply cable length.
2. Maximum current draw of unit in operation.
3. Maximum current draw of unit at start-up
4. Installation method of power supply cables.

It is recommended to provide short circuit protection by means of a type aM fuse or a circuit breaker with high breaking capacity on the distribution board. Protection must be selected according to the current values shown in § **Electric specifications**, page 18

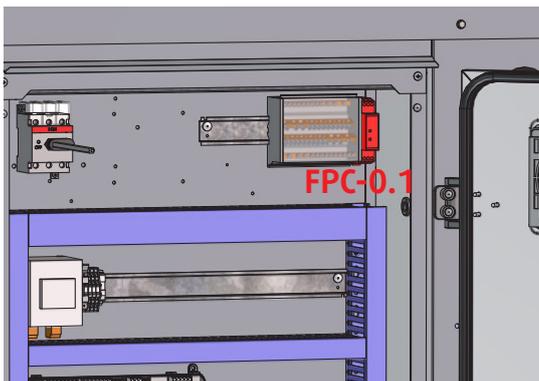

VERY IMPORTANT:

400V / 3~ / 50Hz

The outdoor unit is equipped as standard with a phase sequence and cut-out controller located in the electrical box.

THE LEDS INDICATE THE FOLLOWING CONDITIONS:

Green LED = ON

Yellow LED = ON

Power ON

The compressor rotation direction is correct.

Green LED = ON

Yellow LED = OFF

Phase inversion or phase absent (L1)

The compressor and the fans do not start.

Green LED = OFF

Yellow LED = OFF

Phase absent (L2 or L3)

The compressor and the fans do not start.

ECOi-W AQUA-Z 70-130**CAUTION**

Before connecting the supply lines, check that the voltage available is within the limits specified (Refer to the § Electric specifications, page 18).

Voltage differences between each phase do not have to exceed 2%.

If the unbalance is unacceptable, call the distribution company to have this anomaly corrected.

**CAUTION**

Supplying the unit with a line with an unbalance exceeding the acceptable value results in cancelling the warranty.

**CAUTION**

Correction of the excessive centralized power factor (>0.95) may generate transient phenomena dangerous for the motors and contactors of the unit during the start and stop phases. Check instant voltages during these phases.

These units are equipped with a local switch used as general terminal board.




13.1. UNIT POWER SUPPLY

The supply cables of the units must be routed up to the section switch through the grommets present at the base of the electrical unit.

To ensure proper contact, fit the end pieces adapted to the cross-section of the connecting cable.

Maximum cross-section of the power supply cables (for copper cable only):


- ECOi-W AQUA-Z 70 – 75 – 85 – 100: 35 mm²
- ECOi-W AQUA-Z 115 – 130: 50 mm²

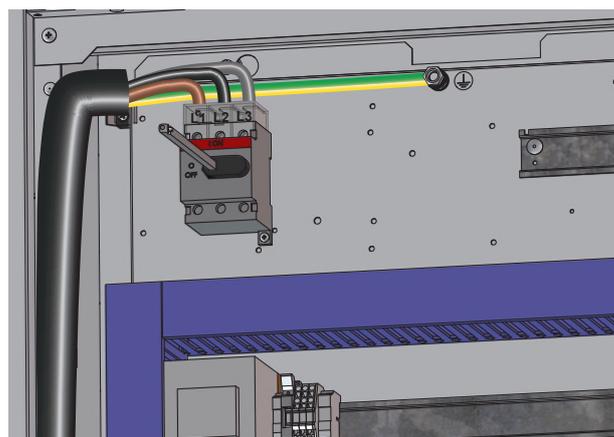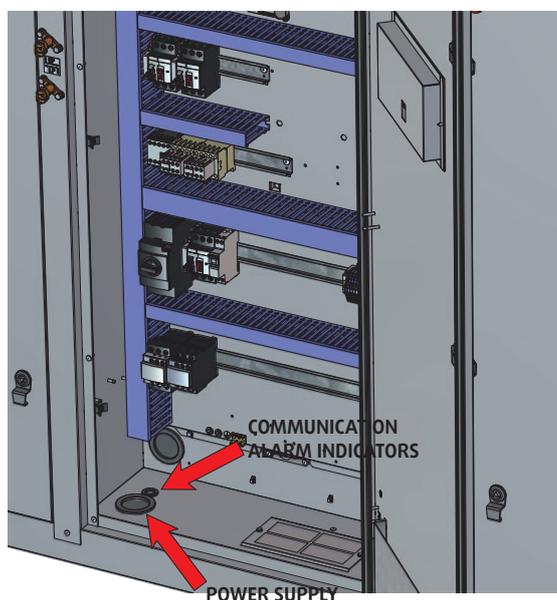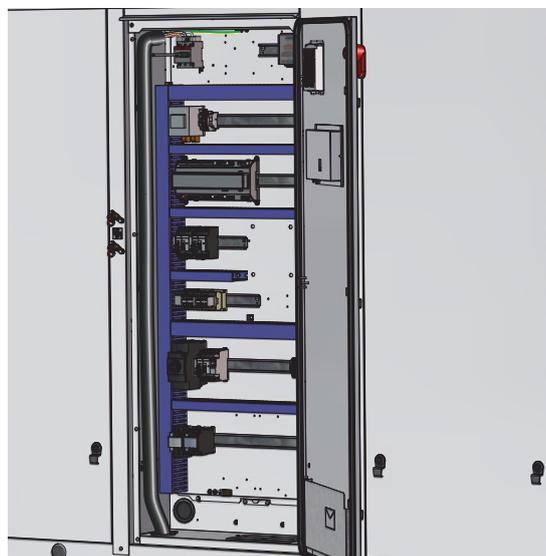**INFORMATION**

The wire grommets on the front panels of units must be replaced with cable glands for any cable transits to ensure proper sealing.

13.2. OPTIONS VARIABLE FLOW PUMP

If you have an IT (ungrounded) system or corner-grounded TN system, disconnect the internal EMC filter by removing the EMC screw.

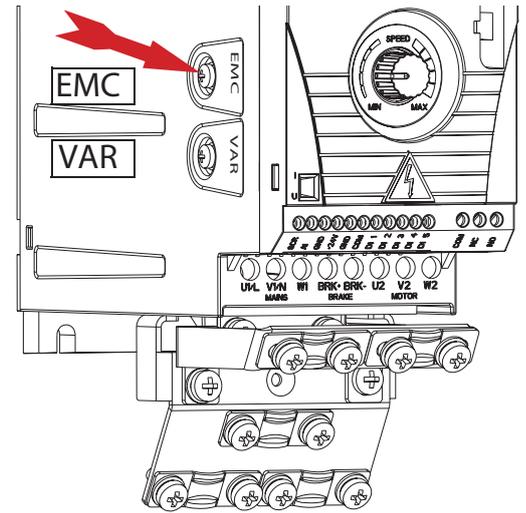

CAUTION

Disconnect the internal EMC filter when installing the drive on an IT system (an ungrounded power system or a high-resistance-grounded [over 30ohms] power system), otherwise the system will be connected to ground potential through the EMC filter capacitors. This may cause danger or damage the drive.

Disconnect the internal EMC filter when installing the drive on a corner-grounded TN system, otherwise the drive will be damaged.

13.3. ELECTRIC HEATING OPTION


The power cable for the electric heating must be routed to the disconnecting switch through the cable glands at the bottom of the unit.

To ensure proper contact, fit the end pieces adapted to the cross-section of the connecting cable.

Maximum cross-section of the power supply cables:

- > 12kW 10mm²
- > 24kW / 36kW 35mm²



copper cable only

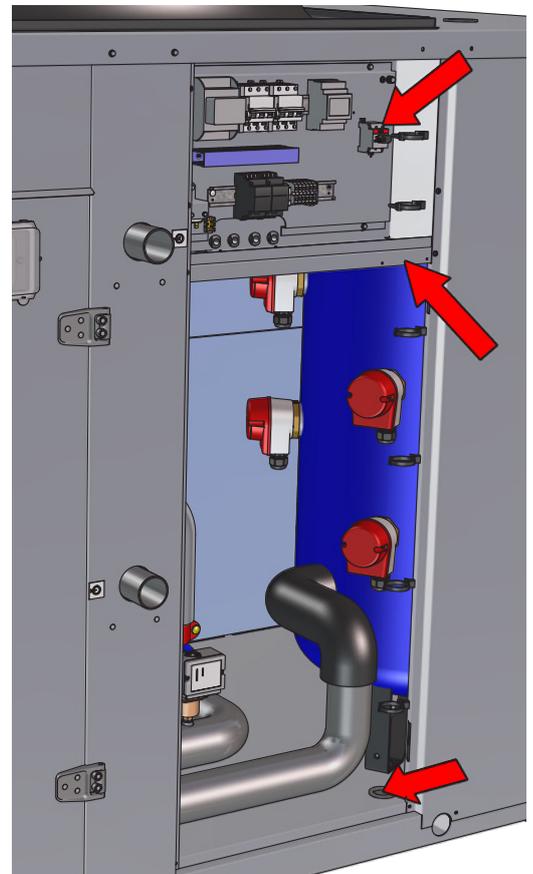

ECOi-W AQUA-Z 70-130

13.4. ALARM INDICATORS

The ECOi-W AQUA-Z control system has a dedicated alarm indicator. This information is available via a dry contact (Normally Closed) by connecting to the unit's terminals 3 and 4 of the terminal block X1.

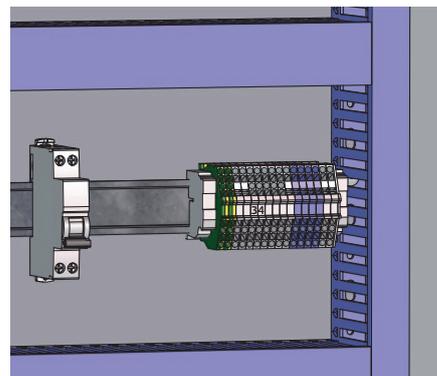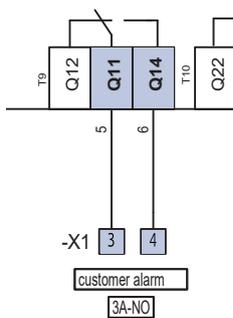



CAUTION

The unit must only be rendered accessible for maintenance if the client cables connected to terminals 3 and 4 of the terminal block X1 are locked out/tagged out (disconnected or rendered inoperative upstream of the unit).



13.5. REMOTE CONTROL

The ECOi-W AQUA-Z has five remote controls operating via dry contacts (not supplied):

- ON/OFF function (ON/OFF) connected to terminals D1 and M on terminal block T4 of the POL698.
- "forced heating" function (SWS) connected to terminals D2 and M on terminal block T4 of the POL698.
- operating type selection (NRS) connected to terminal DL1 on terminal block T5 of the POL965 and to terminal L on terminal block X1.
- SG (Smart Grid) signal from the energy supply company via the SGS contact connected to terminals X4 and M on terminal block T1 of the POL965.
- EVU (Smart Grid) signal from the energy supply company via the SGEVUS contact connected to terminals X6 and M on terminal block T2 of the POL965.

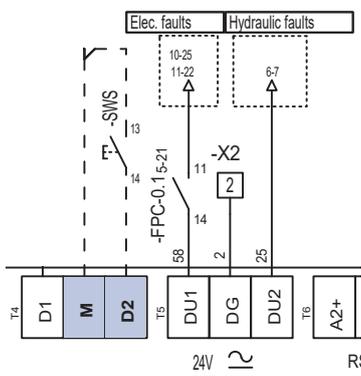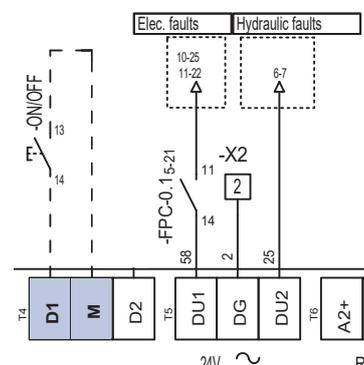


POL 965.0

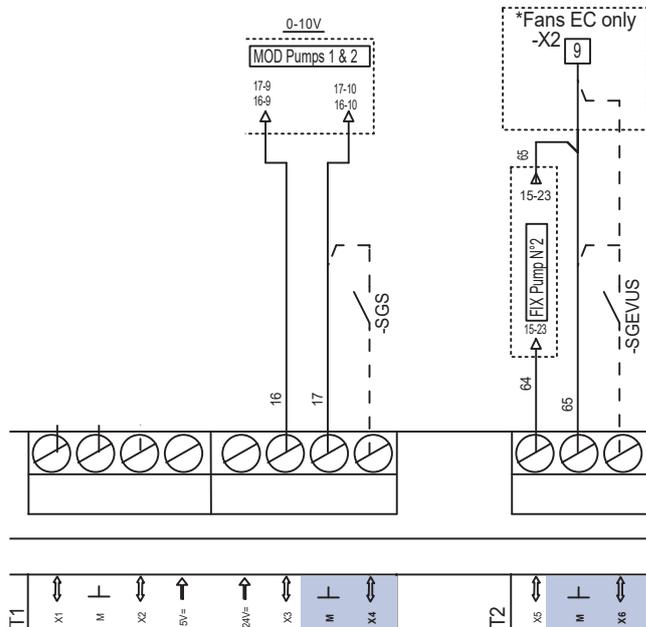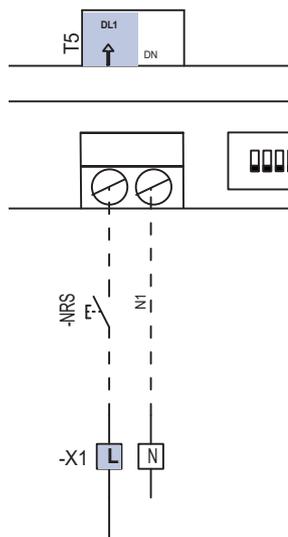


13.6. REMOTE SENSORS

User-defined setpoints can be corrected according to the room temperature. A room temperature sensor, not supplied, must be connected to terminals X2 on terminal block T1 of the POL965 and 9 on terminal block X2.

- There are two types of room temperature sensor :
- an NTC sensor dedicated to measuring room temperature
 - a 0-10 V potentiometer sensor

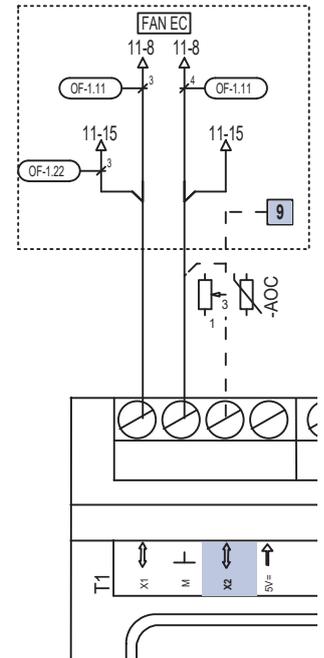


For an ECOi-W AQUA-Z without a pump, the “lack of water” pressure switch (PSW-0.1) must be fitted to the external pump supply pipes and wired to terminals 24 and 25 on terminal block X2.

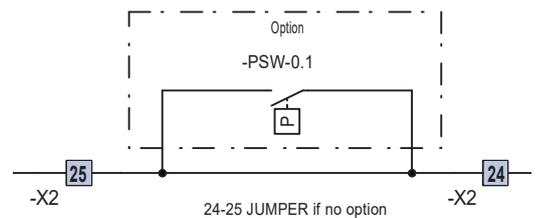


CAUTION Remove the shunt connected between terminals 24 and 25 on terminal block X2.

For an ECOi-W AQUA-Z fitted with the "VS+" option, the differential pressure transducer (PTWDP-0.1) must be installed in the flow and return water piping and connected to terminals X1 and "+24V" on terminal block T1 of the POL94E.

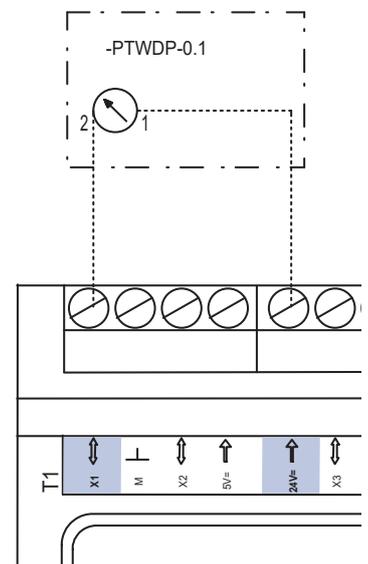

ECOi-W AQUA-Z 70-130

For a system including an external buffer tank with electric heating, a water temperature sensor (THT-0.1) is required. This sensor must be connected to terminals X8 and M on terminal block T1 of the POL965.

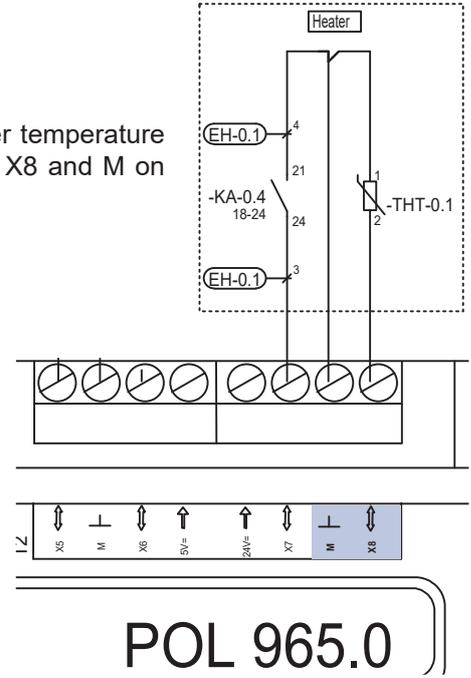


13.7. COMMUNICATION


The **ECOi-W AQUA-Z** has four different communication protocols:

- Modbus TCP/IP
- BACNet IP
- Modbus RTU
- BACNet MS/TP

Modbus TCP/IP or BACNet IP communications are via an RJ45 connector and Ethernet type connector.

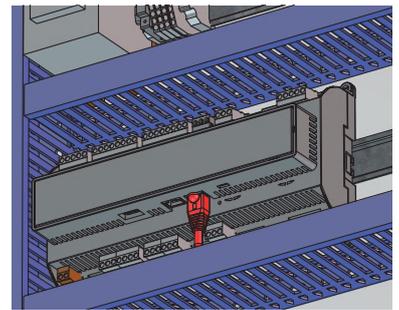

Modbus RTU or BACNet MS/TP communications are via the RS485 connection on the controller (terminals A1+ and B1- Port T14) and a BUS type cable (1 twisted pair, shielded) with a 0.22 mm² cross-section.

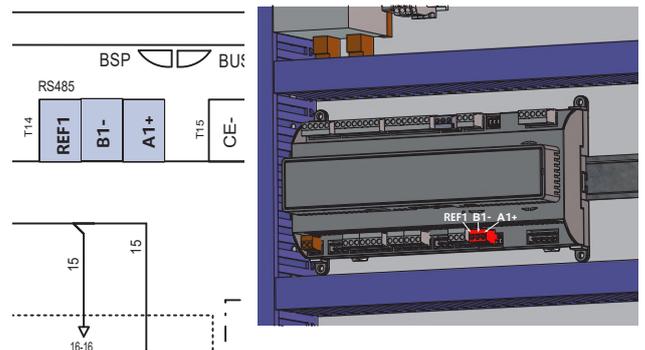

CAUTION

The Modbus link should not be routed through the same conduits as the power cables, as the induced voltage may cause a communication fault.

14. REGULATION

ECOi-W AQUA-Z units are fitted with an electronic control system. It provides the command, control and alarm functions.

14.1. ORDER OF PRIORITY FOR CONTROL SYSTEMS

The integrated regulator in the ECOi-W AQUA-Z can be controlled by various interfaces and systems. The order of priority for each drive system is as follows:

1. The HMI: the commands are given by the user directly on the unit (integrated display) or remotely (remote display)
2. Digital inputs: the client can send commands electromechanically via dry contacts (not supplied) on controller ports

- ✓ Input D1 (POL698): ON/OFF
- ✓ Input D2 (POL698): Forced Heating
- ✓ Input X4 (POL965): Smart Grid - SG signal
- Input X6 (POL965): Smart Grid - EVU signal
- ✓ Input DL1 (POL965): Reduced mode



3. The BMS : the remote supervision transmits its commands according to the communication protocols
4. Timing programming: this scheduling is integrated in the regulator

14.2. USER INTERFACE

This terminal has a liquid crystal display and has 6 buttons.



14.2.1. KEYPAD


INFO	From any screen, this button returns the user to the main menu or home screen and, like the ESCAPE button, invalidates a current modification.
ALARM	When pressing the alarm button (the red LED flashes if an alarm is active), the alarm management menu is displayed. (see § alarms)
ESCAPE	Returns to the previous level in the menu tree. Pressing this button during modification invalidates the change being made and returns the user to the previous menu. This function is very important if a setting is inadvertently modified.
UP/DOWN	These buttons have two functions. 1. In a menu, they are used to move up and down the list of possible options. 2. They can change the value of a setting when it has been selected.
ENTER	This button has three functions 1. It is used to access a submenu 2. Activate the modification of a setting 3. Validate the modification of a setting

ECOi-W AQUA-Z 70-130

14.2.2. HOME PAGE

The home page is used to display quickly:


- the unit status (On/Off/Delegated/Reduced mode)
- the operating mode (cold/hot)
- the setpoint temperature
- the inlet water temperature (RWT)
- the flow water temperature (LWT)
- the unit load.

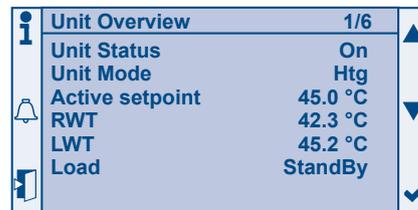

14.2.3. MAIN MENU

Pressing the "Info" button displays this screen directly.

The authorized menus are displayed according to the access level selected:

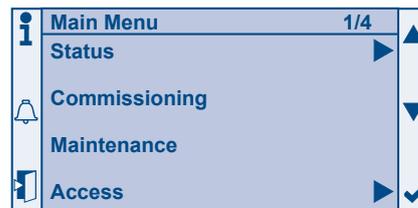

Access level	Final user	Installer	Maintenance
"Access" menu	✓	✓	✓
"Status" menu	✓	✓	✓
"Commissioning" menu	✗	✓	✓
"Maintenance" menu	✗	✗	✓
"Alarms" menu	✓	✓	✓

14.2.4. MENUS



The display has several menus. The "Status" menu is freely accessible. The other "Commissioning" and "Maintenance" menus can be displayed and accessed according to the access level.

To change the access level, go to the "Access" menu and enter the password corresponding to the level.

The first line of all the screens integrates the following information:

- Screen title
- Number of the active line/number of lines of the menu
- Access level

- ✓ Final user 
- ✓ Installer 
- ✓ Maintenance 

14.3. INITIAL SETTINGS

Open the electrical box and check that all circuit breakers are open except for **FTCC-0.1**.

Before starting up the **ECOi-W AQUA-Z** for the first time, the "Commissioning" menu must be configured.

14.3.1. LANGUAGE SETTINGS

Select the languages required according to the application.



14.3.2. TIME SETTINGS



CAUTION

If the date and time are not set, the unit will function in degraded mode or may not even be able to start.

Start by configuring the date and time.

To do so, switch to the "Installer" or "Maintenance" profile in the "General settings" section. The first line of the menu is used to set the date and time.



The date and time line will appear as highlighted.

Press the "Enter" button ✓ to activate the change in date.



The ▲ and ▼ buttons are used to change the highlighted setting.

Press once on the ✓ button to approve the defined value and move on to the next setting.




INFORMATION

Power outage lasting longer than 8hrs will lead to a loss of the time setting. It is important to set the unit back to the right time after such an event.


14.3.3. DEFINING THE GLYCOL RATE

Define the glycol content present in the installation water circuit.

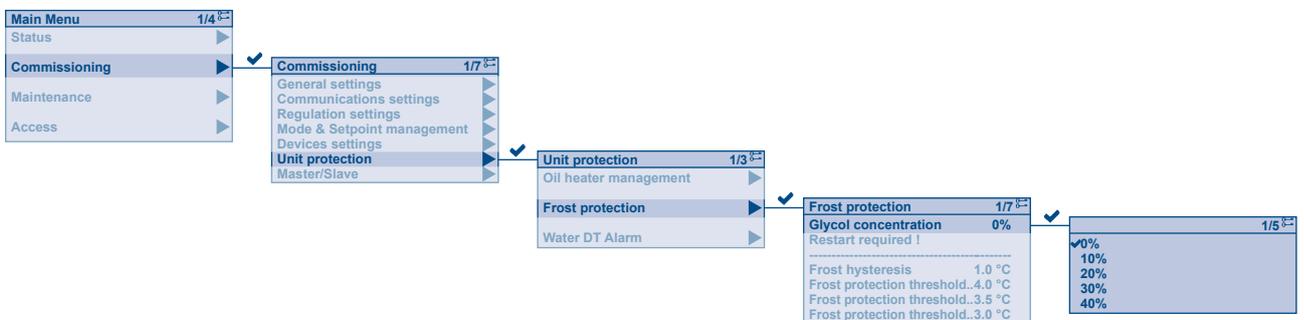

CAUTION

The settings are not changed until the controller is restarted

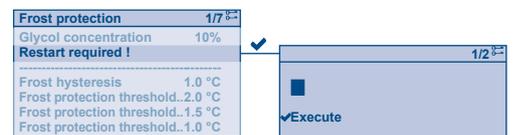


ECOi-W AQUA-Z 70-130

14.3.4. CONFIGURING INPUT ON/OFF (D1)

During installation, an on/off switch can be connected remotely onto the D1 input. POL698). Refer to the § **Remote control**, page 34


This input's behavior must be defined.

Factory configuration:
No switch and NO setting

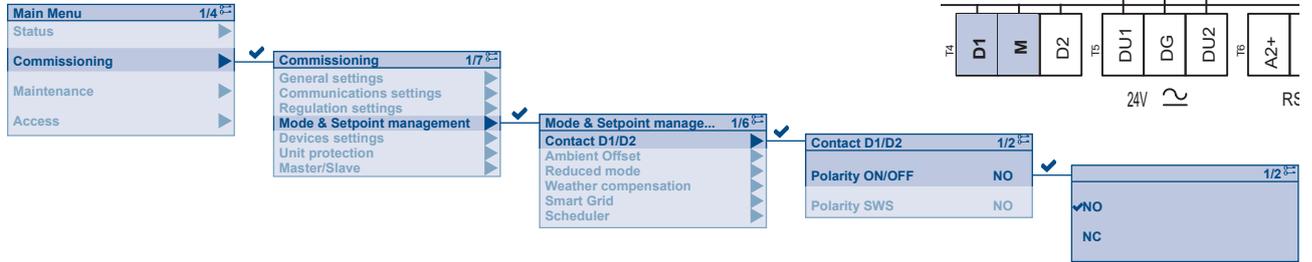

NO: the ECOi-W AQUA-Z can only be started if the contact is open.

With switch and NC setting

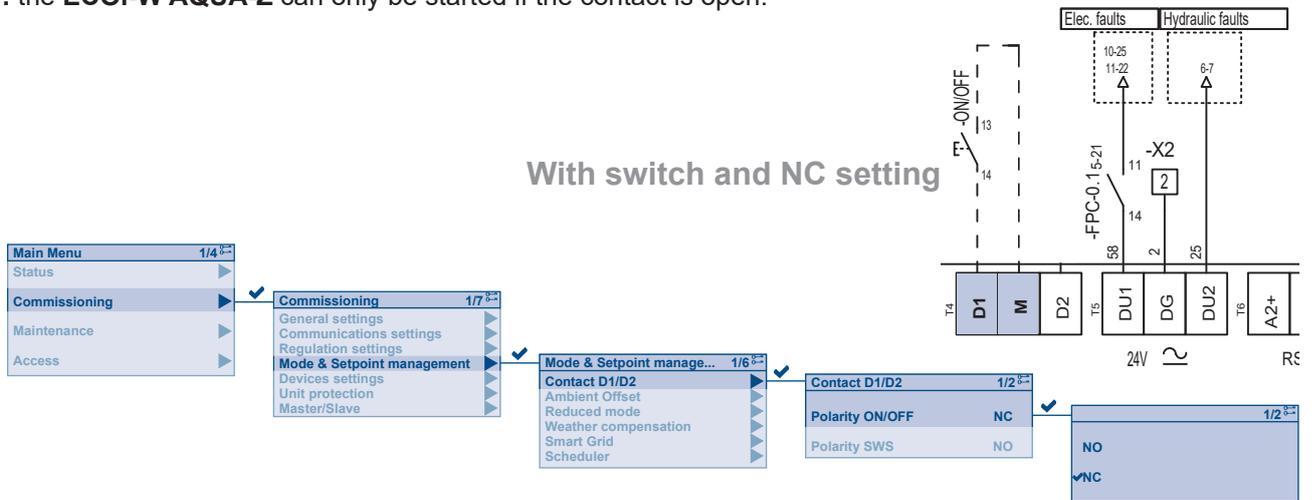


NC: the ECOi-W AQUA-Z can only be started if the contact is closed.

Configuration	Contact open	Contact closed
Normally Open NO	Operation order (ON)	Stop order
Normally Closed NC	Stop order	Operation order (ON)


14.3.5. CONFIGURING INPUT SUMMER/WINTER (D2)

During installation, a switch SWS can be connected to the D2 digital input (POL698). Refer to the § Remote control, page 34.

It is essential to set the switch type (NO or NC) to obtain the desired operating mode.

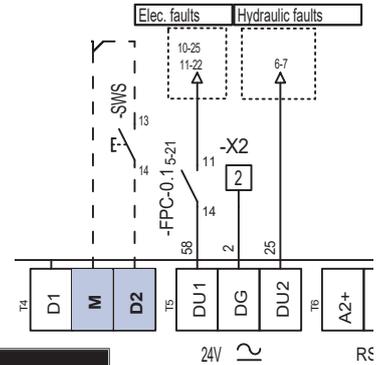


Configuration	Contact open	Contact closed
Normally Open NO	Mode defined by the HMI	Heating mode (forced)
Normally Closed NC	Heating mode (forced)	Mode defined by the HMI

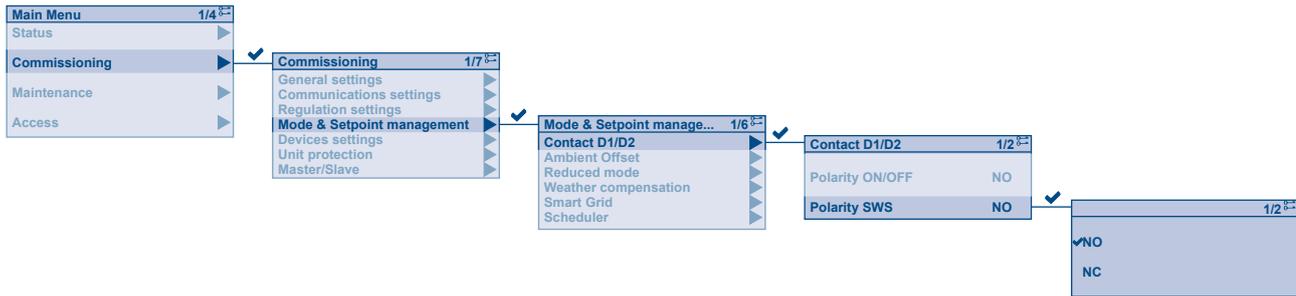

14.3.6. CONFIGURING INPUT REDUCED MODE (DL1)

During installation, a switch NRS can be connected to the DL1 digital input (POL965). Refer to the § Remote control, page 34.

The reduced mode defined for this input takes priority over all control systems such as the HML, BMS or calendar.

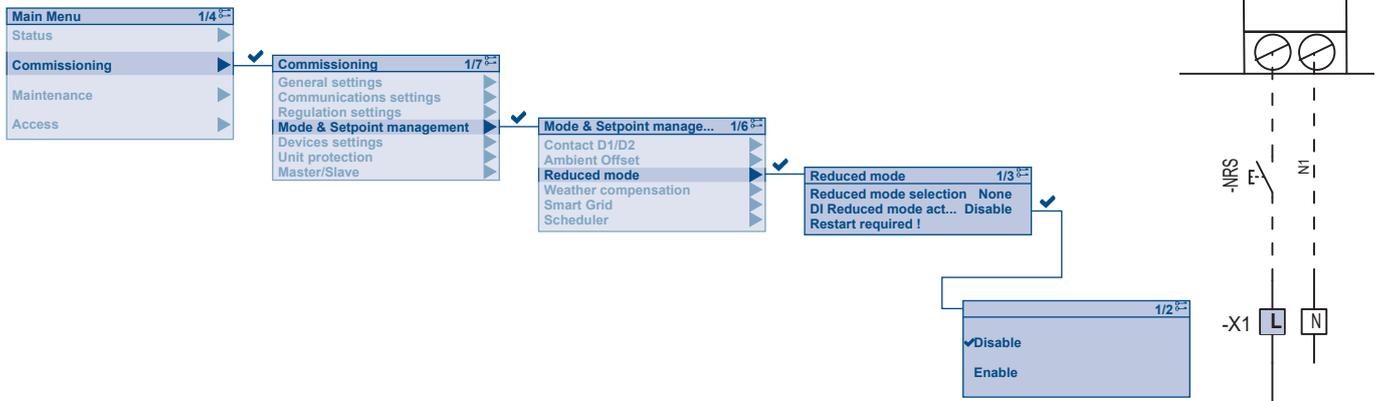

You must start by activating the use of a dry contact as the command for “Reduced mode”.






CAUTION The settings are not changed until the controller is restarted

Secondly, you need to set the switch type (NO or NC) to enable or disable reduced mode.

Configuration	Contact open	Contact closed
Normally Open NO	Normal mode	Reduced mode
Normally Closed NC	Reduced mode	Normal mode

Reduced mode can be configured with the function values defined below.



- None
- Night mode
- Eco mode
- Eco night mode
- Demand mode

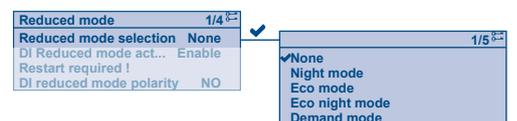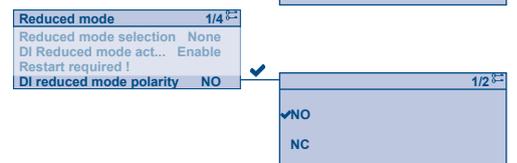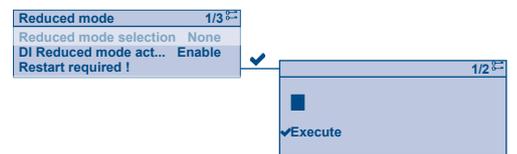

14.3.7. CONFIGURING SMART GRID INPUT (X4 AND X6)

During installation, the switches SGS and SGEVU can be connected onto the X4 and X6 (POL965) digital inputs. Refer to the § Remote control, page 34.



The "Smart grid" mode defined for these inputs takes priority over all control systems such as the HMI, BMS or calendar.

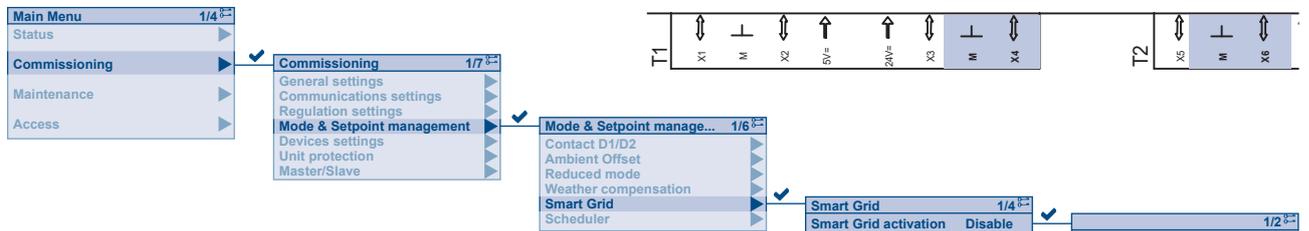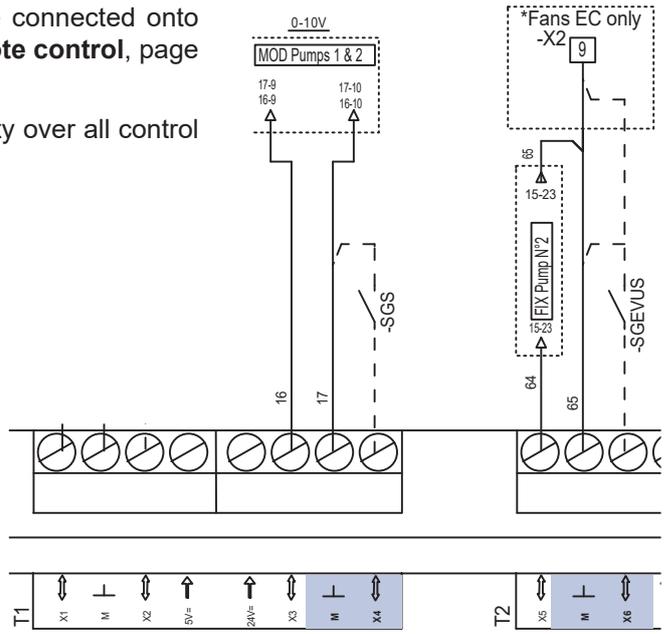

The first step is to activate the "Smart Grid" function.




CAUTION The settings are not changed until the controller is restarted

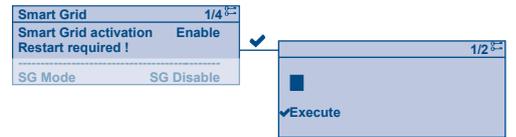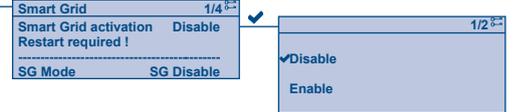

Secondly, you need to set the switch type (NO or NC) in order to integrate the SG and SG EVU signals sent by the electricity provider.

Configuration	Contact open	Contact closed
Normally Open NO	0	1
Normally Closed NC	1	0

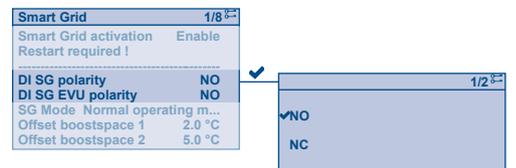

Depending on the combination of SG and SG EVU signals, four operating modes are possible:



SG (1)	SG EVU (1)	OPERATING MODE
0	0	Normal operating mode
0	1	Forced OFF
1	0	Boost mode 1
1	1	Boost mode 2

(1) SGS and SGEVU contacts are configured as NO.

14.3.8. CONFIGURATION OF AIR LAW INLET (X2)

During installation, an air temperature sensor can be connected onto the X2 (POL965) digital input. Refer to the § **Remote sensors**, page 35.

The use of a remote air temperature sensor must be enabled. The type of sensor installed must be configured in the controller.

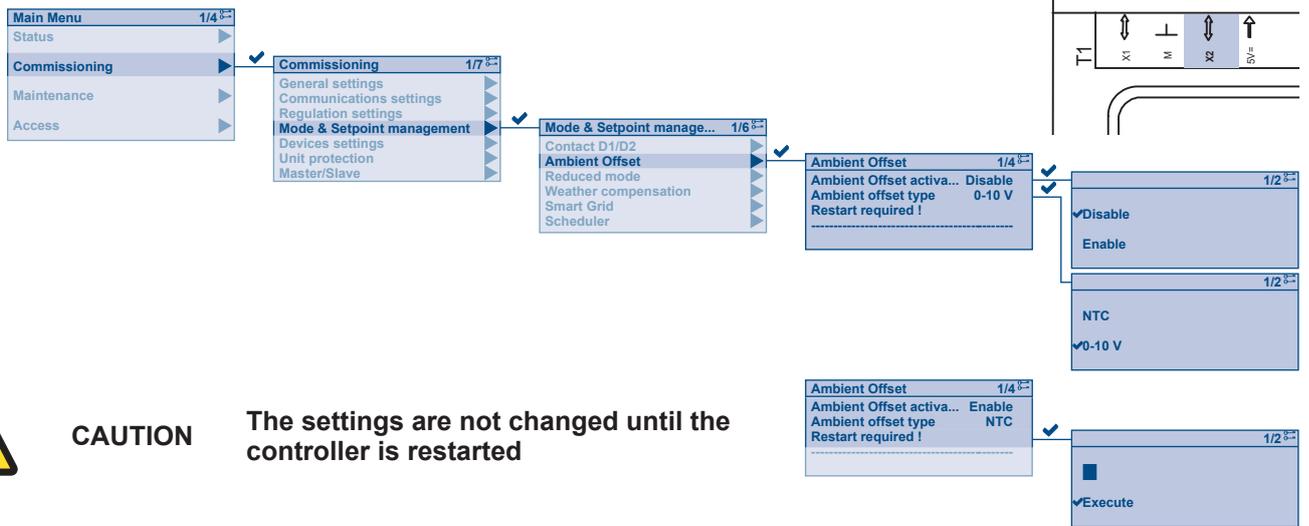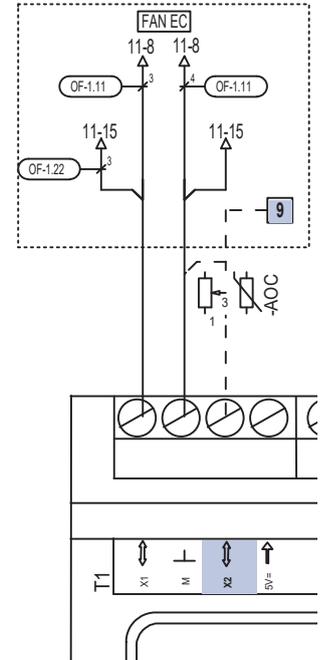

CAUTION The settings are not changed until the controller is restarted


ECOi-W AQUA-Z 70-130

14.4. LAUNCHING THE ECOI-W AQUA-Z SYSTEM

The settings for the various modes and operating instructions are detailed in the machine's user manual.




The settings and controls for the various components are described in detail in the machine's user manual.

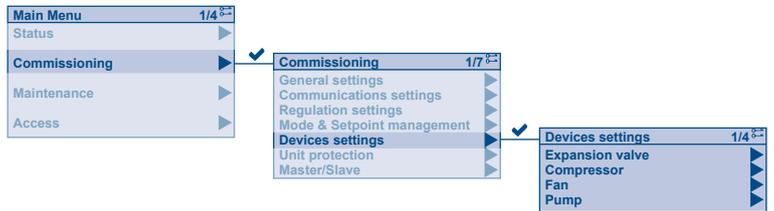

14.4.1. SELECTING THE OPERATING MODE

The operating mode can be chosen in the "HMI mode":

- **Automatic:** delegated to the BMS/Auto-change-over (refer to the user manual)
- **Cooling:** request for cool mode
- **Heating:** request for heat mode

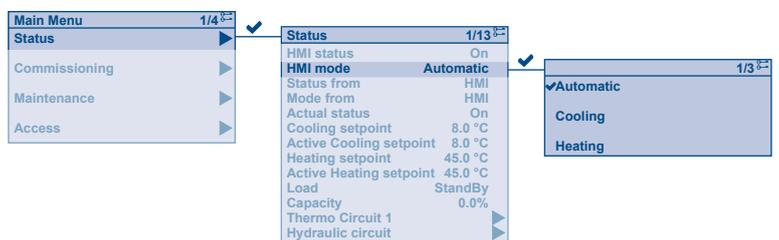


INFORMATION

Selection of the Automatic/Cooling/Heating mode is only possible in reversible units. This menu does not exist in the "cool only" versions.

The "Mode from" line states what is the trigger for the current operating mode:


- **DHW**
- **DI S/W**
- **HMI**
- **BMS**
- **Cascade**

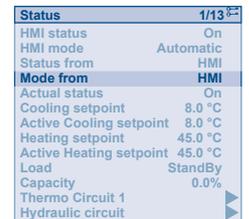

14.4.2. SELECTING THE OPERATING STATUS


To launch the unit, the user must select the desired mode in the menu:

- **Delegate:** the current mode is determined by the BMS or by default by the calendar (refer to the user manual)
- **Off:** Unit is stopped
- **On:** System is launched
- **Reduced mode**

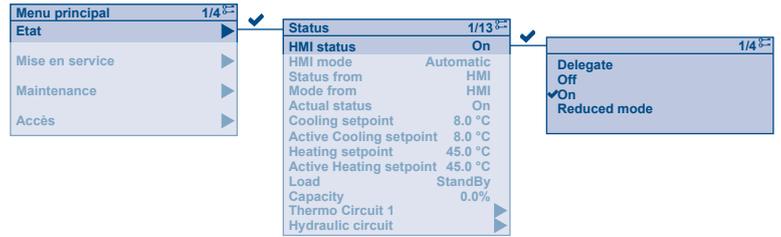


The "Status from" line states what is the trigger for the current status:

- **Scheduler**
- **DI On-Off:** D1 on/off digital input
- **Reduced DI:** DL1 configurable digital input (for "Night mode", "Eco mode", "Night eco mode" or "Request mode")
- **SG:** Smart Grid mode
- **HMI**
- **BMS**
- **Cascade**

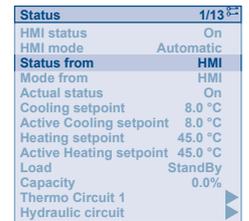

The "Actual status" line shows the current status:


- **On**
- **Reduced mode**
- **Off**

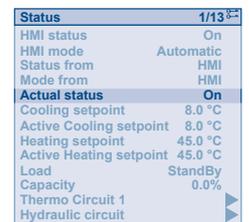

14.4.3. USER TEMPERATURE SETPOINTS AND ACTUAL SETPOINTS

In the Status menu, the user can set start or return temperature setpoints, according to the control mode selected:

- **Cooling setpoint :** temperature setpoint for the cool mode
- **Heating setpoint :** temperature setpoint for the heat mode

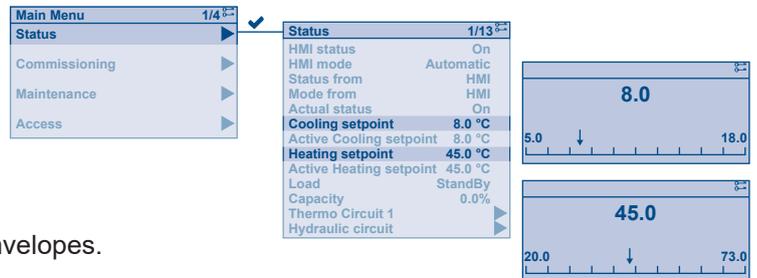

These setpoints are limited to the unit's operating envelopes.

- **Active Cooling setpoint :** current setpoint for cooling mode
- **Active Heating setpoint :** current setpoint for heating mode

Adjustment by activating the "Smart Grid", "Reduced mode", "Ambient Offset" or "Water law" options will cause the setpoints to vary automatically according to external conditions.

Actual heating and cooling setpoints match the values utilized in real time for optimal operation of units




INFORMATION

Regardless of the adjustment, the resulting setpoint is restricted to the operating limits to protect the unit.


14.5. ALARMS

If no alarm is active, pressing the  "Alarm" button takes you to the alarm history

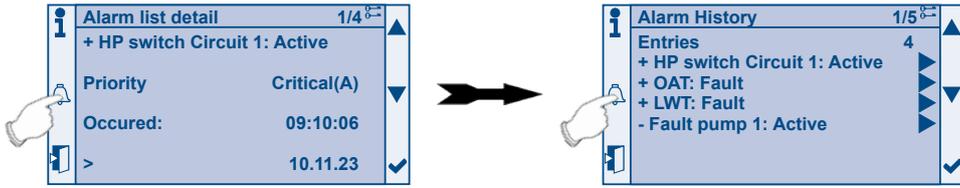

If at least one alarm or event is active, the alarm button flashes. Pressing the "alarm"  button, will display successively :


- The last active alarm (Alarm list detail)
- The list of active alarms (Alarm list)
- The alarms history (Alarm Hystory)
- The alarms menu and event (Alarming)

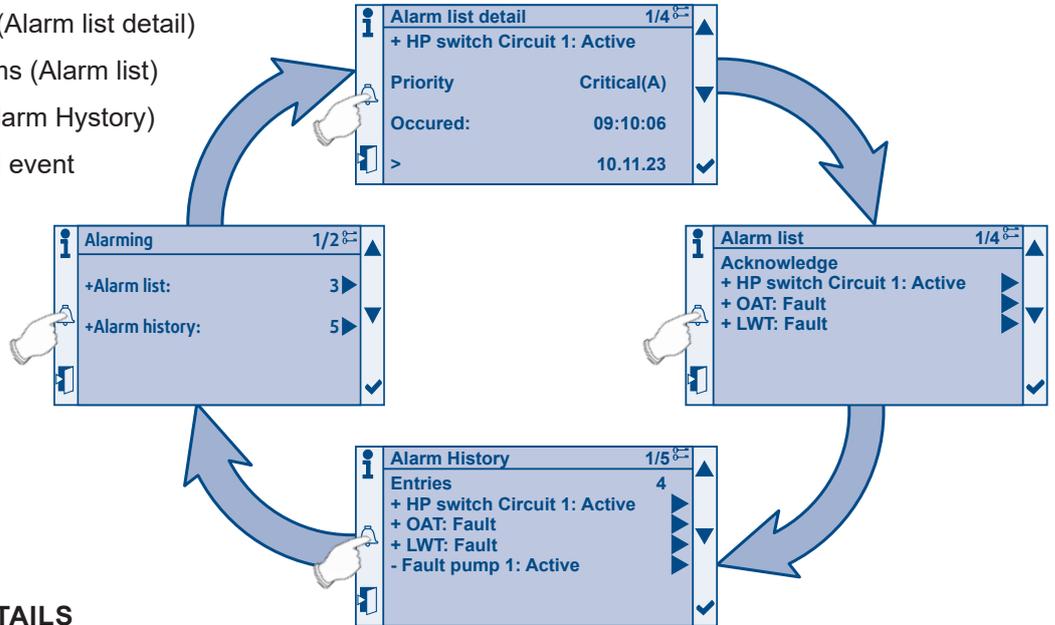

14.5.1. ALARM DETAILS

This page is displayed :


- Details of the last active alarm
- If you request the details of an alarm in the list of active alarms
- If you request the details of an alarm in the alarms history

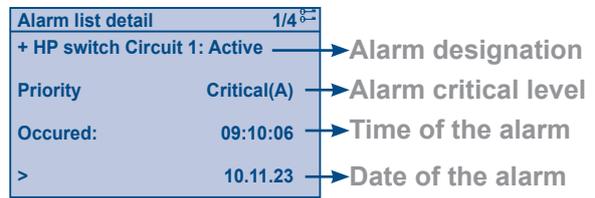


14.5.2. THE LIST OF ACTIVE ALARMS

The list of active alarms allows visualization of current alarms


The first line shows the number of active alarms (3 in the example below)

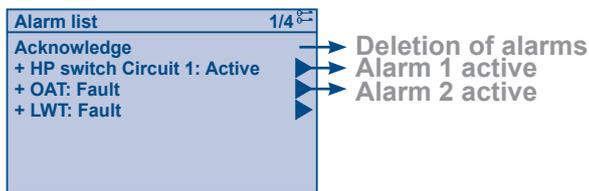

You can access the alarm details by selecting an alarm and pressing the "Enter" button .

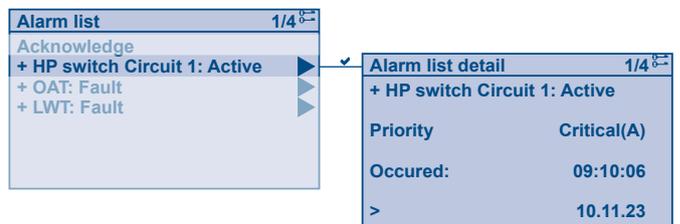


With installation or maintenance level access, you can acknowledge active blocking alarms. To do this select delete, confirm and select "Execute". Only the alarms that are no longer active will be deleted from the list.

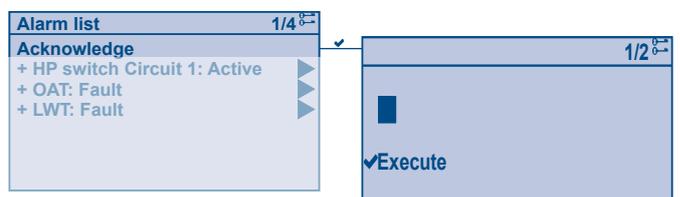

14.5.3. ALARMS HISTORY

This history reports the 150 most recent activation or deactivation of alarms:

- Activation of an alarm will be indicated by a "+"
- Deactivation of an alarm will be indicated by a "-"

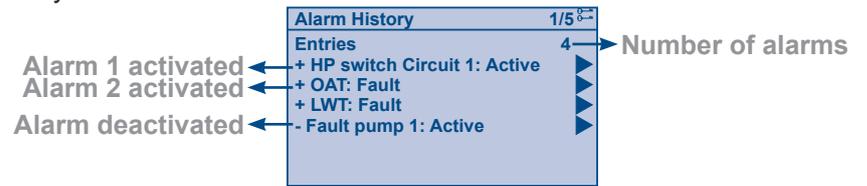

For the activation and deactivation time of an alarm, select the alarm and press the "enter" button ✓.

15. COMMISSIONING**INFORMATION**

THE COMMISSIONING FORM AVAILABLE IN THE ANNEX MUST BE COMPLETED, HANDED TO THE OPERATOR AND SENT TO THE MANUFACTURER AS A PRIOR CONDITION FOR THE WARRANTY TO APPLY.

**CAUTION**

When performing startup and service, thorough safety precautions shall always be taken.

Only a skilled person who is trained in the handling of refrigerating systems (as per standard EN13313) and flammable fluids (certified and with proof of relevant training) may carry out this work.

15.1. PRE-START CHECK LIST

Before commissioning the system, you must carry out a certain number of installation checks to ensure that the appliance will operate in the best possible conditions. The following list of checks is not exhaustive and only serves as a minimum reference guide.

1. Make sure that no source of ignition is present in the work area
2. Make sure that the work area is adequately ventilated
3. Make sure that suitable fire extinguishing equipment is available and within reach
4. Make sure that the concentration of R32 in the atmosphere of the work area is continuously controlled in order to be able to warn people of a potentially hazardous situation.
5. Check that the equipment installed, including options, matches the order
6. Check that the oil heating resistors have been energized for at least 12 hours.

15.1.1. VISUAL CHECK

1. Check the lack of debris or cardboard in the unit.
2. Check free clearances around the unit:
 - ✓ exchanger air intake
 - ✓ exchanger air outlet
 - ✓ access or maintenance work.
3. Unit mounted as specified.
4. Check that the unit is level and that condensates drain freely away from the unit (for Heat pump units).
5. Check that there is no possibility of blown air being recycled through the fans due to wind exposure.
6. In arduous climates (sub-zero temperature, snow, high humidity), check that the appliance is raised 10 cm off ground.
7. For loose or missing bolts or screws.

15.1.2. HYDRAULIC CHECK

1. Check that the external water circuit components (pumps, user equipment, filters, expansion tank and reservoir if supplied) have been correctly installed in accordance with the manufacturer's recommendations and that the water inlet and outlet connections are correct.
2. Check that the water quality complies with the indicated standards (Refer to the § **Water quality**, page 27).
3. Check that draining caps have been properly closed.
4. Check that the air vent in the unit has been opened.
5. **Check the presence, direction and position of the water filter upstream of the appliance (mailles \leq 800 μ m).**

6. Check the presence and position of the stop valves to isolate the unit during maintenance periods.
7. Check that the hydraulic circuit is filled correctly and that the fluid flows freely without any signs of leaks or air bubbles. When glycol anti-freeze is used, check that the concentration level is correct.
8. Check that the pump liners are not stuck. The shaft of the motor must turn freely "by hand". If necessary, free up the shaft using a tool.
9. Check the direction of rotation of the pump and leave the fluid to circulate for at least 12 hours for each pump. Then clean the pump inlet water filter.
10. Adjust the water flow in order to comply with the specifications.

15.1.3. REFRIGERATION CHECK


1. Leak test of the refrigeration circuit at the unions and on the various parts. The desired result is 5g/year maximum
2. Check that the fluid indicator is green (set by the factory) indicating absence of humidity.



CAUTION

The refrigeration circuit is equipped with a IV isolating valve between the plate exchanger and the compressor.

This valve used during the assembly process is open and **MUST NOT BE CLOSED UNDER ANY CIRCUMSTANCES DURING OPERATION.**

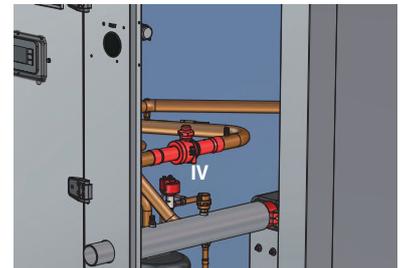

15.1.4. ELECTRICAL CHECK

1. Electrical installation has been carried out according to unit wiring diagram and the Supply Authority Regulations in effect.
2. Size fuses or circuit breaker has been installed at the main switchboard.
3. Supply voltages as specified on unit wiring diagram.
4. **Check that all of the appliance's electrical connections have been tightened.**
5. Check that no cables are in contact with pipes and/or sharp edges.
6. Check the electrical grounding of the appliance.
7. Check that the frequency inverters are consistent with the neutral point treatment of the unit (Refer to the § **Options variable flow pump**, page 33)

15.2. UNIT START-UP

15.2.1. PHASE ROTATION PROTECTION

If the phase of the power supply is not correct, the phase rotation protection device will prevent the machine from starting (Refer to the § **ELECTRICAL CONNECTIONS**, page 31).

If phase rotation is correct, close all circuit breakers.

15.2.2. FIRST START-UP

When starting up the unit, it is necessary to first energize the compressor casing resistors to evaporate the fluid and oil. The resistors are activated when the unit is switched on (including in standby mode). The controller will prevent start-up if the system is not ready.

Depending on the time of year and the customer requirement:

1. Configure hot/cold mode (Refer to the § **Selecting the operating mode**, page 44).
2. Start up the unit in manual mode: ON (Refer to the § **Selecting the operating status**, page 45).

15.2.3. OPERATING CHECK LIST

1. Check for any unusual noises or vibration in the running components.
2. Leak check of the refrigeration circuit in operation. The desired result is 5g/year maximum.
3. Adjust the water flow according to the desired ΔT for the water (Refer to the § **HYDRAULIC PUMPS CURVES**, page XXI).
 - ✓ Check pressure at the inlet and outlet of the plate exchanger
 - ✓ Determine the water flow using a flowmeter or the load loss of the plate exchanger
4. Take a reading of the currents at the compressor, fan and pump terminals.
5. Check there is no dampness during operation: green fluid indicator
6. Take a temperature reading of the cooling and hydraulic circuits after 20 minutes of stabilization, using the controller display.
 - ✓ Check the operating pressures are within normal limits.
 - ✓ Check discharge, suction and liquid temperatures
 - Discharge temperature on the cooling cycle should normally not exceed 115°C.
 - Suction superheat should be 6K \pm 2K.
 - Suction subcooling should be 5K \pm 2K.



INFORMATION

It is very important that the unit should operate with a water flow that conforms to the recommendations shown in § **Physical characteristics**, page 13. It is dangerous to leave the unit running with a low water flow; this could cause irreparable damage to the components and the plate exchanger. If the unit operates with insufficient flow, its performance will not be optimal.

15.2.4. PUMP MANAGEMENT

In the case of double pump option, both pumps never operate simultaneously: second pump will be started only in case of failure of the first one.

Both pumps are marked with numbers 1 and 2 corresponding to the pump selection switch in the HMI.

The pump change is not automatic. A qualified technician must operate manually. (Refer to the § **Procedure to switch from one pump to other**, page 59)

15.2.5. FINAL CHECK

Check that :

1. All panels and fan guards are in place and secured.
2. Unit clean and free of any installation material.

It is the installer's responsibility to complete the **ON-SITE INFORMATION** form on page 63 and to hand it to the operator. That document explains what to do in the event of an emergency.

The installer must also provide suitably protected documentation that must remain close to the refrigerating system operating site and be clearly legible.

16. IN CASE OF WARRANTY - MATERIAL RETURN PROCEDURE

Material must not be returned without permission of our After Sales Department.

To return the material, contact your nearest sales office and ask for a "return form". The return form shall be sent with the returned material and shall contain all necessary information concerning the problem encountered.

The return of the part is not an order for replacement. Therefore, a purchase order must be entered through your nearest distributor or regional sales office. The order should include part name, part number, model number and serial number of the unit involved.

Following our personal inspection of the returned part, and if it is determined that the failure is due to faulty material or workmanship, and in warranty, credit will be issued on customer's purchase order. All parts shall be returned to our factory, transportation charges prepaid.

17. ORDERING SERVICE AND SPARE PARTS ORDER

The part number, the order confirmation and the unit serial number indicated on the name plate must be provided whenever service works or spare parts are ordered.

For any spare part order, indicate the date of unit installation and date of failure. Use the part number provided by our service spare parts, if it not available, provide full description of the part required.

18. MAINTENANCE

Maintenance in accordance with our instructions will prolong the service life of your **ECOi-W AQUA-Z** :

- Better refrigeration performance
- Reduced power consumption
- Accidental component breakage prevention
- Prevention of heavy, late, and expensive maintenance work
- Environment protection

Depending on actual operational constraints and regulatory changes, the installer might recommend increased maintenance operations and more frequent inspections.

Prior to carrying out any work on the unit, the following precautions should be adhered to:

1. Make sure that no source of ignition is present in the work area
2. Make sure that the work area is adequately ventilated
3. Make sure that suitable fire extinguishing equipment is available and within reach
4. Make sure that the concentration of R32 in the atmosphere of the work area is continuously controlled in order to be able to warn people of a potentially hazardous situation.
5. Make sure that all electrical power sources are switched off.



CAUTION

The user is responsible for ensuring that the unit is in perfect working order and that the technical installation and **minimum maintenance** operations have been performed by a **qualified technician** in accordance with the procedures described in this manual.

18.1. TABLE OF PERIODIC SERVICE AND MAINTENANCE

It is essential to keep an up to date maintenance booklet to record temperature and pressure readings and all checks and maintenance operations performed on the **ECOi-W AQUA-Z**.



CAUTION

All refrigerating fluid charging, sampling and draining operations must be performed by a skilled technician using equipment adapted to the unit, in agreement with authority regulation in effect on site.

Any inappropriate handling may cause uncontrolled fluid venting into the atmosphere, fires and explosions.



WARNING

Opening the refrigeration circuit then involves vacuum drawing, checking the circuit sealing and recharging the refrigerating fluid. For any intervention on the refrigerating fluid circuit, first drain the unit's charge using a refrigerating fluid collection station.

The list of checks and verifications is provided as a partial guide only. It is the responsibility of the servicing and maintenance technician to adapt it according to local standards and regulations regarding the in-service monitoring of pressurized refrigerating systems.

tasks per components		Actions	6 months	12 months
			Recommended inspection and maintenance interval	
1 - Casing				
1.1	Control possible contaminations, damage and/or corrosion.	Clean and repair if required.		X
1.2	Check the possible presence of water (condensates, leakages, etc.).	Clean and look for the cause, then repair.	X	
1.3	Verify the appearance of the thermal insulation	Replace if required.		X
1.4	Check the state of the anti-vibration pads	Replace if required.		X
1.5	Check the condition of door gasket.	Replace if required.	At each inspection	
1.6	Check the condition of the markings	Replace if required.		X
2 - REFRIGERANT CIRCUIT				
2.1	Check there are no gas bubbles in the fluid line		X	
2.2	Check the lack of humidity in the refrigerating fluid		X	
2.3	Check the oil level of the compressors (use sight glass on the oil equalization pipe of compressor tandems)		X	
2.4	Check the pipes or capillaries do not rub and vibrate.			X
2.5	Check the compressors do not emit abnormal noise or vibration.		At each inspection	
2.6	Check the backflow temperature.		X	
2.7	Record the operating pressure	Check it is above or below those recorded when the unit was started up.	X	
2.8	Check the compressor fastening screws are tight.			X
2.9	Check the crankcase heater is powered on during the stop cycle.		X	
2.10	Check the cleanliness of the coil.	Clean if required.	X	
2.11	Check the filter drier clogging.	Replace if required	X	
2.12	Check the operation of the high pressure switch.	Replace if required		X
2.13	Check for the absence of refrigerating fluid leak (image + hydrocarbon detector)	Repair without delay and check after 1 month		X
2.14	Check the cycle reversal valve			X
2.15	Check the condition of the anti-vibration studs	Replace if required		X
2.16	Check and monitor changes in the thickness of tubes and main components (reserve fluid cylinder)	Replace if required		X

tasks per components		Actions	6 months	12 months
			Recommended inspection and maintenance interval	
3 - HYDRAULIC CIRCUIT				
3.1	Check the state of the function, check there is no damage nor corrosion.	Clean and repair.		X
3.2	Check the condition of the exchanger, in terms of corrosion and functionality.	Clean and repair.		X
3.3	Check the tightening of the pipe connections and fastening	Readjust and repair if necessary.		X
3.4	Verify the pressure value of the hydraulic circuit		X	
3.5	Bleed the air.		X	
3.6	Run the isolation valves			X
3.7	Check no ice has formed.			X
3.8	Check the condition of the piping thermal insulation.	Repair and replace if required.		X
3.9	Check the frost protection devices (glycol-based water, thermostat, etc.).	<p>Repair and replace if required.</p> <p>When air temperatures are wintery, and after general stoppage of the installation, the water contained in the plate exchanger may freeze.</p> <p>To prevent such problems, fully drain the unused plate exchanger or protect it by pouring an antifreeze solution into the hydraulic circuit or other devices.</p> <p>⚠ The manufacturer waives any liability for damage to the plate exchanger caused by water freezing inside the unit.</p>		
3.10	Check filter cleanliness.	Clean	X	
3.11	Check that the hydraulic circuit is filled properly		X	
3.12	Check the condition of the expansion tank (presence of excess corrosion, or gas pressure loss)	Replace if required.		X
3.13	Check the water pump	<p>If the unit has not been used for a long time, manually rotate the pump shaft and check that it turns freely.</p> <p>For a unit equipped with a double pump, it is advisable to switch from one pump to the other every month or to check that the pump shaft turns freely to prevent the liners sticking.</p>	X	
		<p>Replace the pump liner after 15 000 hours running with anti-freeze or 25 000 hours running with water.</p>	X	
3.14	Verify that the low water pressure sensor works correctly			X

tasks per components		Actions	6 months	12 months
			Recommended inspection and maintenance interval	
3.15	Record the water temperatures at the plate exchanger inlet and outlet.		X	
3.16	water quality - sampling + water analysis			X
4 - ELECTRIC CIRCUIT				
4.1	Check the electrical voltage applied to the unit, which must remain stable within the tolerances specified on the information plates.		X	
4.2	Check that the main supply cable is void of alterations likely to impact the insulation.	Replace if required.		X
4.3	Check the grounding of the metallic structure	Repair if required.		X
4.4	Inspect the contacts.	Replace if required.		X
4.5	Check that all electrical connections of the device are tight	Tighten if required.		X
4.6	Check the thermal protection relays of the motors	Replace if required.		X
4.7	Check the nominal intensity and condition of the fuses.			X
4.8	Check the condition of the condensers.			X
4.9	Clean the compressed air electrical unit to remove any dust or other contaminants building up.			X
4.10	Check the motor windings are insulated.			X
5 - FAN(S)				
5.1	Check for the absence of contamination, corrosion or damage.	Clean if required		X
5.2	Check proper fastening of the fan.	Tighten if required.		X
5.3	Check the vanes to guarantee balancing.	Clean if required.		X
5.4	Check the bearings for noise.	Repair if required.		X
5.5	Check the condition of the fan motor.			X
6 - REGULATION				
6.1	Check the condition of the alarms	Acknowledge them after taking them into consideration	X	
6.2	Check the setting points		X	
6.3	Check the operation of all probes		X	

18.2. MAINTENANCE PROCEDURES

18.2.1. GENERALITIES

This equipment must be submitted for sealing checks **at least once per year, by a professional authorized to perform such an operation**. Refer to national requirements for the frequency of these checks.



CAUTION

ANY BRAZING OPERATION ON THE COOLING CIRCUIT MUST BE PERFORMED WITH CONSTANT FLOWING NITROGEN.

18.2.2. REFRIGERANT FLUID DRAINING




CAUTION

Never use the compressor as a vacuum pump to drain the installation.

Before opening the refrigeration circuit, use the SV HP/SV LP service valves to:

1. drain the unit's charge using a recovery unit compatible with flammable refrigerants (non-sparking electrical components) until a residual pressure of 0.3 bar absolute is obtained.
2. purge the circuit with nitrogen
3. expel at a pressure of 0.3 bar absolute
4. perform a second nitrogen purge
5. open the circuit
6. use a detector to check there is no fluid.

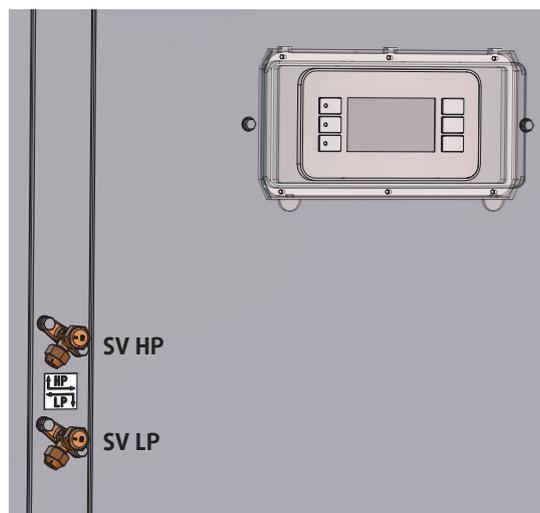


CAUTION

When opening the refrigeration circuit, be particularly alert to the presence of residual oil in the circuit. That oil may contain dissolved refrigerant and be potentially flammable.

18.2.3. REFRIGERANT FLUID CHARGE

The R32 charging procedure must be carried out by a qualified technician using the SV HP/SV LP service valves.

1. Create a vacuum in the refrigeration circuit to obtain at least 0.3 mbar.
The time it takes to create the vacuum depends on the person performing the task, as well as choosing the right moment to break the vacuum.
2. Fill with R32 up to the amount indicated on the product plate.
3. Close the SV HP and SV LP valves
 - ✓ valve tightening torque: 5N.m
 - ✓ plug tightening torque: 18N.m or 5N.m
4. Perform a leak check of the refrigeration circuit after charging. The desired result is 5g/year maximum.
5. Check for the absence of humidity: green fluid indicator.
6. Run the unit in refrigerating mode to determine whether the group's charge is correct by checking the sub-refrigeration (Refer to the § **Operating check list**, page 50).

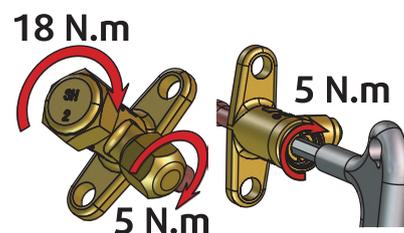

18.2.4. REPAIRS

**CAUTION**


Only the competent person trained in handling flammable refrigerants (demonstrated by proof of suitable training) is authorized to open or shut off the refrigerant circuit.

Repairs to components containing refrigerant must be undertaken by a competent person in accordance with the following sequence, if appropriate:

1. carry out a risk assessment and gauge the level of risk for the proposed repair.
2. inform the operator of the unit.
3. obtain authorization to proceed with the repair.
4. drain the fluid (Refer to the § **Refrigerant fluid draining**, page 56).
5. disconnect and make safe the components which are to be repaired.
6. clean and purge with nitrogen.
7. carry out the repair.
8. subject the repaired component to testing and verification (test with nitrogen at service pressure, leak testing).

**CAUTION**

The maximum authorized pressure at the compressor intake (BP) is 30.4 bar. For all service pressure testing, the pressure should be held at 30.4 bar, the isolating valve (IV) closed, and finally service pressure attained. The isolating valve and non-return valve at the compressor exhaust isolate it and protect it as a whole unit.

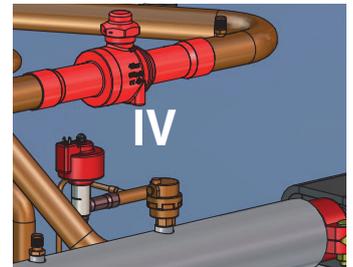

9. open the isolating valve (IV).
10. charge with refrigerant (Refer to the § **Refrigerant fluid charge**, page 56).
11. subject the unit to testing and verification (leak test and operating test).

18.2.5. SPECIFIC COMPONENTS

18.2.5.1. COMPRESSORS

Oil for refrigeration equipment is light and transparent. It maintains its colour for a long operating period.

As a refrigeration system designed and installed properly will run without problem, the compressor oil does not require replacement, even after a long operating period.

Blackened oil has been exposed to impurities in the refrigeration piping system, or excess temperatures on the compressor backflow side, which inevitably degrades oil quality. Blackening oil or degradation of its qualities may also be caused by humidity in the system. Change the oil when its colour changes or when it is degraded.

For any maintenance operation requiring the oil to be topped up or replaced, you must use an oil such as 4MA-POE, and adhere strictly to the volume indicated on the rating plate. In addition, you must follow the procedures mentioned in § **Refrigerant fluid draining**, page 56 and in § **Refrigerant fluid charge**, page 56.



CAUTION

Compressors use polyester oil. During maintenance interventions on the compressor, or if the refrigeration circuit has to be opened in any point, do not forget that this type of oil is highly hygroscopic, and avoid exposing it to the atmosphere during long periods, which would require to change the oil.



WARNING

Protect the **ECOi-W AQUA-Z** frame so as to get back oil that could flow out accidentally.

18.2.5.2. FILTER DRIER

Refrigeration circuits are fitted with filter driers.

The fluid indicator is used to check the refrigeration flow and humidity rate of the refrigerating fluid. The presence of bubbles indicates that the filter drier is clogged or that the charge is insufficient.

If you notice that air bubbles remain even after the filter has been replaced, this means the device has lost part of its cooling product in one or several places, which will need to be detected and repaired.

The glass window contains a color indicator. By comparing the indicator color with the scale on the glass window, the humidity rate of the refrigerating fluid can be calculated. If the humidity rate is too high, replace the filter, run the system for one day, then check the humidity rate again.

A humidity rate within the preset limits requires no further intervention. If the humidity rate remains too high, replace the filter drier again, start the unit, and run it for another day.

18.2.5.3. EXTERNAL EXCHANGER



CAUTION

Fin edges are sharp and can cause injury. Avoid contact with them.

External exchanger are composed of copper tubes and aluminum fins. In case of leaks due to damage or shock, the coils must be repaired by one of the authorized Support Centers. To guarantee the best possible operation of the condenser bank, the external exchanger surface must be kept as clean as possible, and it must be free of foreign objects (leaves, wires, insects, slag, etc.). A dirty coil will use more electrical power. In addition, condensation pressure could increase and trigger a high pressure alarm.

Clean the air exchanger using a special product for aluminum-copper coils and rinse with water. Do not use hot water or steam, as these may increase the pressure of the refrigerating fluid's.



CAUTION

Avoid damaging the aluminum fins during cleaning. Never use pressurized water without a wide diffuser. Concentrated and/or rotating water jets are strictly prohibited.



18.2.5.4. PLATE HEAT EXCHANGER

Verify the pressure difference between the inlet and the outlet of the heat plate exchanger. If the water pressure and flow rate values do not correspond to the pressure loss curves available Refer to the § **PRESSURE LOSSES OF THE PLATE HEAT EXCHANGER**, page XX , the heat plate exchanger may be foul up. To clean it, use a non corrosive solvent to remove calcareous deposits. The equipment used for the external water flow, the quantity of solvent and safety measures applied must be approved by the company supplying the cleaning products, or the one performing these operations.


18.2.5.5. PROCEDURE TO SWITCH FROM ONE PUMP TO OTHER

The procedure to switch from one pump to the other is the following in case of pump 1 failure (for example):

1. Turn the main power switch of the **ECOi-W AQUA-Z** in position OFF
2. Close the upstream and downstream valves of the pump 1 (see photo)
3. Open the upstream and downstream valves of the pump 2

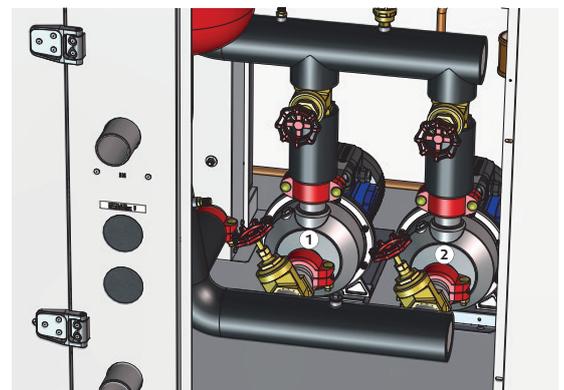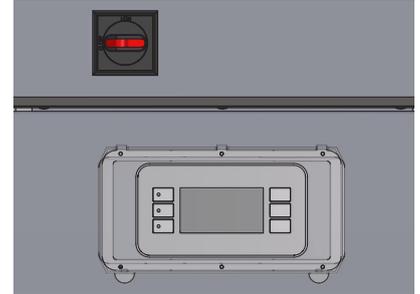

4. Turn the main power switch of the **ECOi-W AQUA-Z** in position ON to restart.

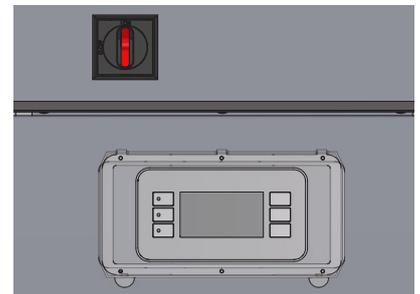

5. Toggle the pump selection in the HMI to pump 2

18.2.6. WINTER PROTECTION

In winter, after a general stoppage of the installation or a regulation malfunction, the water contained in the hydraulic circuit may start freezing.

To prevent any problems if the hydraulic circuit is not glycolated, it is recommended to fully drain any circuits not used and to pressurize them with nitrogen or protect them by adding an anti-freeze solution or other measures.

The concentration of anti-freeze solution must be regularly and carefully checked before each winter season.



CAUTION

The manufacturer waives any liability for damage of a plate exchanger caused by water freezing of water contained inside does not engage the responsibility of the manufacturer with respect to this incident (low winter temperature or water start temperature below 5°C in summer mode).

19. TROUBLE SHOOTING

Problem	Probable cause	Solution
Unit operates continuously but without generating cooling	Insufficient refrigerant fluid charge.	Top up the refrigerant fluid charge.
	Clogged dehumidification filter.	Replace the dehumidification filter.
Excessive noise	Vibrating pipe work	Attach the pipe work correctly.
		Check the pipe work attachments.
	Noisy compressor	Check the condition of the valves.
		Seized bearings. Replace the compressor
	Check the tightness of the compressor attachment nuts.	
One or both compressors do not operate.	Electrical circuit cut.	Check the electrical circuit and seek out any grounding and/or short-circuits. Check the circuit breaker.
	High pressure pressostat activated.	Reset the pressostat from the control panel and restart the unit. Identify and eliminate the causes of this activation.
	Control circuit fuse blown.	Check the control circuit and seek out any grounding and/or short-circuits. Replace the fuses.
	Connection problem	Check the tightness of all the electrical connection terminals.
	Electrical circuit thermal protection cuts in.	Check the operation of the control and safety devices. Identify and eliminate the cause of the activation.
	Incorrect wiring.	Check the wiring of the control and safety devices.
	Mains voltage too low.	Check the power line. Eliminate any possible problems associated with the system. If the problem is due to the network, inform the Electricity Company.
	Compressor motor short-circuited.	Check the continuity of the motor winding.
	Compressor seized	Replace the compressor.
Circuit stoppage following activation of the low pressure thermostat.	Presence of a leak.	Locate and repair the leak.
	Insufficient refrigerant fluid charge.	Top up the refrigerant fluid charge.
	Pressostat operating fault.	Replace the pressostat.
Circuit stoppage following activation of the high pressure thermostat.	Incorrect operation of the high pressure pressostat.	Check the operation of the pressostat. Replace it if required.
	Non-condensable particles in the circuit.	Bleed the circuit
	Condenser fan(s) not operating.	Check the wiring and the motors. Repair and replace if required.
Liquid line too hot	Insufficient refrigerant fluid charge.	Locate and eliminate the causes of charge losses and top up the refrigerant fluid charge.
Liquid line frozen	Clogged dehumidification filter.	Replace the filter cartridge.

Problem	Probable cause	Solution
Fans do not operate.	Electrical circuit problems.	Check the connections.
	Internal circuit thermal cut-out activated.	Contact an approved Service Center.
Reduced output in both Heating and Cooling mode	Compressor operating fault	Contact an approved Service Center.
	Dirt in the evaporator water circuit.	Chemical cleaning of the evaporator water circuit.
	Condenser battery blocked.	Clean the condenser battery.
	Insufficient refrigerant fluid charge.	Top up the refrigerant fluid charge.
Evaporator heater is not operating.	No power supply.	Check the main fuse and the auxiliary fuses.
	Heater circuit open	Check the heater and replace if required.
No/ little control over water temperature.	Incorrect thermostat setting.	Check the temperature setting on the control panel.
	Incorrect temperature differential between evaporator inlet and outlet.	Check the water flow and the quantity of liquid in the water circuit.
	Electronic control system malfunction.	Contact an approved Service Center.
Insufficient water circulation.	Air in the circuit	Bleed the air via the safety valve.
	Deposits or impurities in the evaporator.	Wash out the evaporator by back-flushing.
Unit not operating, no alarm activation	Water circulation fault	Check the pump.
	Flow controller inoperable.	Check the flow controller.



CAUTION
BEFORE STARTING WORK ON THE EQUIPMENT,
YOU SHOULD ENSURE IT IS LOCKED OUT/
TAGGED OUT WHENEVER POSSIBLE.



APPENDIX
ANNEXE
ANLAGE
ALLEGATO
ANEXO

APPENDIX

DIMENSIONS	III	ECOi-W AQUA-Z 70-130 single pump.....	XVIII
ECOi-W AQUA-Z 70-75 - AC fans.....	III	ECOi-W AQUA-Z 70-130 double pump.....	XVIII
ECOi-W AQUA-Z 70-75 AC fans with buffer tank.....	IV	ECOi-W AQUA-Z 70-130 single pump with buffer tank.....	XIX
ECOi-W AQUA-Z 70-75 - EC fans.....	V	ECOi-W AQUA-Z 70-130 double pump with buffer tank.....	XIX
ECOi-W AQUA-Z 70-75 EC fans with buffer tank.....	VI	PRESSURE LOSSES OF THE PLATE HEAT EXCHANGER	XX
ECOi-W AQUA-Z 70-75 HPF fans.....	VII	PRESSURE LOSSES OF THE DESUPERHEATER	XX
ECOi-W AQUA-Z 70-75 HPF fans with buffer tank.....	VIII	HYDRAULIC PUMPS CURVES	XXI
ECOi-W AQUA-Z 85-130 AC fans.....	IX	ECOi-W AQUA-Z 70-75 - Standard pressure pump.....	XXI
ECOi-W AQUA-Z 85-130 AC fans with buffer tank.....	X	ECOi-W AQUA-Z 85-100 - Standard pressure pump.....	XXI
ECOi-W AQUA-Z 85-130 EC fans.....	XI	ECOi-W AQUA-Z 115-130 - Standard pressure pump.....	XXI
ECOi-W AQUA-Z 85-130 EC fans with buffer tank.....	XII	ECOi-W AQUA-Z 70-75 - high pressure pump.....	XXII
ECOi-W AQUA-Z 85-130 HPF fans.....	XIII	ECOi-W AQUA-Z 85-100 - high pressure pump.....	XXII
ECOi-W AQUA-Z 85-130 HPF fans with buffer tank.....	XIV	ECOi-W AQUA-Z 115-130 - high pressure pump.....	XXII
REFRIGERANT CIRCUIT DIAGRAM	XV	WIRING DIAGRAM	XXIII
ECOi-W AQUA-Z 70-130 - Heat pump.....	XVI	Legend.....	XXIV
HYDRAULIC CIRCUIT DIAGRAM	XVII	COMMISSIONING FORM	XLV
ECOi-W AQUA-Z 70-130 without pump.....	XVIII		

ANNEXE

DIMENSIONS	III	ECOi-W AQUA-Z 70-130 pompe simple.....	XVIII
ECOi-W AQUA-Z 70-75 - ventilateurs AC.....	III	ECOi-W AQUA-Z 70-130 pompe double.....	XVIII
ECOi-W AQUA-Z 70-75 ventilateurs AC avec ballon tampon.....	IV	ECOi-W AQUA-Z 70-130 pompe simple avec ballon tampon.....	XIX
ECOi-W AQUA-Z 70-75 - ventilateurs EC.....	V	ECOi-W AQUA-Z 70-130 pompe double avec ballon tampon.....	XIX
ECOi-W AQUA-Z 70-75 ventilateurs EC avec ballon tampon.....	VI	PERTE DE CHARGE DE L'ÉCHANGEUR A PLAQUES	XX
ECOi-W AQUA-Z 70-75 ventilateurs HPF.....	VII	PERTE DE CHARGE DESURCHAUFFEUR	XX
ECOi-W AQUA-Z 70-75 ventilateurs HPF avec ballon tampon.....	VIII	COURBES DES POMPES HYDRAULIQUES	XXI
ECOi-W AQUA-Z 85-130 ventilateurs AC.....	IX	ECOi-W AQUA-Z 70-75 - Pompe pression standard.....	XXI
ECOi-W AQUA-Z 85-130 ventilateurs AC avec ballon tampon.....	X	ECOi-W AQUA-Z 85-100 - Pompe pression standard.....	XXI
ECOi-W AQUA-Z 85-130 ventilateurs EC.....	XI	ECOi-W AQUA-Z 115-130 - Pompe pression standard.....	XXI
ECOi-W AQUA-Z 85-130 ventilateurs EC avec ballon tampon.....	XII	ECOi-W AQUA-Z 70-75 - pompe haute pression.....	XXII
ECOi-W AQUA-Z 85-130 ventilateurs HPF.....	XIII	ECOi-W AQUA-Z 85-100 - pompe haute pression.....	XXII
ECOi-W AQUA-Z 85-130 ventilateurs HPF avec ballon tampon.....	XIV	ECOi-W AQUA-Z 115-130 - pompe haute pression.....	XXII
SCHEMA DU CIRCUIT FRIGORIFIQUE	XV	SCHEMAS ELECTRIQUES	XXIII
ECOi-W AQUA-Z 70-130 - Pompe à chaleur.....	XVI	Légende.....	XXIV
SCHEMA DU CIRCUIT HYDRAULIQUE	XVII	FORMULAIRE DE MISE EN SERVICE	XLV
ECOi-W AQUA-Z 70-130 sans pompe.....	XVIII		

ANLAGE

ABMESSUNGEN	III	ECOi-W AQUA-Z 70-130 Einzelpumpe.....	XVIII
ECOi-W AQUA-Z 70-75 - Ventilatoren AC.....	III	ECOi-W AQUA-Z 70-130 Doppelpumpe.....	XVIII
ECOi-W AQUA-Z 70-75 Ventilatoren AC mit Vorratsbehälter.....	IV	ECOi-W AQUA-Z 70-130 Einzelpumpe mit Vorratsbehälter.....	XIX
ECOi-W AQUA-Z 70-75 - Ventilatoren EC.....	V	ECOi-W AQUA-Z 70-130 Doppelpumpe mit Vorratsbehälter.....	XIX
ECOi-W AQUA-Z 70-75 Ventilatoren EC mit Vorratsbehälter.....	VI	DRUCKVERLUST PLATTENWÄRMEÜBERTRAGER	XX
ECOi-W AQUA-Z 70-75 HPF-Ventilatoren.....	VII	DRUCKVERLUSTE DES ENTWÄRMETERS	XX
ECOi-W AQUA-Z 70-75 HPF-Ventilatoren mit Vorratsbehälter.....	VIII	KURVEN VON HYDRAULIKPUMPEN	XXI
ECOi-W AQUA-Z 85-130 AC-Ventilatoren.....	IX	ECOi-W AQUA-Z 70-75 - Standarddruckpumpe.....	XXI
ECOi-W AQUA-Z 85-130 AC-Ventilatoren mit Vorratsbehälter.....	X	ECOi-W AQUA-Z 85-100 - Standarddruckpumpe.....	XXI
ECOi-W AQUA-Z 85-130 EC-Ventilatoren.....	XI	ECOi-W AQUA-Z 115-130 - Standarddruckpumpe.....	XXI
ECOi-W AQUA-Z 85-130 EC-Ventilatoren mit Vorratsbehälter.....	XII	ECOi-W AQUA-Z 70-75 - Hochdruckpumpe.....	XXII
ECOi-W AQUA-Z 85-130 HPF-Ventilatoren.....	XIII	ECOi-W AQUA-Z 85-100 - Hochdruckpumpe.....	XXII
ECOi-W AQUA-Z 85-130 HPF-Ventilatoren mit Vorratsbehälter.....	XIV	ECOi-W AQUA-Z 115-130 - Hochdruckpumpe.....	XXII
KÄLTEKREISLAUFDIAGRAMM	XV	STROMLAUFPLANS	XXIII
ECOi-W AQUA-Z 70-130 - Wärmepumpen.....	XVI	Erläuterung.....	XXIV
HYDRAULISCHER SCHALTPLAN	XVII	FORMULAR ZUR INBETRIEBNAHME	XLV
ECOi-W AQUA-Z 70-130 Keine Pumpe.....	XVIII		

ALLEGATO


DIMENSIONI	III	ECOi-W AQUA-Z 70-130 pompa singola.....	XVIII
ECOi-W AQUA-Z 70-75 - versione AC.....	III	ECOi-W AQUA-Z 70-130 doppia pompa.....	XVIII
ECOi-W AQUA-Z 70-75 versione AC con serbatoio.....	IV	ECOi-W AQUA-Z 70-130 pompa singola con serbatoio.....	XIX
ECOi-W AQUA-Z 70-75 - versione EC.....	V	ECOi-W AQUA-Z 70-130 doppia pompa con serbatoio.....	XIX
ECOi-W AQUA-Z 70-75 versione EC con serbatoio.....	VI	PERDITA DI CARICO SCAMBIATORE A PIASTRE	XX
ECOi-W AQUA-Z 70-75 ventilatori HPF.....	VII	PERDITA DI CARICO DESURRISCALDATORE	XX
ECOi-W AQUA-Z 70-75 ventilatori HPF con serbatoio.....	VIII	CURVE DELLE POMPE IDRAULICHE	XXI
ECOi-W AQUA-Z 85-130 ventilatori AC.....	IX	ECOi-W AQUA-Z 70-75 - Pompa prevalenza standard.....	XXI
ECOi-W AQUA-Z 85-130 ventilatori AC con serbatoio.....	X	ECOi-W AQUA-Z 85-100 - Pompa prevalenza standard.....	XXI
ECOi-W AQUA-Z 85-130 ventilatori EC.....	XI	ECOi-W AQUA-Z 115-130 - Pompa prevalenza standard.....	XXI
ECOi-W AQUA-Z 85-130 ventilatori EC con serbatoio.....	XII	ECOi-W AQUA-Z 70-75 - Pompa di alta prevalenza.....	XXII
ECOi-W AQUA-Z 85-130 ventilatori HPF.....	XIII	ECOi-W AQUA-Z 85-100 - Pompa di alta prevalenza.....	XXII
ECOi-W AQUA-Z 85-130 ventilatori HPF con serbatoio.....	XIV	ECOi-W AQUA-Z 115-130 - Pompa di alta prevalenza.....	XXII
SCHEMA DEL CIRCUITO REFRIGERANTE	XV	SCHEMA ELETRICO	XXIII
ECOi-W AQUA-Z 70-130 - Pompa di calore.....	XVI	Leggenda.....	XXIV
SCHEMA CIRCUITALE IDRAULICO	XVII	MODULO DI AVVIAMENTO	XLV
ECOi-W AQUA-Z 70-130 no pompa.....	XVIII		

ANEXO


DIMENSIONES	III	ECOi-W AQUA-Z 70-130 bomba simple.....	XVIII
ECOi-W AQUA-Z 70-75 - Versión AC.....	III	ECOi-W AQUA-Z 70-130 bomba doble.....	XVIII
ECOi-W AQUA-Z 70-75 Versión AC con balón intermedio.....	IV	ECOi-W AQUA-Z 70-130 bomba simple con balón intermedio.....	XIX
ECOi-W AQUA-Z 70-75 - Versión EC.....	V	ECOi-W AQUA-Z 70-130 bomba doble con balón intermedio.....	XIX
ECOi-W AQUA-Z 70-75 Versión EC con balón intermedio.....	VI	PÉRDIDA DE CARGA INTERCAMBIADOR DE PLACAS	XX
ECOi-W AQUA-Z 70-75 ventiladores HPF.....	VII	PÉRDIDA DE CARGA DESRECALENTADOR	XX
ECOi-W AQUA-Z 70-75 ventiladores HPF con balón intermedio.....	VIII	CURVAS BOMBAS HIDRÁULICAS	XXI
ECOi-W AQUA-Z 85-130 ventiladores de CA.....	IX	ECOi-W AQUA-Z 70-75 - Bomba de presión estándar.....	XXI
ECOi-W AQUA-Z 85-130 ventiladores de CA con balón intermedio.....	X	ECOi-W AQUA-Z 85-100 - Bomba de presión estándar.....	XXI
ECOi-W AQUA-Z 85-130 ventiladores CE.....	XI	ECOi-W AQUA-Z 115-130 - Bomba de presión estándar.....	XXI
ECOi-W AQUA-Z 85-130 ventiladores CE con balón intermedio.....	XII	ECOi-W AQUA-Z 70-75 - Bomba de alta presión.....	XXII
ECOi-W AQUA-Z 85-130 ventiladores HPF.....	XIII	ECOi-W AQUA-Z 85-100 - Bomba de alta presión.....	XXII
ECOi-W AQUA-Z 85-130 ventiladores HPF con balón intermedio.....	XIV	ECOi-W AQUA-Z 115-130 - Bomba de alta presión.....	XXII
ESQUEMA DEL CIRCUITO FRIGORIFICO	XV	ESQUEMA ELECTRICO	XXIII
ECOi-W AQUA-Z 70-130 - Bomba de calor.....	XVI	Leyenda.....	XXIV
ESQUEMA CIRCULAR HIDRÁULICO	XVII	FORMULARIO DE PUESTA	XLV
ECOi-W AQUA-Z 70-130 sin bomba.....	XVIII		

DIMENSIONS
DIMENSIONS
ABMESSUNGEN
DIMENSIONI
DIMENSIONES


ECOi-W AQUA-Z 70-75 - AC FANS

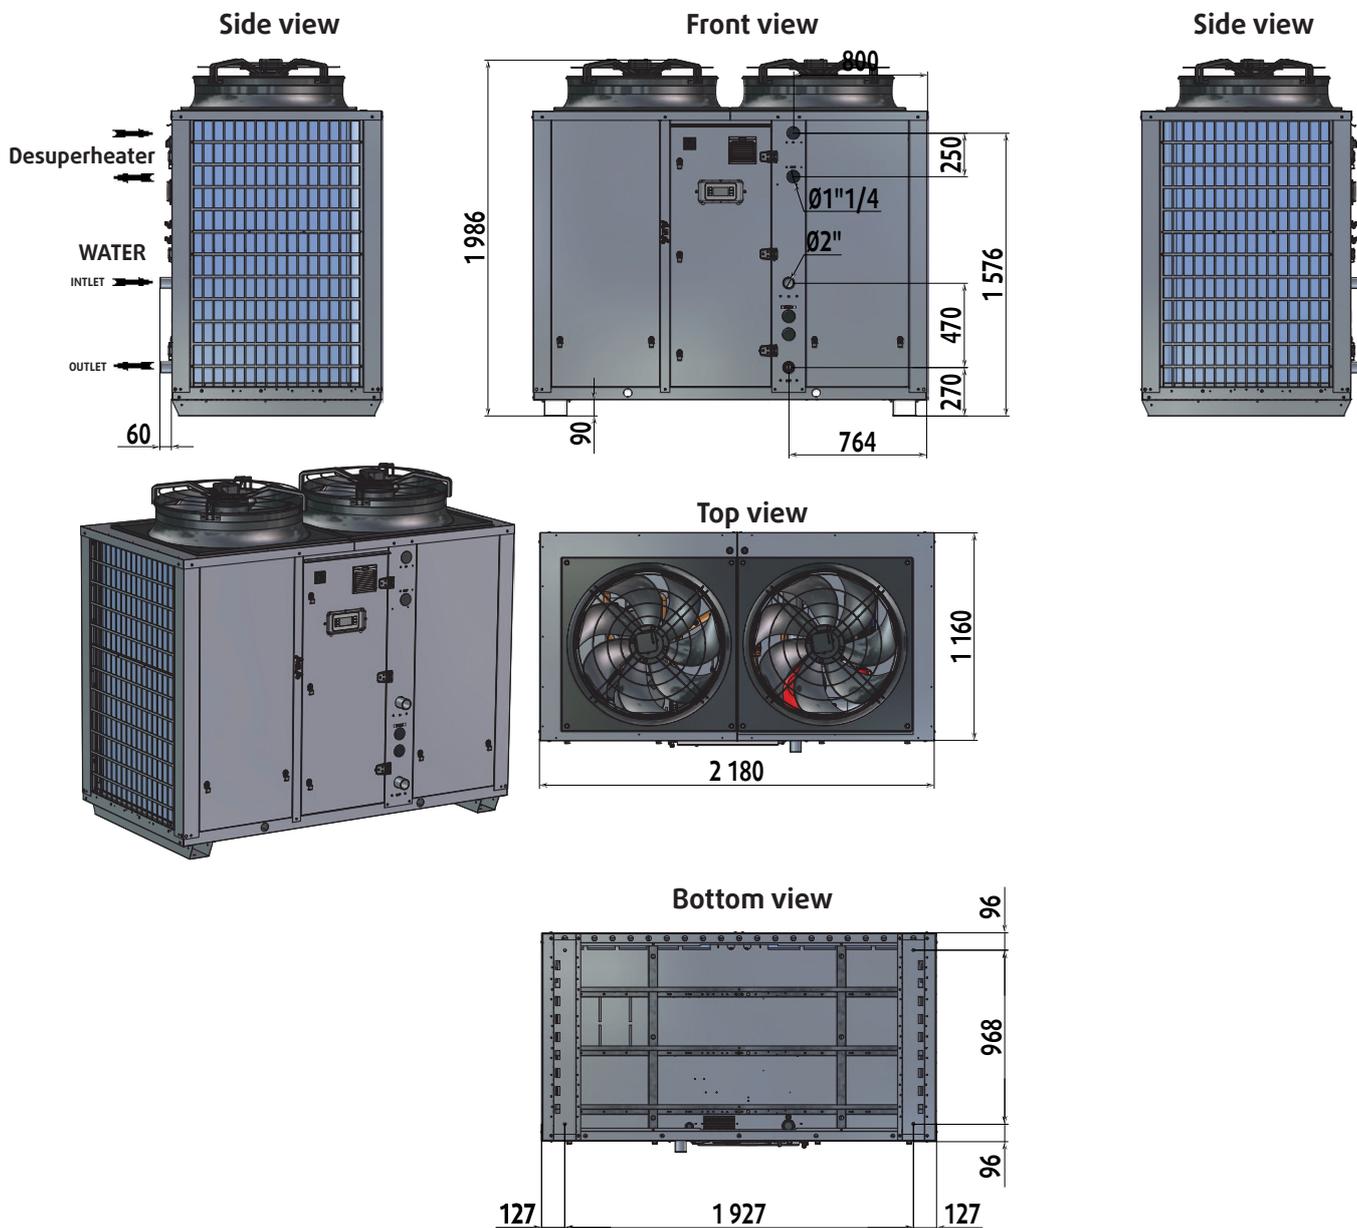


ECOi-W AQUA-Z 70-75 AC FANS WITH BUFFER TANK

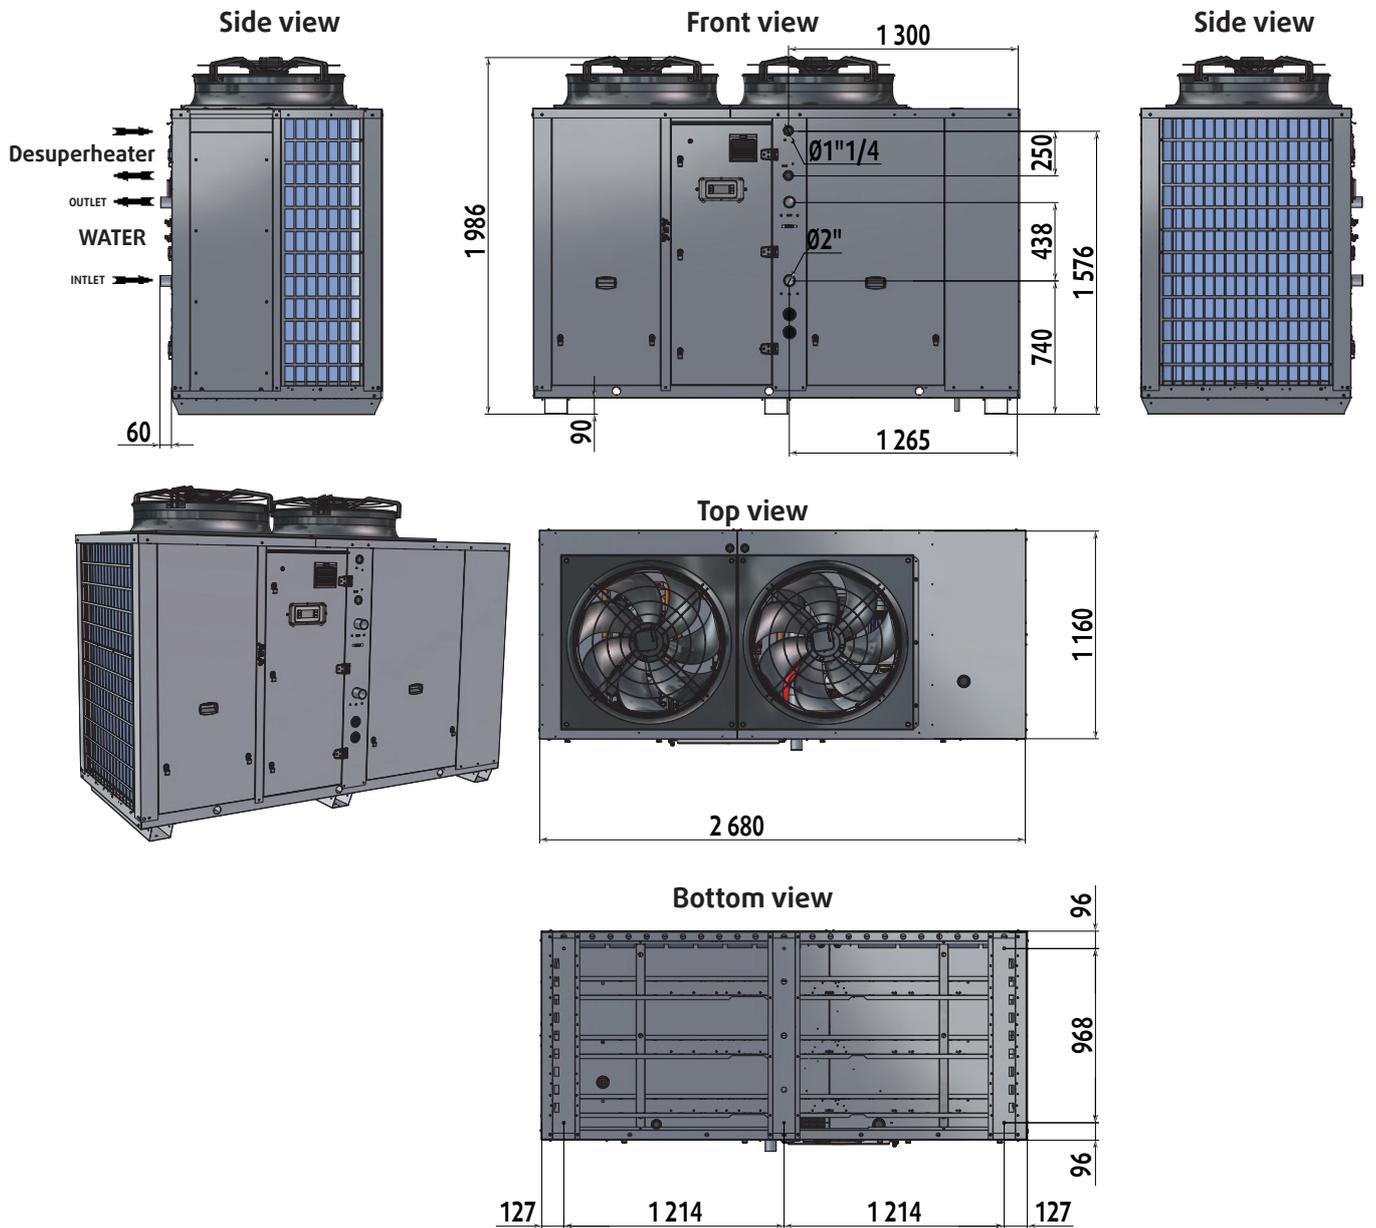


ECOi-W AQUA-Z 70-75 - EC FANS

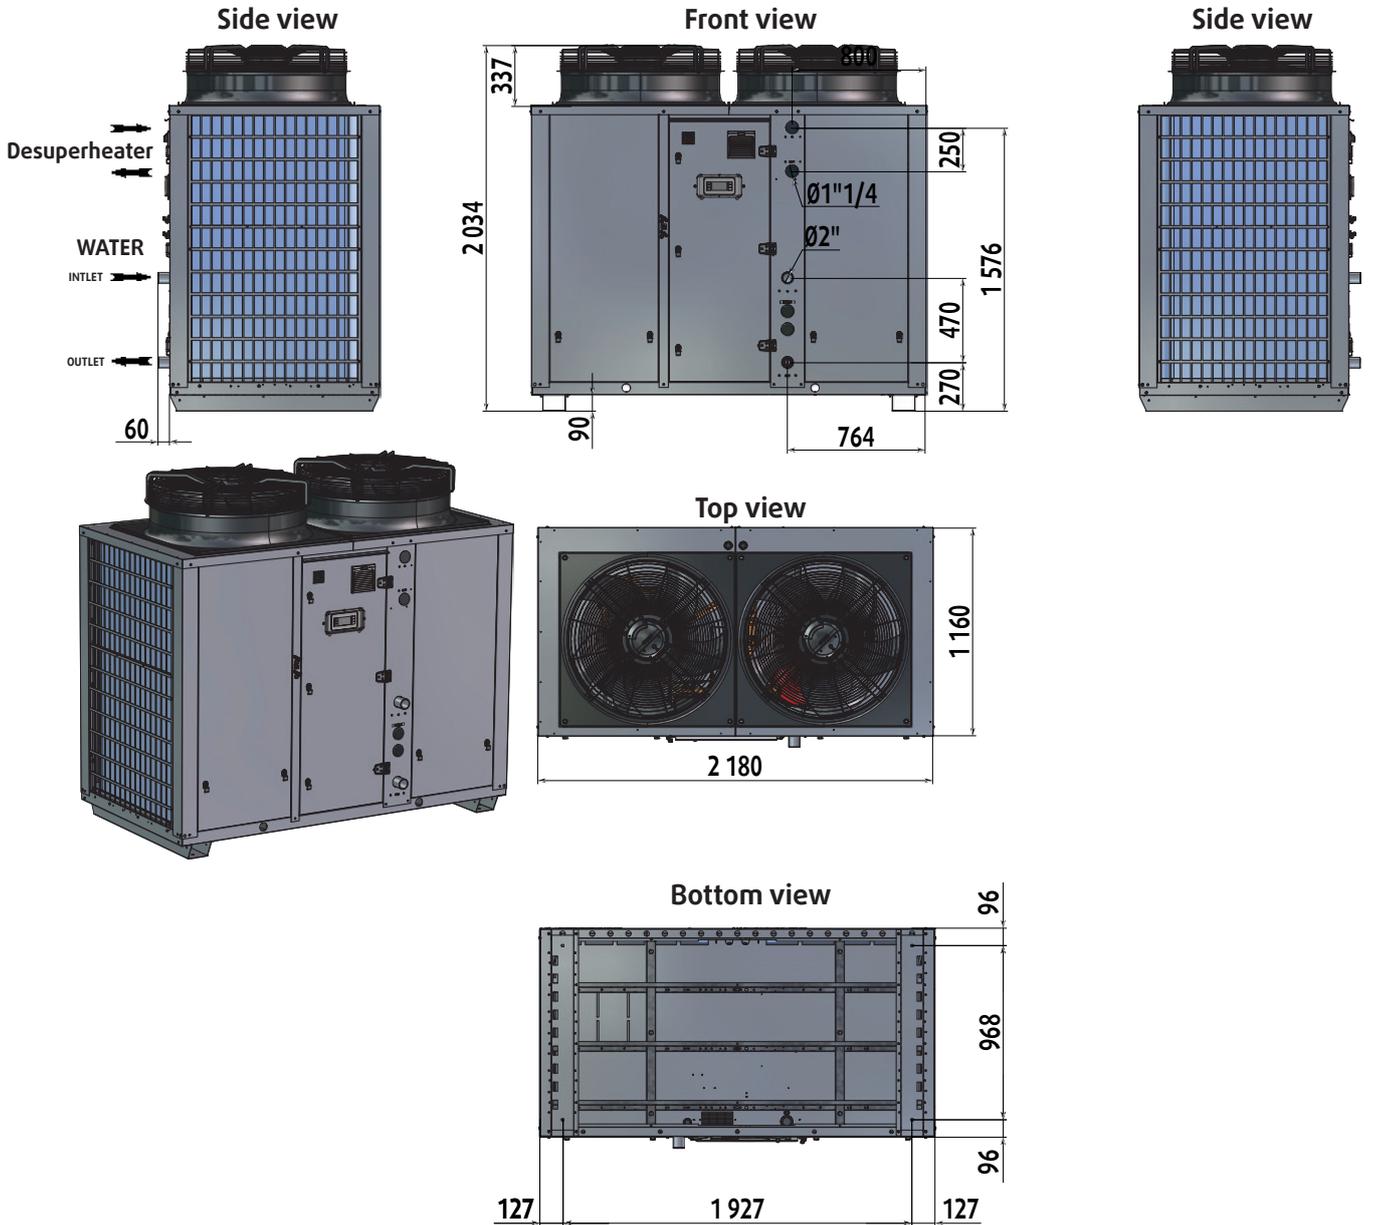


ECOi-W AQUA-Z 70-75 EC FANS WITH BUFFER TANK

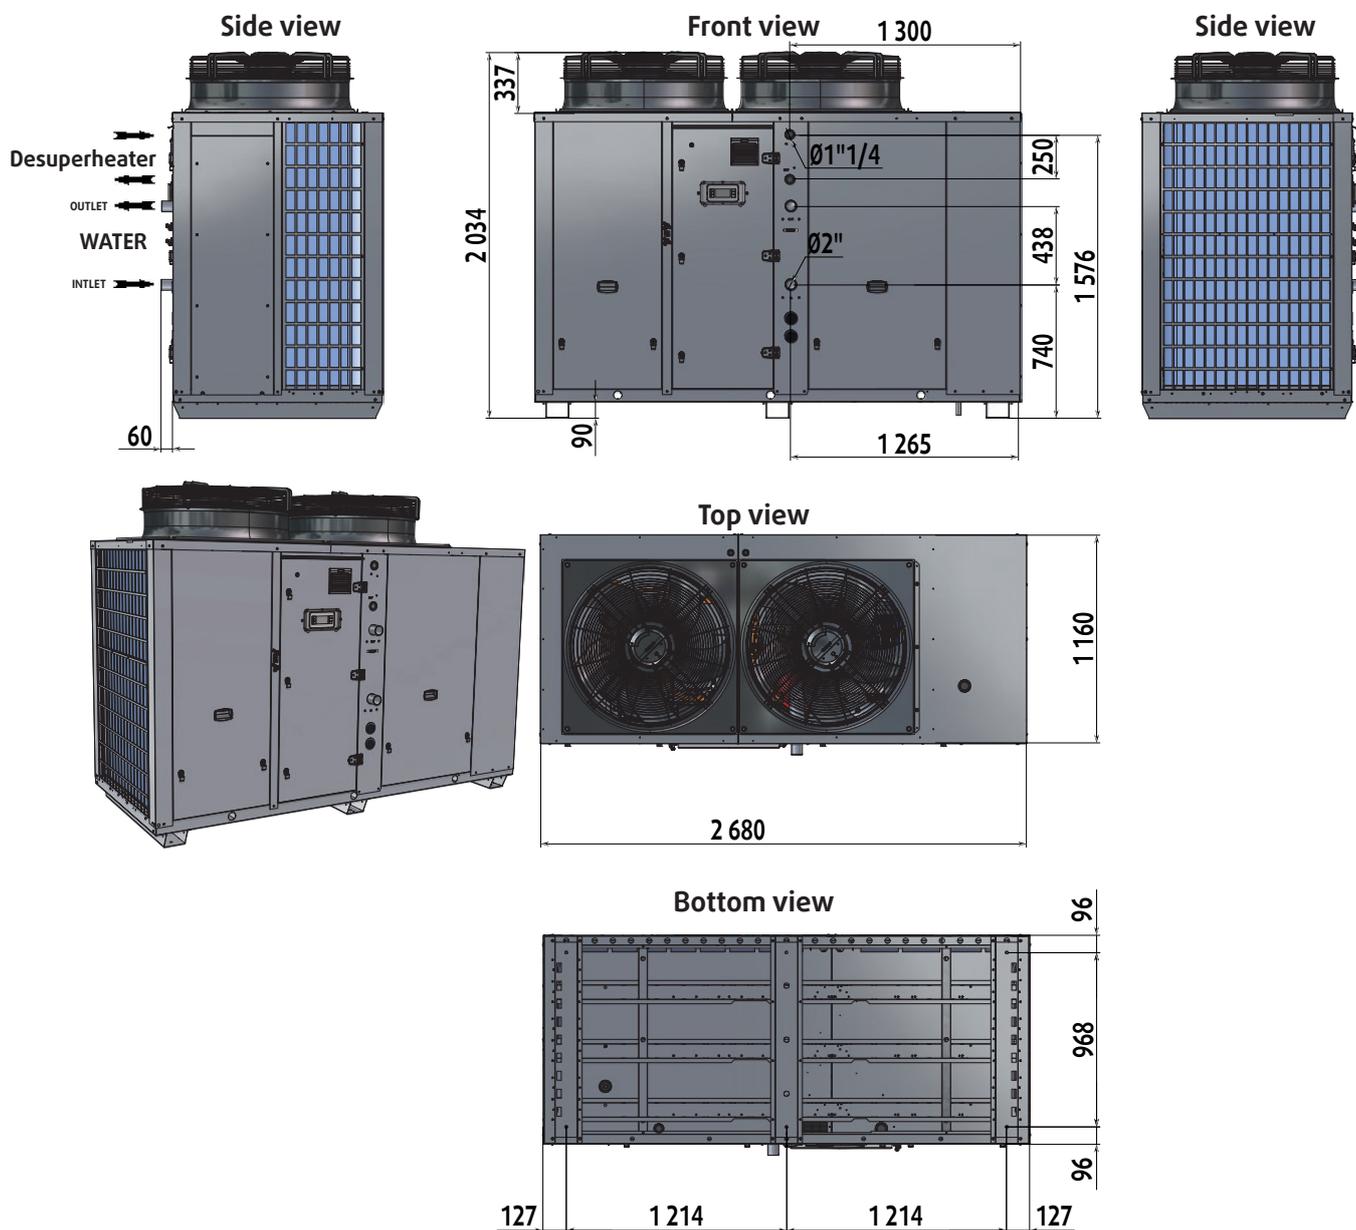


ECOi-W AQUA-Z 70-75 HPF FANS

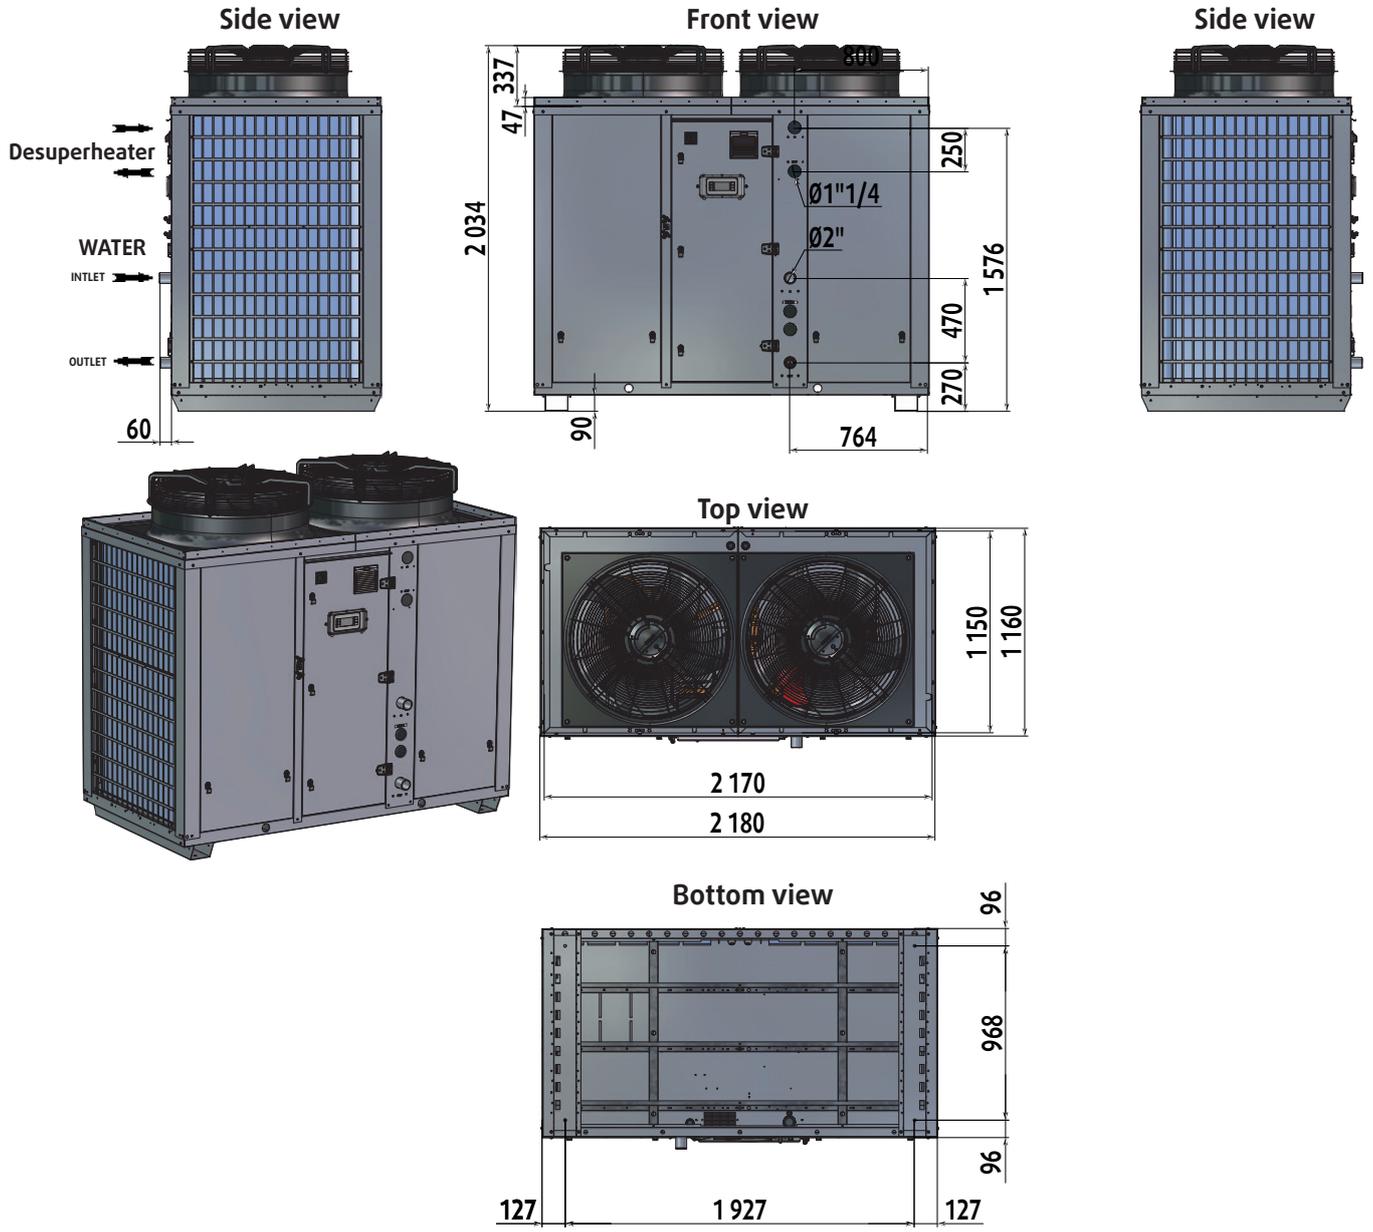


ECOi-W AQUA-Z 70-75 HPF FANS WITH BUFFER TANK

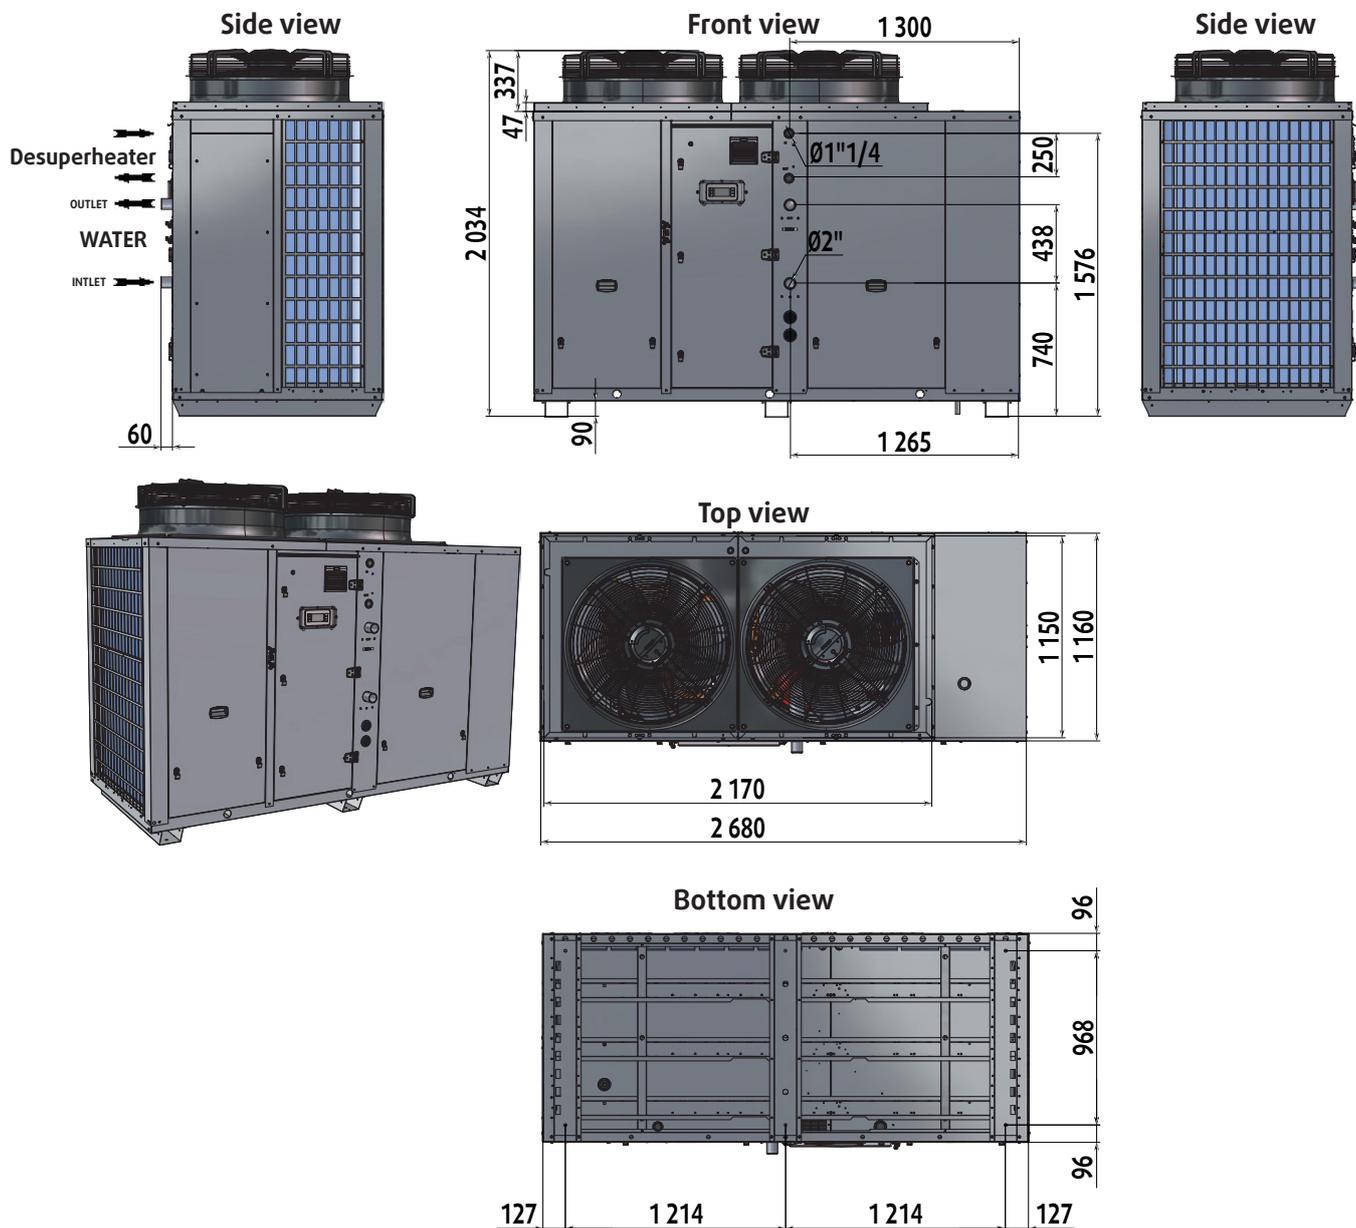


ECOi-W AQUA-Z 85-130 AC FANS

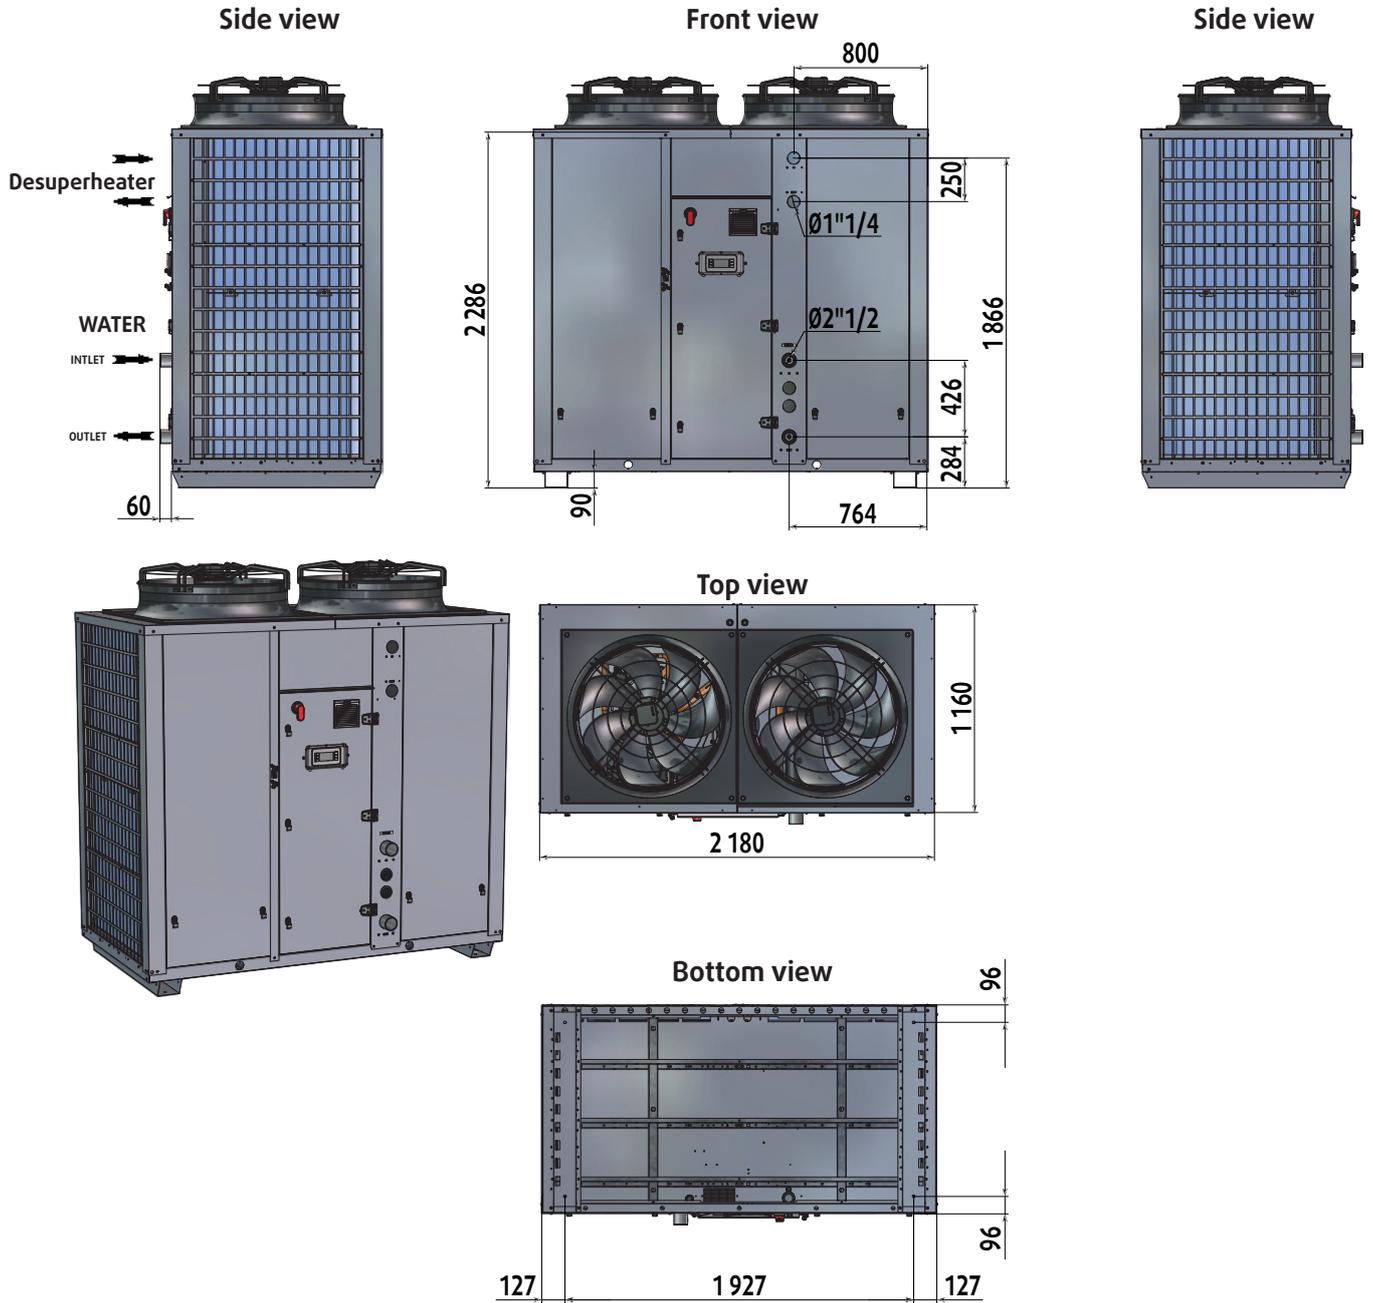


ECOi-W AQUA-Z 85-130 AC FANS WITH BUFFER TANK

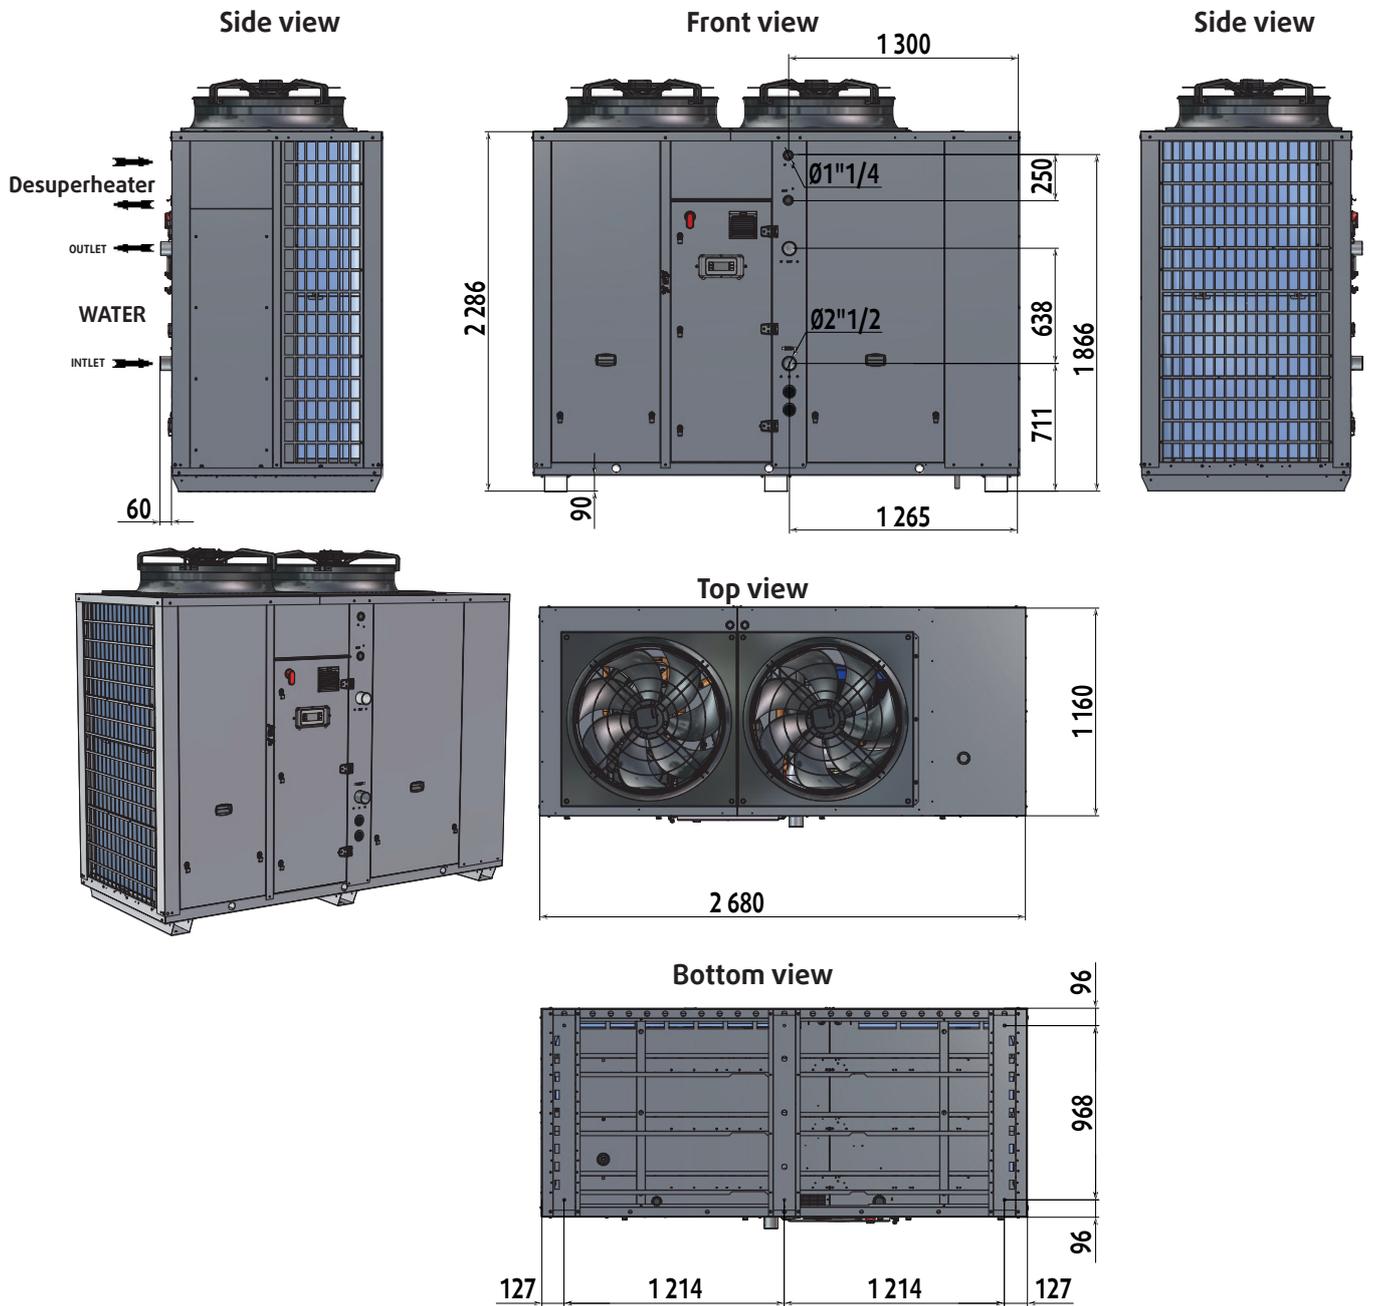


ECOi-W AQUA-Z 85-130 EC FANS

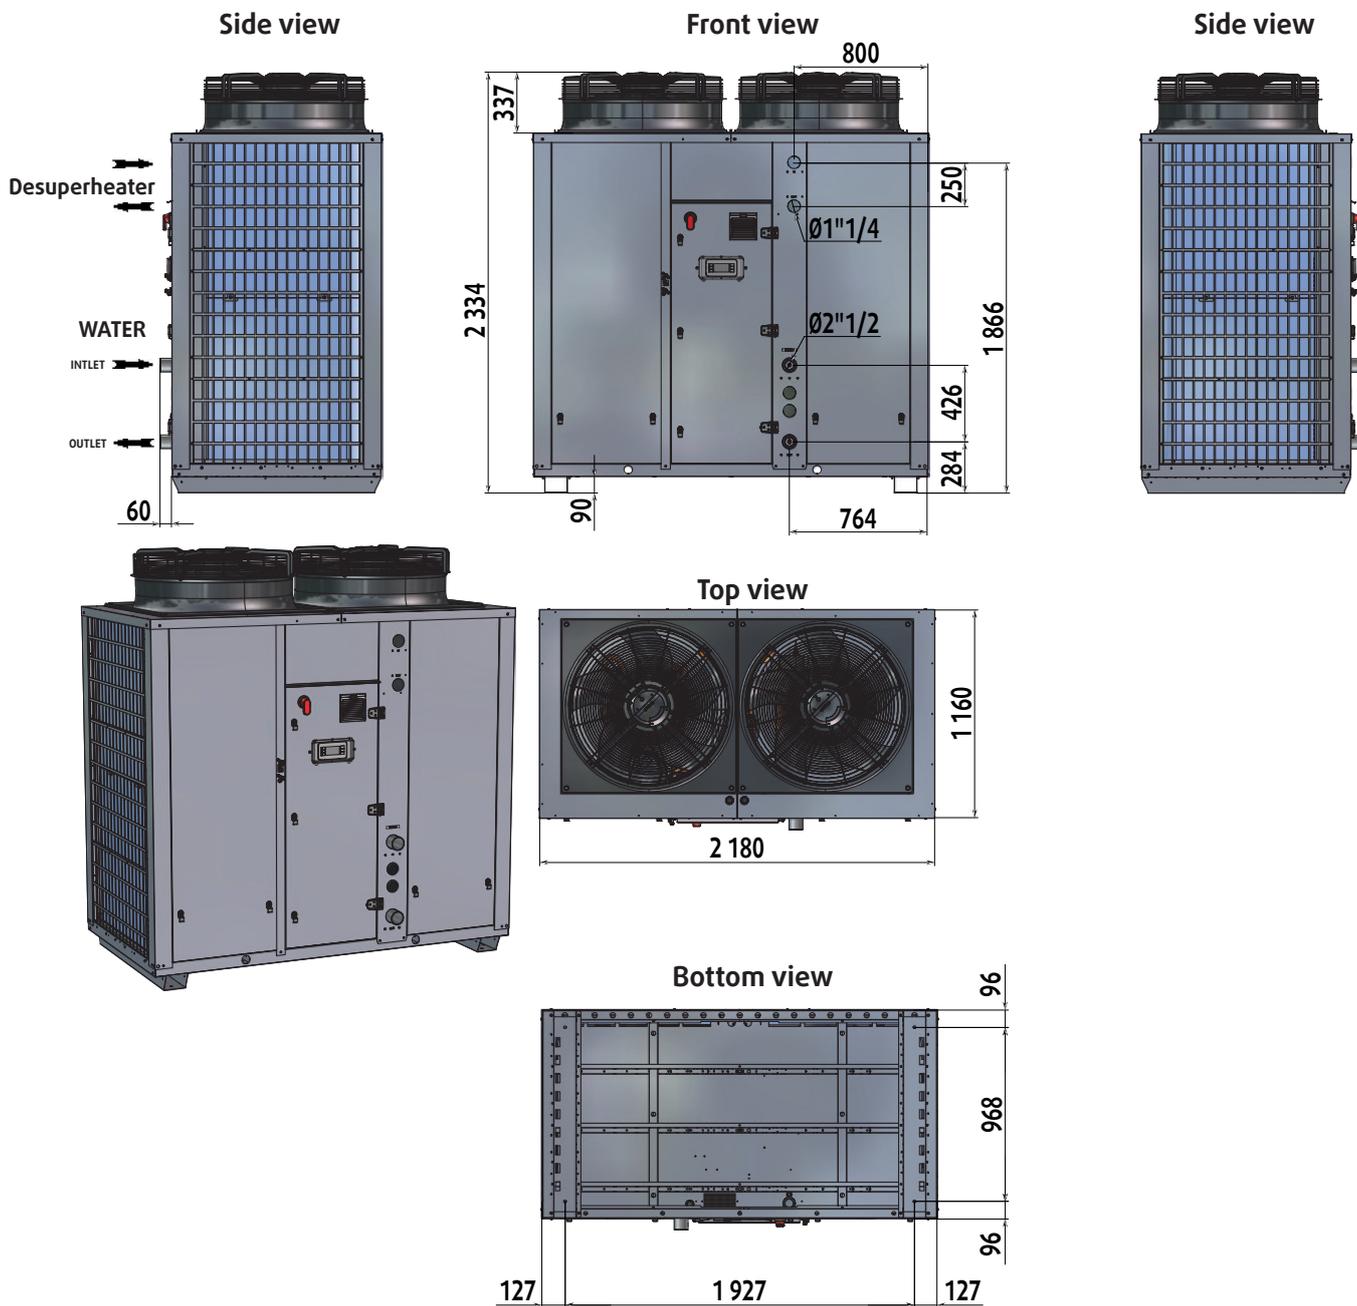


ECOi-W AQUA-Z 85-130 EC FANS WITH BUFFER TANK

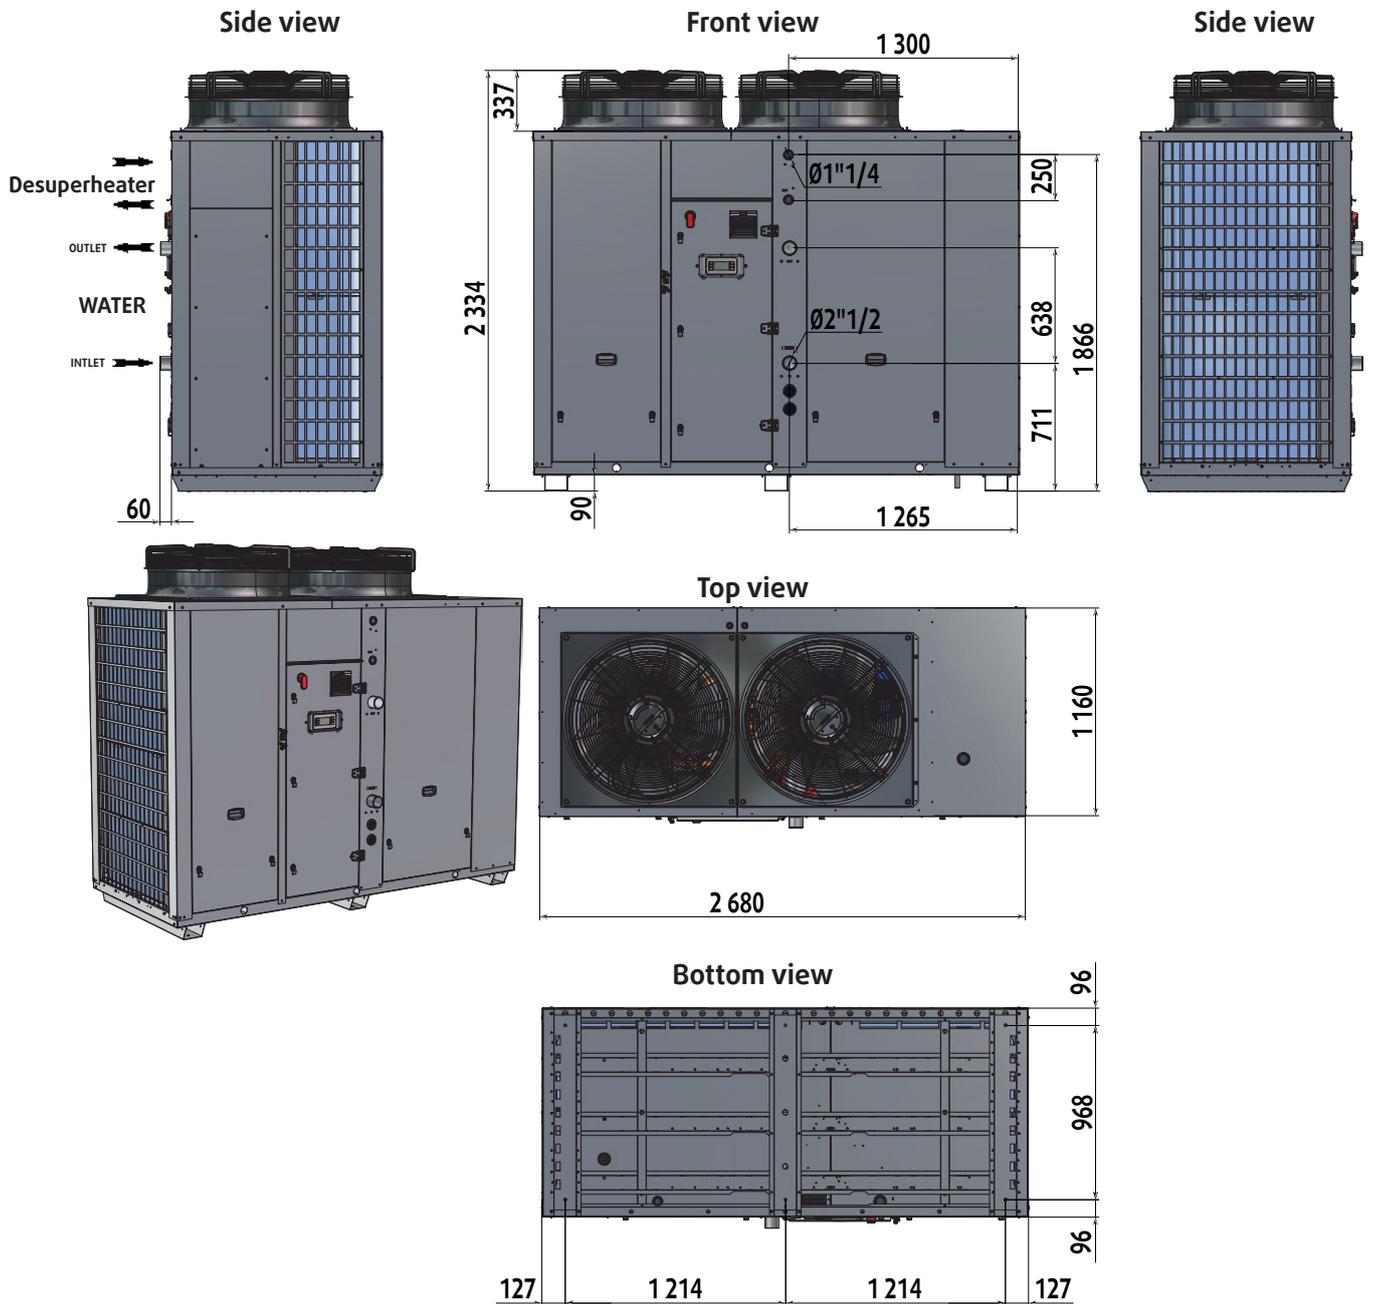

ECOi-W AQUA-Z 85-130 HPF FANS

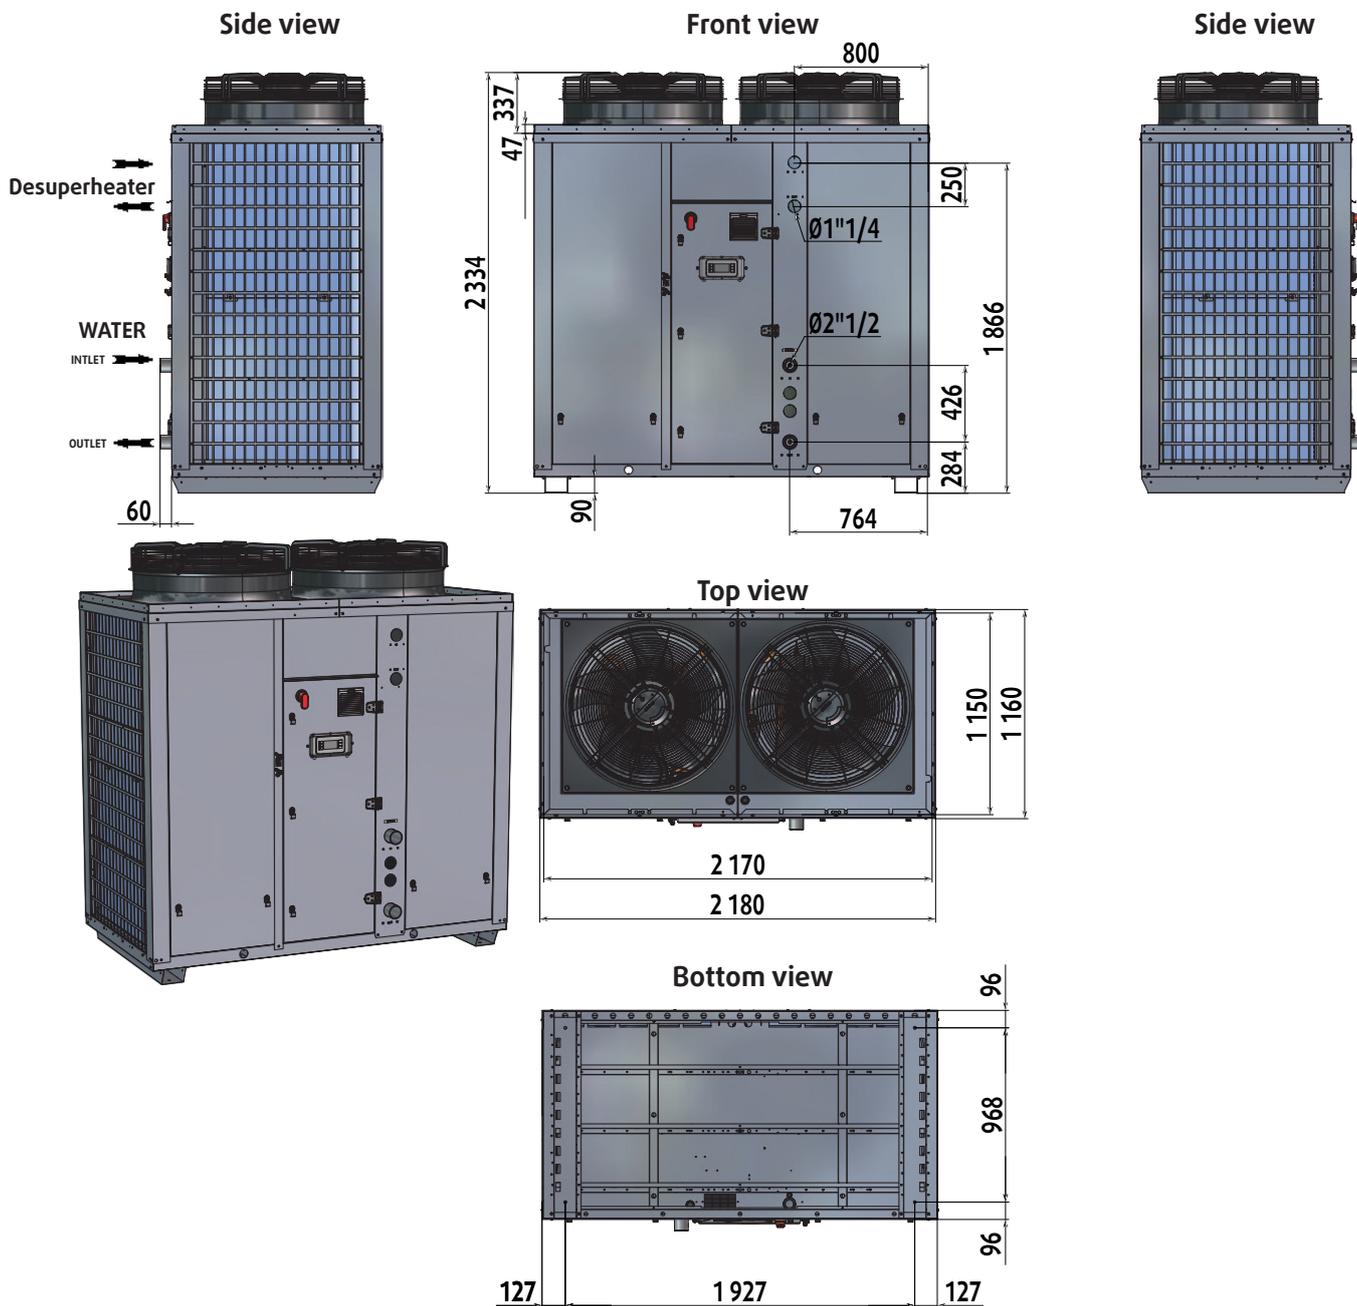

ECOi-W AQUA-Z 85-130 HPF FANS WITH BUFFER TANK

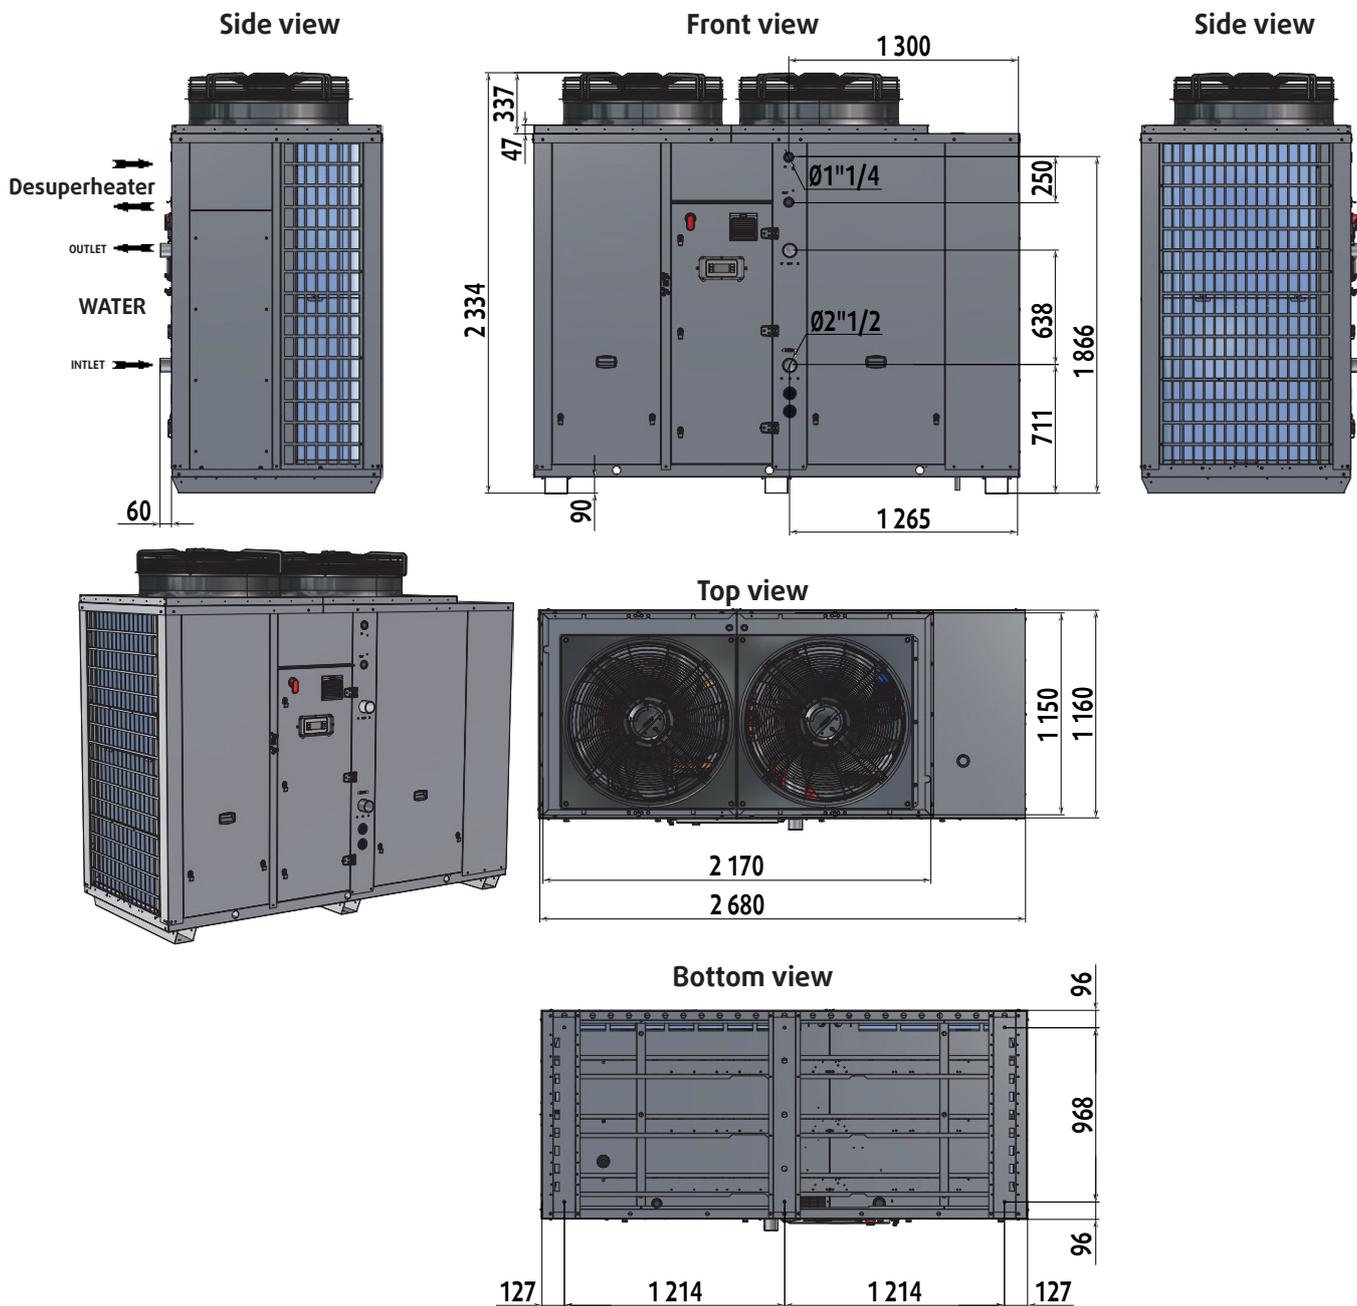

REFRIGERANT CIRCUIT DIAGRAM

SCHEMA DU CIRCUIT FRIGORIFIQUE


KÄLTEKREISLAUFDIAGRAMM

SCHEMA DEL CIRCUITO REFRIGERANTE

ESQUEMA DEL CIRCUITO FRIGORIFÍCO

	English	Français	Deutsch	Italiano	Español
C-1.1 / C-1.2	Compressors 1 et 2	Compresseurs 1 et 2	Verdichter 1 und 2	Compressore 1 e 2	Compresores 1 y 2
2	Desuperheater (optional)	Désurchauffeur (option)	Enthitzer (Option)	Desurriscaldatore (opzione)	Desrecalentador (opcional)
RV-1.1	Cycle reversal valve	Vanne inversion de cycle	Umkehrzyklusventil	Valvola di inversione ciclo	Válvula de inversión de ciclo
OF-1.1 / OF-1.2	Outdoor fan motor	Moteur de la ventilation extérieure	Motor der externen Lüftung	motore della ventilazione esterna	Motor de la ventilación exterior
3	Air cooled condenser	Condenseur à air	Verflüssigerbündel	Condensatore ad aria	Condensador de aire
4	Filter drier	Filtre déshydrateur	Filterrockner	Filtro-essiccatore	Filtro deshidratador
CV	Check valve	Clapet antiretour	Rückschlagventil	Valvola di non ritorno	Válvula antirretorno
5	Sight glass	Voyant liquide	Schauglas	Spia di vetro	Indicador luminoso de líquido
EEV-1.1	Electronic expansion valve	Détendeur électronique	Elektronisches Expansionsventil	valvola di espansione elettronica	Válvula de expansión electrónica
7	Liquid reservoir	Bouteille accumulation liquide	Sammler	Accumulatore di liquido	Botella de acumulación de líquido
8	Plate heat exchanger	Evaporateur à plaques	Plattenverdampfer	Evaporatore a piastre	Evaporador de placas
↓	Pressure tapping point 1/4"	Prise de pression 1/4"	1/4" Druckanschluss	Prisa di pressione 1/4"	Toma de presión 1/4"
CDT-1.1 / CDT-1.2	Discharge temperature sensor	Sonde température refolement	Auslass-Temperaturfühler	Sonda temperatura di scarico	Sonda de temperatura descarga
PSHP-1.1	High pressure switch	Pressostat haute pression	Überdruckschalter	Pressostato di alta pressione	Presóstato de alta presión
PTHP-1.1	High pressure transducer	Transducteur haute pression	Hochdruckgeber	Trasduttore di alta pressione	Transductor de alta presión
PTLP-1.1	Low pressure transducer	Transducteur basse pression	Niederdruckgeber	Trasduttore di bassa pressione	Transductor de baja presión
CST-1.1	Suction temperature sensor	Sonde température d'aspiration	Saug-Temperaturfühler	Sonda di temperatura di aspirazione	Sonda de temperatura de succión
OAT-0.1	Outdoor air temperature sensor	Sonde température air extérieur	Außenlufttemperaturfühler	Sonda di temperatura d'aria esterna	Sonda de temperatura de aire exterior
OCT-1.1	Condenser outdoor temperature sensor	Sonde température sortie condenseur	Verflüssigeraustritt-Temperaturfühler	Sonda di temperatura di Condensazione	Sonda temperatura salida condensador
SV	Service valve	Vanne de service	Dienstventil	Valvola di servizio	Válvula de servicio
SV HP	Service valve HP	Vanne de service HP	Dienstventil Hochdruck	Valvola di servizio di alta pressione	Válvula de servicio de alta presión
SV LP	Service valve LP	Vanne de service LP	Dienstventil Niederdruck	Valvola di servizio di bassa pressione	Válvula de servicio de baja presión
IV	Isolating valve	Vanne d'isolement	Absperrventil	Valvola di isolamento	Válvula de servicio

ECOi-W AQUA-Z 70-130 - HEAT PUMP

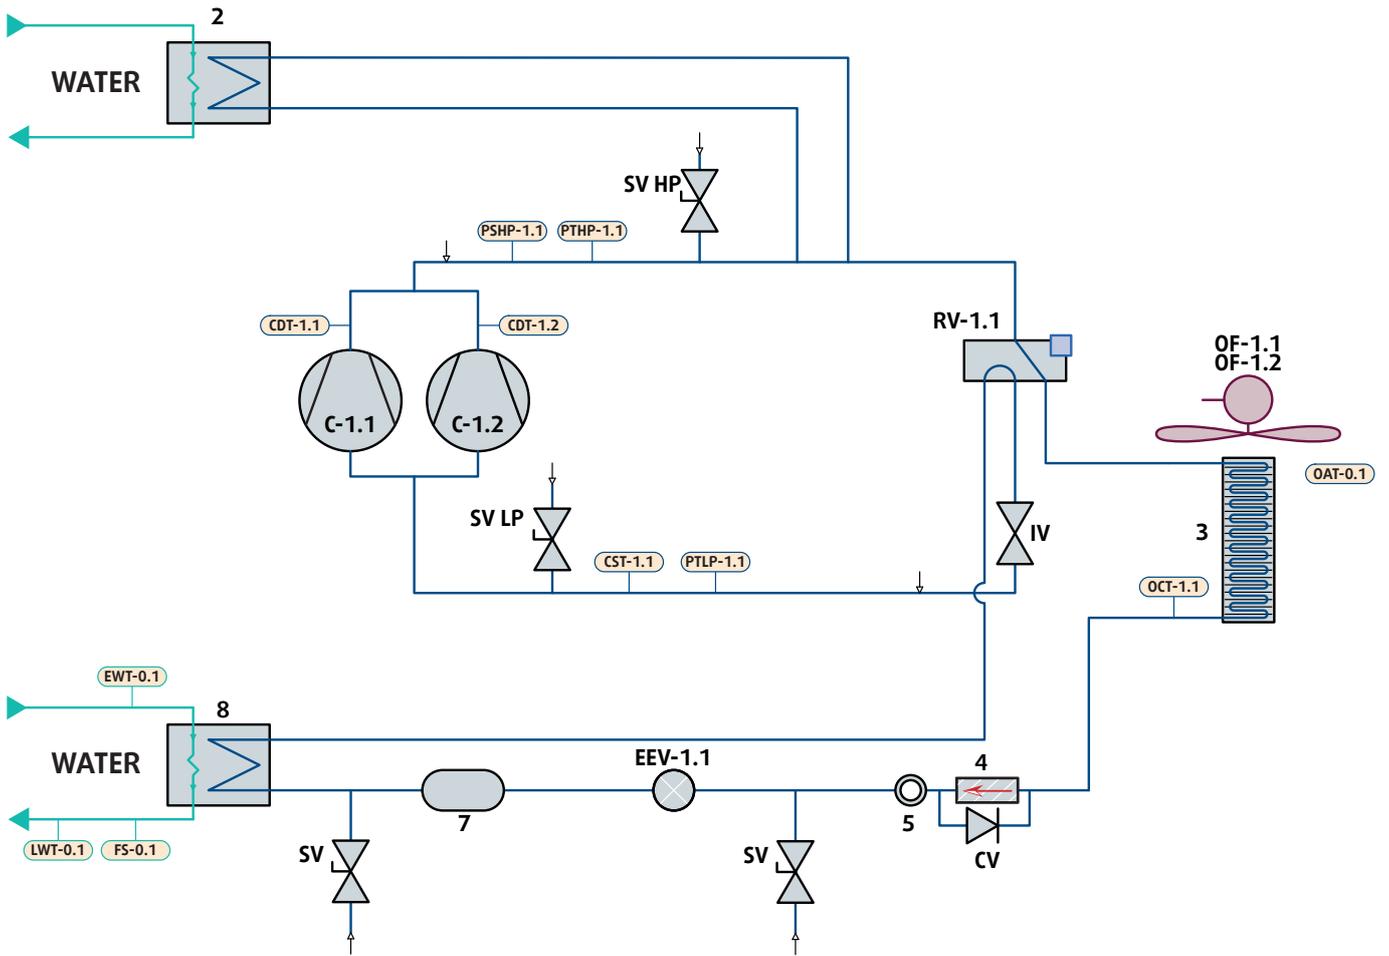

HYDRAULIC CIRCUIT DIAGRAM

SCHEMA DU CIRCUIT HYDRAULIQUE

HYDRAULISCHER SCHALTPLAN

SCHEMA CIRCUITALE IDRAULICO

ESQUEMA CIRCULAR HIDRÁULICO

English

COMPONENTS

1	Plate Heat Exchanger
2	Pump
3	Draining valve
4	Water buffer tank
5	Water filter
6A	Gate valve
6B	Check valve
7	Pressure expansion tank
8	Pression point/drainage
9	Water outlet
10	Water inlet
11	Globe valve
12	Flexible pipes
13	By pass valve

SAFETY/CONTROL DEVICES

A	Inlet water temperature sensor
B	Outlet water temperature sensor
C	Water differential pressure switch
D	Vent valve
E	Water safety valve (3 bar)
FS	Flow switch
G	Thermometer
H	Variable frequency drive
--- --	Unit side
O	Probes

Français

COMPOSANTS

1	Echangeur à plaques
2	Pompe
3	Vanne de vidange
4	Réservoir de stockage eau
5	Filtre à eau
6A	Vanne à guillotine
6B	Soupape de retenue
7	Vase d'expansion
8	Point de pression/évacuation
9	Sortie de l'eau
10	Entrée de l'eau
11	Vanne d'arrêt
12	Tuyaux flexibles
13	Vanne de by-pass

DISPOSITIFS DE SÉCURITÉ / CONTRÔLE

A	Sonde température d'entrée d'eau
B	Sonde température sortie d'eau
C	Pressostat différentiel d'eau
D	Vanne de purge
E	Vanne de sécurité d'eau (3 bars)
FS	Détecteur de débit
G	Thermomètre
H	Variateur de fréquence
--- --	Côté unité
O	Sondes

Deutsch

KOMPONENTEN

1	Plattenwärmeübertrager
2	Pumpe
3	Ablassventil
4	Wasserspeicherbehälter
5	Wasserfilter
6A	Absperrschieber
6B	Rückschlagventil
7	Expansionsgefäß
8	Druckabgreifpunkt/Auslass
9	Wasserauslauf
10	Wassereinlauf
11	Absperrhahn
12	Schläuche
13	Umgehungsventil

SICHERHEITS-/KONTROLLVORRICHTUNGEN

A	Temperatursensor Wassereinlauf
B	Temperatursensor Wasserauslauf
C	Wasserdifferential-Druckwächter
D	Entlüftungsventil
E	Wasser-Sicherheitsventil (3 bar)
FS	Strömungswächter
G	Thermometer
H	Frequenzwandler
--- --	Seite Einheit
O	Fühler

Italiano

COMPONENTI

1	Scambiatore a piastre
2	Pompa
3	Valvola di scarico
4	Serbatoio di accumulo acqua
5	Filtro acqua
6A	Valvola d'intercettazione
6B	Valvola di non-ritorno
7	Vaso di espansione
8	Punto di pressione/scarico
9	Uscita dell'acqua
10	Ingresso dell'acqua
11	Rubinetto a sfera
12	Tubi flessibili
13	Valvola di by-pass

DISPOSITIVI DI SICUREZZA / CONTROLLO

A	Sonda temperatura ingresso acqua
B	Sonda temperatura uscita acqua
C	Pressostato differenziale acqua
D	Valvola di sfogo
E	Valvola di sicurezza dell'acqua (3 bar)
FS	Flussostato
G	Termometro
H	Variatore di frequenza
--- --	Lato unità
O	Sonde

Español


COMPONENTES

1	Intercambiador de placas
2	Bomba
3	Válvula de vaciado
4	Depósito de reserva de agua
5	Filtro de agua
6A	Válvula de compuerta
6B	Válvula de retención
7	Vaso de expansión
8	Punto de presión/drenaje
9	Entrada de agua
10	Salida de agua
11	Válvula de parada
12	Tuberías flexibles
13	Válvula de derivación


DISPOSITIVOS DE SEGURIDAD / CONTROL

A	Sonda de temperatura de entrada de agua
B	Sonda de temperatura de salida de agua
C	Presostato diferencial de agua
D	Válvula de purga
E	Válvula de seguridad de agua (3 bar)
FS	Detector de caudal
G	Termómetro
H	Accionamiento de frecuencia variable
--- --	Lado equipo
O	Sondas


ECOi-W AQUA-Z 70-130 WITHOUT PUMP

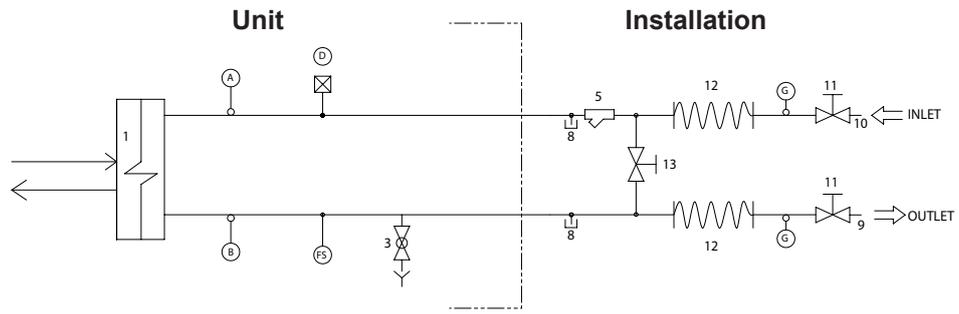


ECOi-W AQUA-Z 70-130 SINGLE PUMP

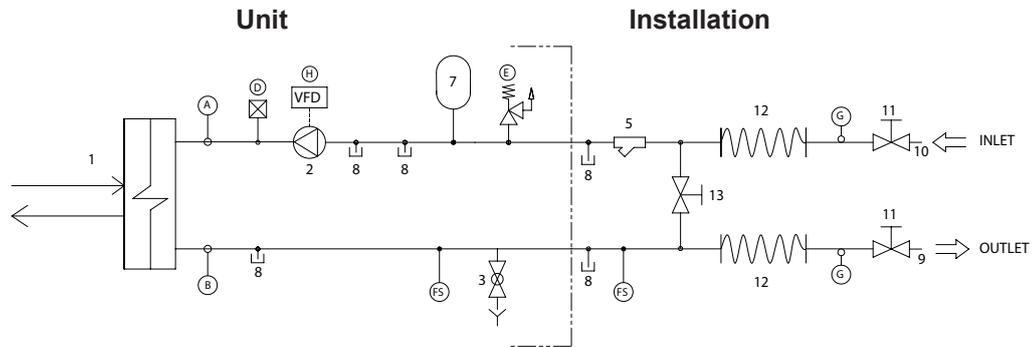


ECOi-W AQUA-Z 70-130 DOUBLE PUMP

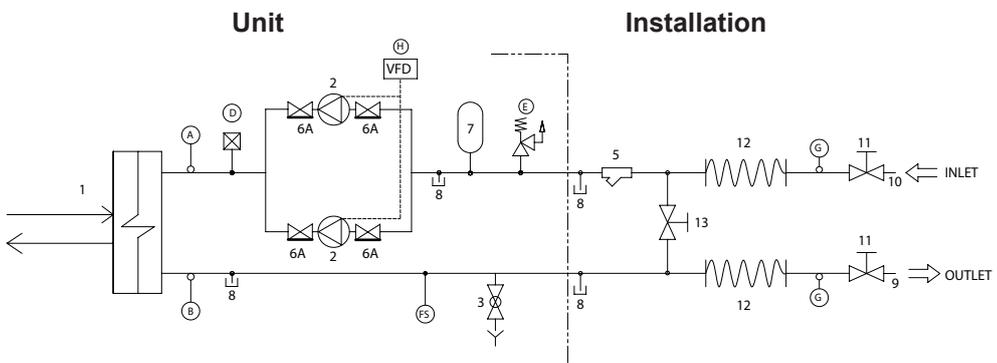

ECOi-W AQUA-Z 70-130 SINGLE PUMP WITH BUFFER TANK

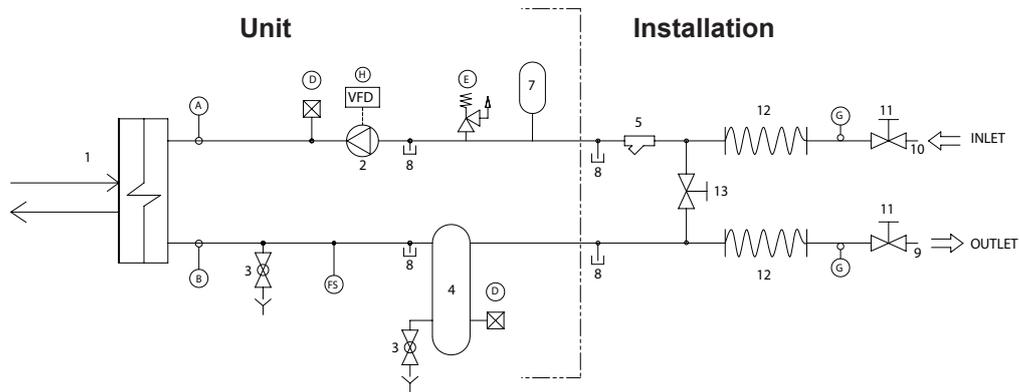

ECOi-W AQUA-Z 70-130 DOUBLE PUMP WITH BUFFER TANK

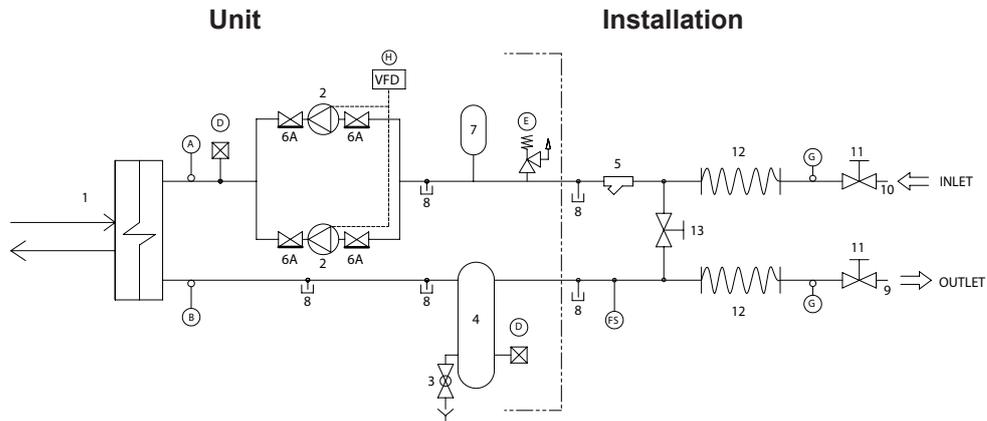


PRESSURE LOSSES OF THE PLATE HEAT EXCHANGER

PERTE DE CHARGE DE L'ECHANGEUR A PLAQUES

DRUCKVERLUST PLATTENWÄRMEÜBERTRAGER

PERDITA DI CARICO SCAMBIATORE A PIASTRE

PÉRDIDA DE CARGA INTERCAMBIADOR DE PLACAS

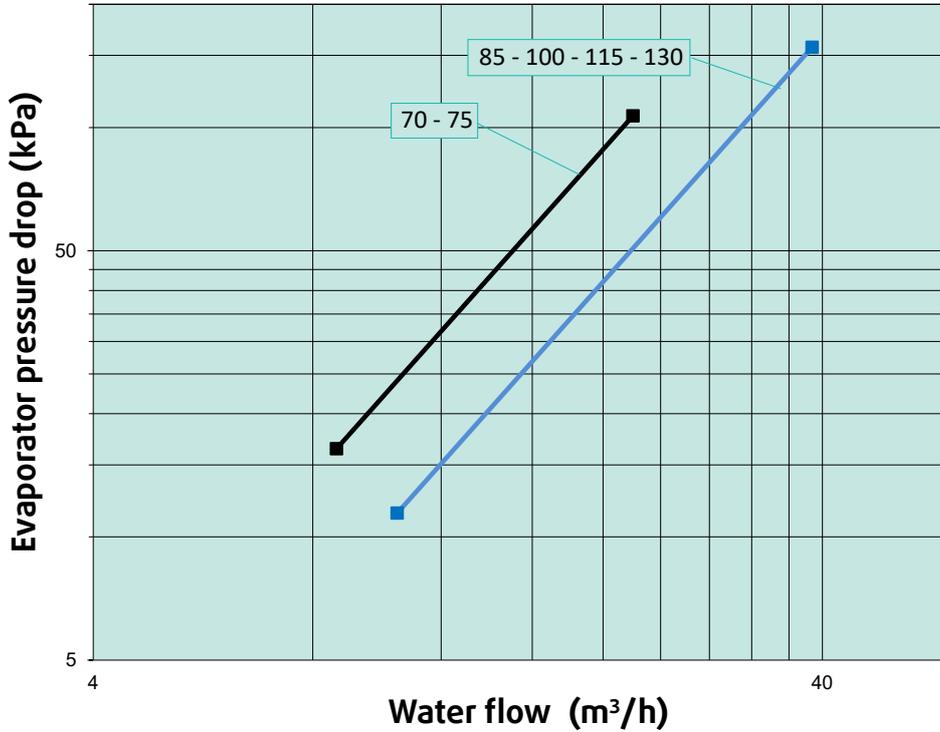


PRESSURE LOSSES OF THE DESUPERHEATER

PERTE DE CHARGE DÉSURCHAUFFEUR

DRUCKVERLUSTE DES ENTWÄRMETERS

PERDITA DI CARICO DESURRISCALDATORE



PÉRDIDA DE CARGA DESRECALENTADOR

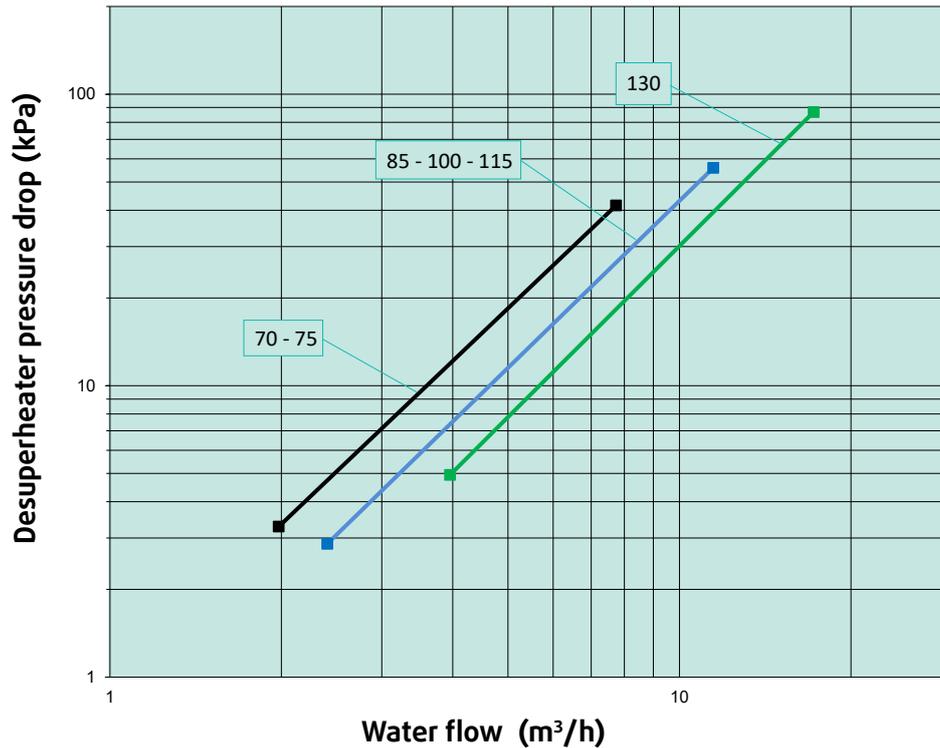



HYDRAULIC PUMPS CURVES

COURBES DES POMPES HYDRAULIQUES KURVEN VON HYDRAULIKPUMPEN CURVE DELLE POMPE IDRAULICHE CURVAS BOMBAS HIDRÁULICAS



ECOi-W AQUA-Z 70-75 - STANDARD PRESSURE PUMP

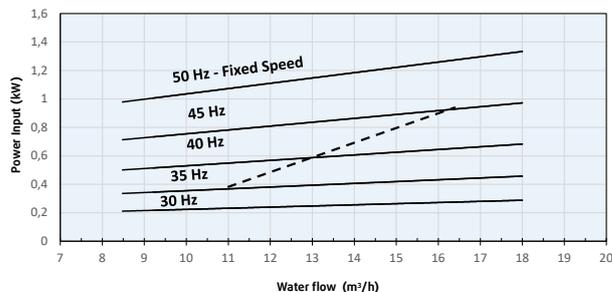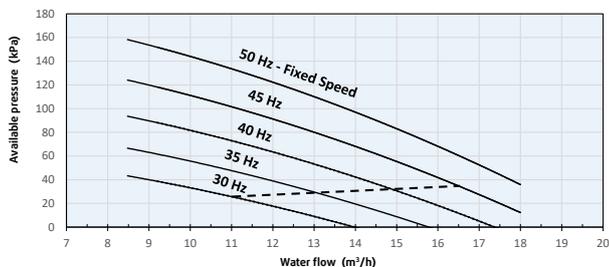



ECOi-W AQUA-Z 85-100 - STANDARD PRESSURE PUMP

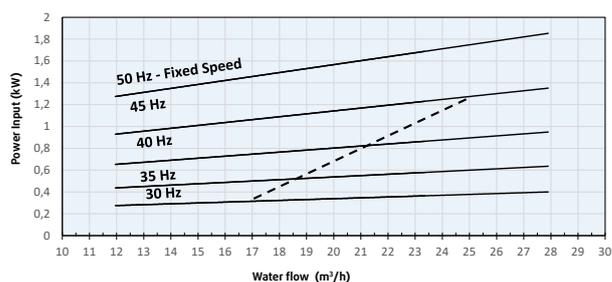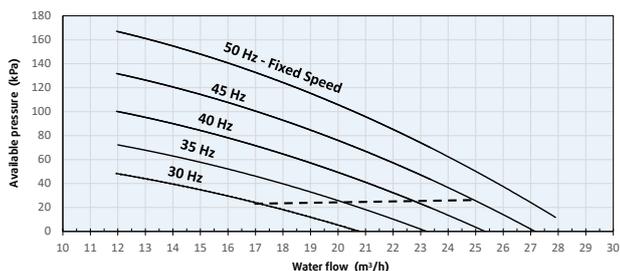



ECOi-W AQUA-Z 115-130 - STANDARD PRESSURE PUMP

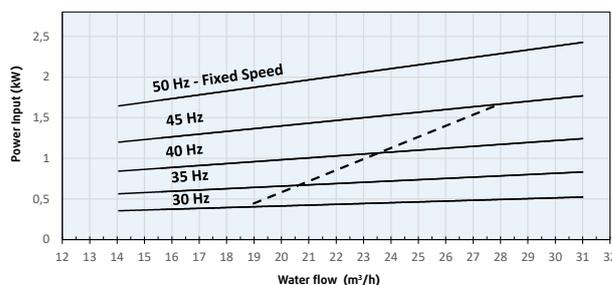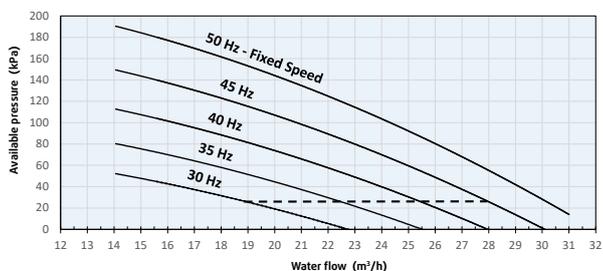



ECOi-W AQUA-Z 70-75 - HIGH PRESSURE PUMP

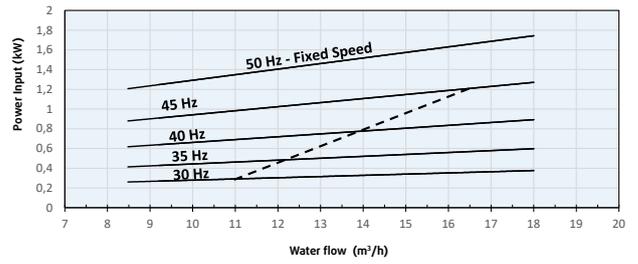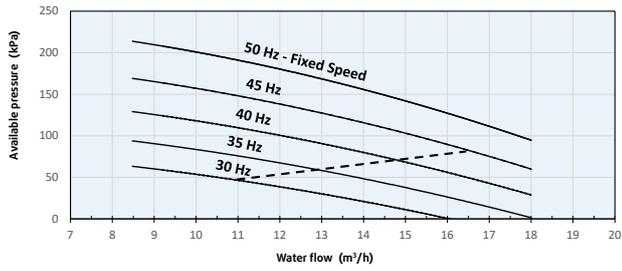

ECOi-W AQUA-Z 85-100 - HIGH PRESSURE PUMP

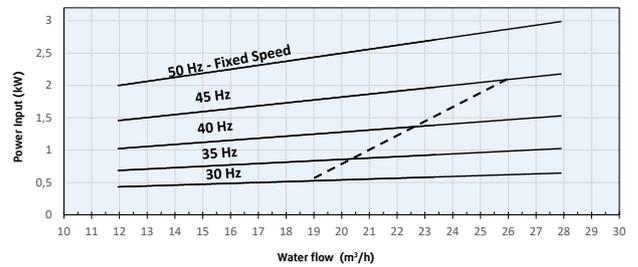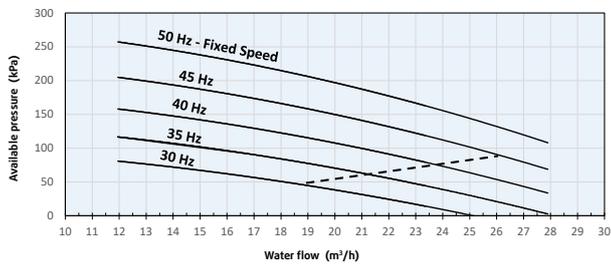

ECOi-W AQUA-Z 115-130 - HIGH PRESSURE PUMP

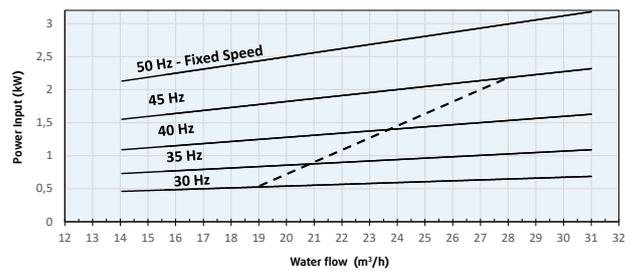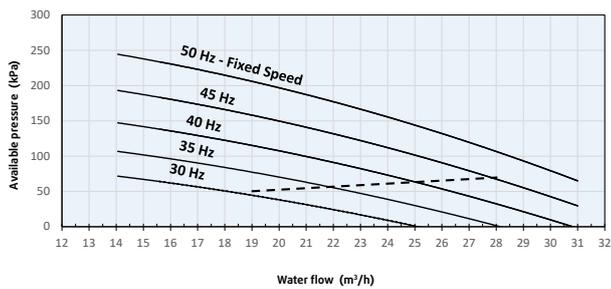

WIRING DIAGRAM

SCHEMAS ELECTRIQUES

STROMLAUFPLANS

SCHEMA ELETRICO

ESQUEMA ELECTRICO

TAKE CARE!

These wiring diagrams are correct at the time of publication. Manufacturing changes can lead to modifications. Always refer to the diagram supplied with the product.

ATTENTION

Ces schémas sont corrects au moment de la publication. Les variantes en fabrication peuvent entraîner des modifications. Reportez-vous toujours au schéma livré avec le produit.

ACHTUNG!

Diese Stromlaufplans sind zum Zeitpunkt der Veröffentlichung gültig. In Herstellung befindliche Varianten können Änderungen mit sich bringen. In jedem Fall den mit dem Produkt gelieferten Stromlaufplan hinzuziehen.

ATTENZIONE !

Questi schemi sono corretti al momento della pubblicazione. Le varianti apportate nel corso della fabbricazione possono comportare modifiche. Far sempre riferimento allo schema fornito con il prodotto.

ATENCIÓN !

Esto esquemas son correctos en el momento de la publicación. Pero las variantes en la fabricación pueden ser motivo de modificaciones. Remítase siempre al esquema entregado con el producto.

**POWER SUPPLY MUST BE SWITCHED OFF BEFORE STARTING TO WORK IN THE
ELECTRIC CONTROL BOXES!**

**MISE HORS TENSION OBLIGATOIRE AVANT TOUTE INTERVENTION DANS LES BOITIERS
ÉLECTRIQUES.**



**VOR JEDEM EINGRIFF AN DEN ANSCHLUßKÄSTEN UNBEDINGT DAS GERÄT
ABSCHALTEN!**

**PRIMA DI OGNI INTERVENTO SULLE CASSETTE ELETTRICHE ESCLUDERE
TASSATIVAMENTE L'ALIMENTAZIONE !**

**PUESTA FUERA DE TENSION OBLIGATORIA ANTES DE CUALQUIER INTERVENCIÓN EN
LAS CAJAS ELÉCTRICAS!**

LEGEND


	English	Français	Deutsch	Italiano	Español
	CONTROL AND REGULATION	SCHÉMAS DE COMMANDE	STEUERPLÄNE	SCHEMI DI COMANDO	ESQUEMAS DE COMANDO
	DESCRIPTION	DESIGNATION	BEZEICHNUNG	DENOMINAZIONE	DESIGNACIÓN
AFEH-0.1	Antifreeze electric heater	Résistances anti-gel	Frostschutz-Widerstand	Resistenza antigelo	Resistencia anticongelación
AFEH-0.2	Antifreeze Tank electric heater (option)	Résistances anti-gel du ballon d'eau chaude (option)	Frostschutzwiderstände im Warmwasserspeicher (optional)	Resistenza antigelo per il bollitore dell'acqua calda (opzionale)	Resistencia anticongelación para acumulador de agua caliente (opcional)
AFTEH-0.1	Ambient Offset Correction (not supplied)	Correction du décalage ambiant (non fourni)	Korrektur der Umgebungsabweichung (nicht mitgeliefert)	Correzione dell'offset ambientale (non fornito)	Corrección del desplazamiento ambiental (no suministrado)
AOC	Compressors	Compresseurs	Verdichter	Compressori	Compresores
C-1.1	Discharge temperature probe	Sondes de température de refoulement	Auslass-Temperaturfühler	Sonda di temperatura di mandata	Sonda de temperatura de descarga
C-1.2	Compressors crankcase heater	Résistances de carter des compresseurs	Ölumpfheizungen der Verdichter	Resistenze del carter dei compressori	Resistencias de cárter de los compresores
CDT-1.1	Suction temperature sensor	Sonde de température d'aspiration	Saug- Temperaturfühler	Sonda di temperatura di aspirazione	Sonda de temperatura de succión
CDT-1.2	Electronic expansion valve	Détendeur électronique	Elektronisches Expansionsventil	Valvola di espansione elettronica	Valvula de expansión electrónica
CH-1.1	Heating resistors	Résistances chauffantes	Heizwiderstände	Resistenze di riscaldamento	Resistencias de calefacción
CH-1.2	Inlet water temperature probe	Sonde de température d'entrée d'eau	Wassereintritt-Temperaturfühler	Sonda di temperatura di ingresso dell'acqua	Sonda de temperatura de entrada de agua
CST-1.1	Automatic reset heating safety thermostat (option)	Thermostat de sécurité chauffage à réarmement automatique (option)	Sicherheitsthermostat Heizung mit automatischer Wiedereinschaltvorrichtung (Option)	Termostato di sicurezza riscaldamento a ripristino automatico (optional)	Termostato de seguridad de calefacción con restablecimiento automático (opcional)
EEV-1.1	Outdoor fans motors internal protection	Sécurité interne des moteurs des ventilations extérieures	Eingebauter Wärmeschaltzschalter des Motors der externen Lüftung	Sicurezza interna del motore della ventilazione esterna	Seguridad interna del motor de la ventilación exterior
EH-0.1	Three-phase network control relay (phase sequence and cut-out)	Module de contrôle d'ordre et de coupure de phases	Phasenabschaltungs- und reihenfolge Kontrollmodul	Modulo di controllo d'ordine e di interruzione di fasi	Módulo de control de orden y de corte de fases
EH-0.2	Flow switch	Détecteur de débit d'eau (flow switch)	Strömungswächter (flow switch)	Sensore di portata di acqua (flussostato)	Detector de caudal de agua (flow switch)
EH-0.3	Compressors magneto-thermal circuit breaker	Disjoncteurs magnétothermiques des compresseurs	Magnetothermische Schutzschalter der Verdichter	Disgiuntori magnetotermici dei compressori	Disyuntores magnetotérmicos de los compresores
EWT-0.1					
FA-0.1					
FOF-1.1					
FOF-1.2					
FPC-0.1					
FS-0.1					
FTC-1.1					
FTC-1.2					

	English	Français	Deutsch	Italiano	Español
	CONTROL AND REGULATION	SCHÉMAS DE COMMANDE	STEUERPLÄNE	SCHEMI DI COMANDO	ESQUEMAS DE COMANDO
	DESCRIPTION	DESIGNATION	BEZEICHNUNG	DENOMINAZIONE	DESIGNACIÓN
FTCC-0.1	Control circuit magnetothermal circuit breaker	Disjoncteur magnéthermique du circuit de commande	Magnéthermischer Schutzschalter des Steuerkreises	Disgiuntore magnetotermico del circuito di comando	Disyuntor magnetotérmico del circuito de comando
FTEH-0.1 FTEH-0.2	Magnetic breakers for heating elements (option) + additional contacts	Disjoncteurs magnétiques des éléments chauffants (option) + contact additionnels	Magnetische Schutzschalter der Heizelemente (Option) + Zusätzliche Kontakte	Interruttori magnetici degli elementi riscaldanti (optional) + Contatti aggiuntivi	Disyuntores magnéticos de los elementos calefactores (opcional) + contactos adicionales
FTPC-0.1	30mA circuit breaker for modem socket	Disjoncteur 30mA prise modem	30mA-Schutzschalter für Modembuchse	Interruttore 30mA per presa modem	Disyuntor de 30mA para la toma del módem
FTPC-0.2	Circuit breaker 2A modem socket	Disjoncteur 2A prise modem	Sicherungsautomat 2A Modemsteckdose	Interruttore 2A presa modem	Disyuntor 2A toma de módem
FTOF-1.1	Outdoor fans magnetothermal circuit breaker	disjoncteur magnéthermique de la ventilation extérieure	Magnéthermischer Schutzschalter der externen Lüftung	Disgiuntore magnetotermico della ventilazione esterna	Disyuntor magnetotérmico de la ventilación exterior
FTWP-0.1 FTWP-0.2	Water pump motor magnetothermal circuit breaker	Disjoncteur magnéthermique du moteur de la pompe hydraulique	Magnéthermischer Schutzschalter des Wasserpumpenmotors	Disgiuntore magnetotermico del motore della pompa idraulica	Disyuntor magnetotérmico del motor de la bomba hidráulica
KA-0.2	Auxiliary line contactor	Relais auxiliaire	Hilfsrelais	Relè auxiliaire	Relé auxiliar
KA-0.4	Heating safety contactor	Relais de sécurité chauffage	Hilfsrelais der Sicherheit Heizung	Relè del sicurezza riscaldanti	Relé de seguridad calefactores
KC-1.1 KC-1.2	Compressors power circuit contactor	contacteurs de puissance des compresseurs	Leistungsschütze der Verdichter	Contattori di potenza dei compressori	Contactores de potencia de los compresores
KEH-0.1 KEH-0.2	Power contactors for heating elements (option)	Contacteurs de puissance des éléments chauffants (option)	Leistungsschütze Heizelemente (Option)	Contattori di potenza degli elementi riscaldanti (optional)	Contactores de potencia de los elementos calefactores (opcional)
KS-1.1 KS-1.2	Compressor safety relay	Relayage sécurité compresseur	Sicherheitsrelais Kompressor	Relè di sicurezza del compressore	Relé de seguridad del compresor
KOF-1.1	Outdoor fans power contactors	Contacteur de puissance des ventilations extérieures	Leistungsschutz der externen Lüftung	Contattore di potenza della ventilazione esterna	Contactador de potencia de la ventilación exterior
KOFHS-1.1	Outdoor fans power contactors	Contacteur de puissance grande vitesse des ventilations extérieures	Leistungsschutz der externen Lüftung	contattore di potenza della ventilazione esterna	contactador de potencia de la ventilación exterior
KOFLS-1.1	Outdoor fans power contactors	Contacteur de puissance petite vitesse des ventilations extérieures	Leistungsschutz der externen Lüftung	contattore di potenza della ventilazione esterna	contactador de potencia de la ventilación exterior
KWP-0.1 KWP-0.2	Water pump motor power contact	Contacteur de puissance du moteur de la pompe hydraulique	Leistungsschutz des Wasserpumpenmotors	contattore di potenza del motore della pompa idraulica	contactador de potencia del motor de la bomba hidráulica


	English	Français	Deutsch	Italiano	Español
	CONTROL AND REGULATION	SCHÉMAS DE COMMANDE	STEUERPLÄNE	SCHEMI DI COMANDO	ESQUEMAS DE COMANDO
	DESCRIPTION	DESIGNATION	BEZEICHNUNG	DENOMINAZIONE	DESIGNACIÓN
LWT-0.1	Outlet water temperature probe	Sonde de température de sortie d'eau	Wasseraustritt-Temperaturfühler	sonda di temperatura di uscita dell'acqua	sonda de temperatura de salida de agua
NRS	Normal Reduced Switch (not supplied)	Interrupteur mode réduit (non fourni)	Normal Reduziert Schalter (nicht mitgeliefert)	Normal Interruptor reducido (non fornito)	Interruttore normale ridotto (no suministrado)
OAT-0.1	Outdoor temperature probe (air)	Sonde de température extérieure (air)	Außentemperaturfühler (Luft)	sonda di temperatura esterna (aria)	sonda de temperatura exterior (aire)
OCT-1.1	De-icing temperature probe	Sonde de température de batterie alléée	Temperaturfühler der verripppten Batterie	sonda di temperatura della batteria alettata	sonda de temperatura de batería con aletas
OF-1.1 OF-1.2	Outdoor fan motor	Moteurs des ventilations extérieures	Motor der externen Lüftung	Motore della ventilazione esterna del circuito	Motor de la ventilación exterior
ON/OFF	ON/OFF switch (not supplied)	interrupteur marche/arrêt (non fourni)	Ein-/Aus-Schalter (nicht mitgeliefert)	interruttore on/off (non fornito)	interruptor funcionamiento/ parada (no suministrado)
PC-0.1	Electrical socket for modem	Prise électrique pour modem	Steckdose für Modem	Presse elettrica per il modem	Toma de corriente para el módem
PSHP-1.1	Automatic reset high-pressure pressostats	pressostat haute pression à réarmement automatique.	Überdruckwächter mit automatischer Wiedereinschaltung	pressostato alta pressione a riarmo automatico.	presostato alta presión con rearme automático
PSW-0.1	Water low pressure switch (option)	Pressostat manque d'eau (option)	Wassermangel-Druckwächter (Option)	pressostato mancanza di acqua (opzionale)	presostato falta de agua (opcional)
PTHP-1.1	Pressure transducer (high-pressure)	Transducteur de pression (haute pression)	Druckwandler (Hochdruck)	trasduttore di pressione (alta pressione)	transductor de presión (alta presión)
PTLP-1.1	Pressure transducer (low pressure)	Transducteur de pression (basse pression)	Druckwandler (Niederdruck)	trasduttore di pressione (bassa pressione)	transductor de presión (baja presión)
PTWDP-0.1	Pressure transducer (option)	transducteur de pression hydraulique (option)	Druckwandler (option)	trasduttore di pressione idraulica (opzionale)	transductor de presión hidráulica (opcional)
QG-0.1	Main section switch	Interrupteur sectionneur principal	Hauptschalter	interruttore principale	interruptor seccionador principal
QGEH-0.1	Heating disconnect switch (optional)	Interrupteur sectionneur chauffage (option)	Trennschalter Heizung (Option)	Sezionatore di riscaldamento (opzionale)	Interruptor de desconexión de la calefacción (opcional)
RV-1.1	4-way cycle changeover valves (option)	Vanne d'inversion de cycle (option)	Umkehrzyklusventil (Option)	valvole di inversione di ciclo (opzionale)	válvula de inversión de ciclo (opcional)
SGEVUS	Smart Grid EVU Switch (not supplied)	Réseau intelligent EVU Switch	Intelligentes Netz EVU-Schalter (nicht mitgeliefert)	Interruttore EVU per reti intelligenti (no suministrado)	Conmutador EVU de red inteligente (non fornito)
SGS	Smart Grid Switch (not supplied)	Interrupteur de réseau intelligent (non-fourni)	Intelligenter Netzschalter (nicht mitgeliefert)	Interruttore di rete intelligente (no suministrado)	Interruptor de red inteligente (non fornito)
SSTC-1.1 SSTC-1.2	Soft Starter	Démarreurs «Soft Starter»	Anlasser «Soft Starter»	motorini di avviamento «Soft Starter»	Motor de arranque «Soft Starter»

	English	Français	Deutsch	Italiano	Español
	CONTROL AND REGULATION	SCHÉMAS DE COMMANDE	STEUERPLÄNE	SCHEMI DI COMANDO	ESQUEMAS DE COMANDO
	DESCRIPTION	DESIGNATION	BEZEICHNUNG	DENOMINAZIONE	DESIGNACIÓN
SWS	Switch winter / summer (not supplied)	Interrupteur hiver/été (non-fourni)	Winter/Sommer-Schalter	interruttore invero /estate (non fornito)	interruptor invierno/verano (no suministrado)
T-0.1	Transformer 230V/24V-63VA	Transformateur 230V/24V-63VA	Transformator 230V/24V-63VA	Trasformatore 230V/24V-63VA	Transformador 230V/24V-63VA
THT-0.1	Tank hot water temperature	Température de l'eau chaude du ballon	Temperatur des Warmwassers im Tank	Temperatura dell'acqua calda del serbatoio	Temperatura del agua caliente del depósito
VFDWP-0.1	Three phase frequency variator of water pump motor	Variateur de fréquence triphasé du moteur de la pompe hydraulique	Drehstrom-Frequenzumrichter der Wasserpumpenmotors	Variatore di frequenza trifase del motore della pompa idraulica	Variador de frecuencia trifásico del motor de la bomba hidráulica
WP-0.1 WP-0.2	Water pump	Pompe hydraulique	Wasserpumpe	Pompa idraulica	Pomba hidráulica
X	Phase distributor	répartiteur de phases	Phasenverteiler	distributore di fase	distribuidor de fase

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26

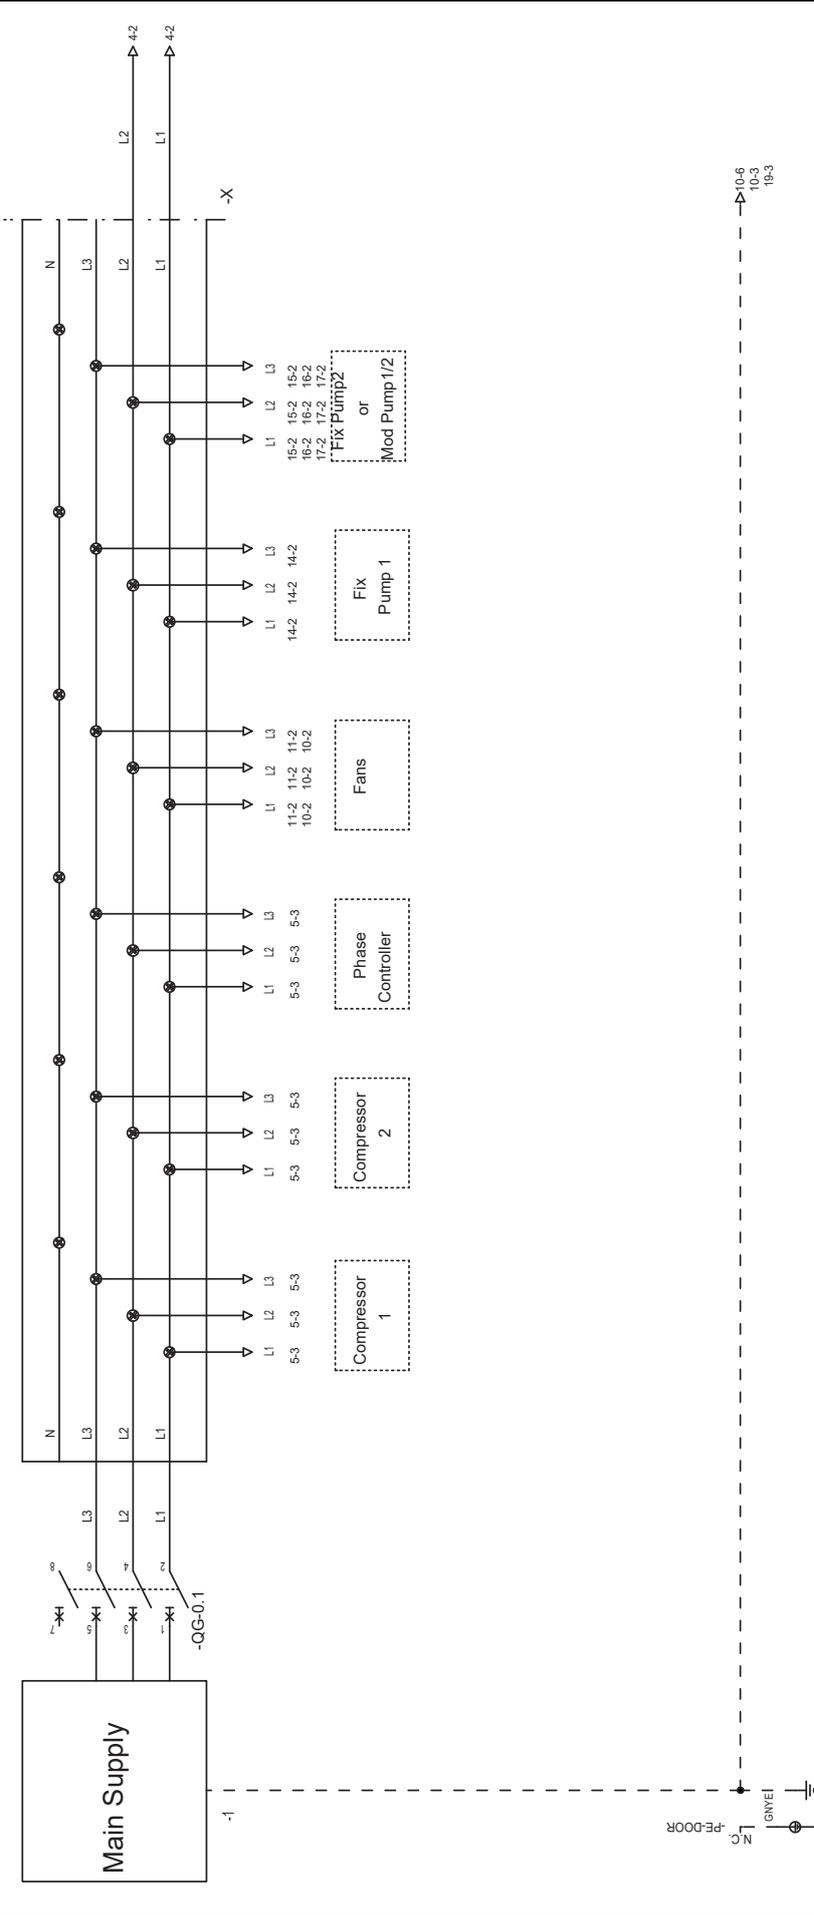


Panasonic corporate's property, All rights reserved		DRAWING NO.: SP		Legend: N 1938, L 3/11/2022, K 04/09/2022, H 21/02/2022, INDEX		Date: 25/03/2021		Chiller 70 to 130 R32 3P Power supply		SHEET 3	
		CHECK: new catalogue, Address: WP (G) 1 Files 15/10/20, Modulo SP only		Date: 15/01/20, 15/01/20, 15/01/20				ELECTRICAL DIAGRAM		Loggia SEE 5/30	
		DATE OF CHANGE: 25/03/2021		MODIFICATION				Document no: SE 4914 Q		4	

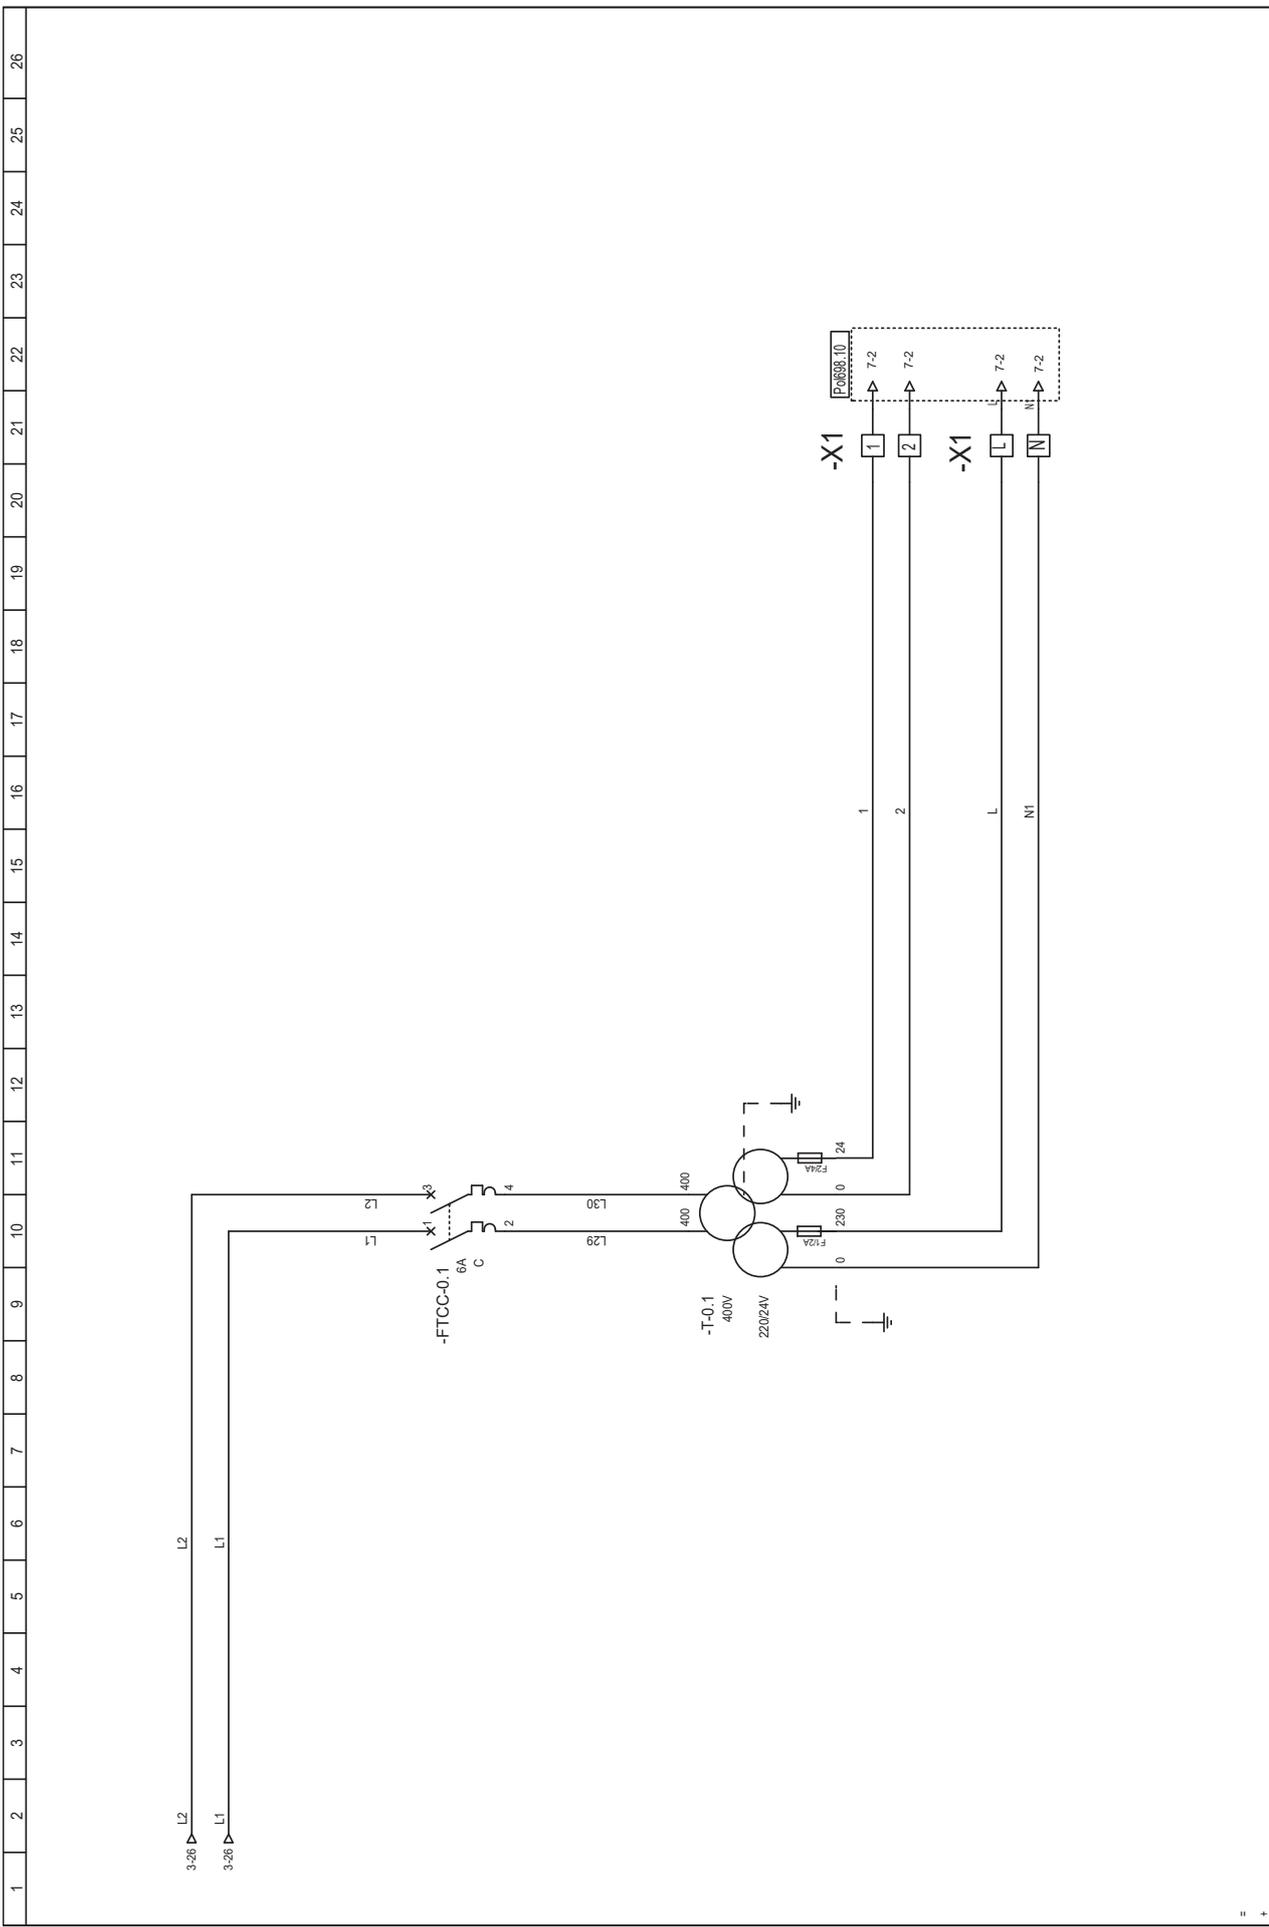

DRAWING NO.: SP		Legend:	N: 638	Doc ID: J5816730
CHECK:	5/11/2022	L	new catalogue	FR
DATE OF CHECK:	04/03/2022	K	ADDR: WPFG-1 Files 15/10/20	SP
	04/03/2022	I	ONLY T-0.1	FR
		INDEX	ONE	DES
	25/03/2021		MODIFICATION	
Panasonic corporate's property, All rights reserved		ELECTRICAL DIAGRAM		
		Chiller 70 to 130 R32 3P Control Power Supply		
		Document nb: SE 4914 Q		
		SHEET 4 Logon SEE 5 30		


1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----

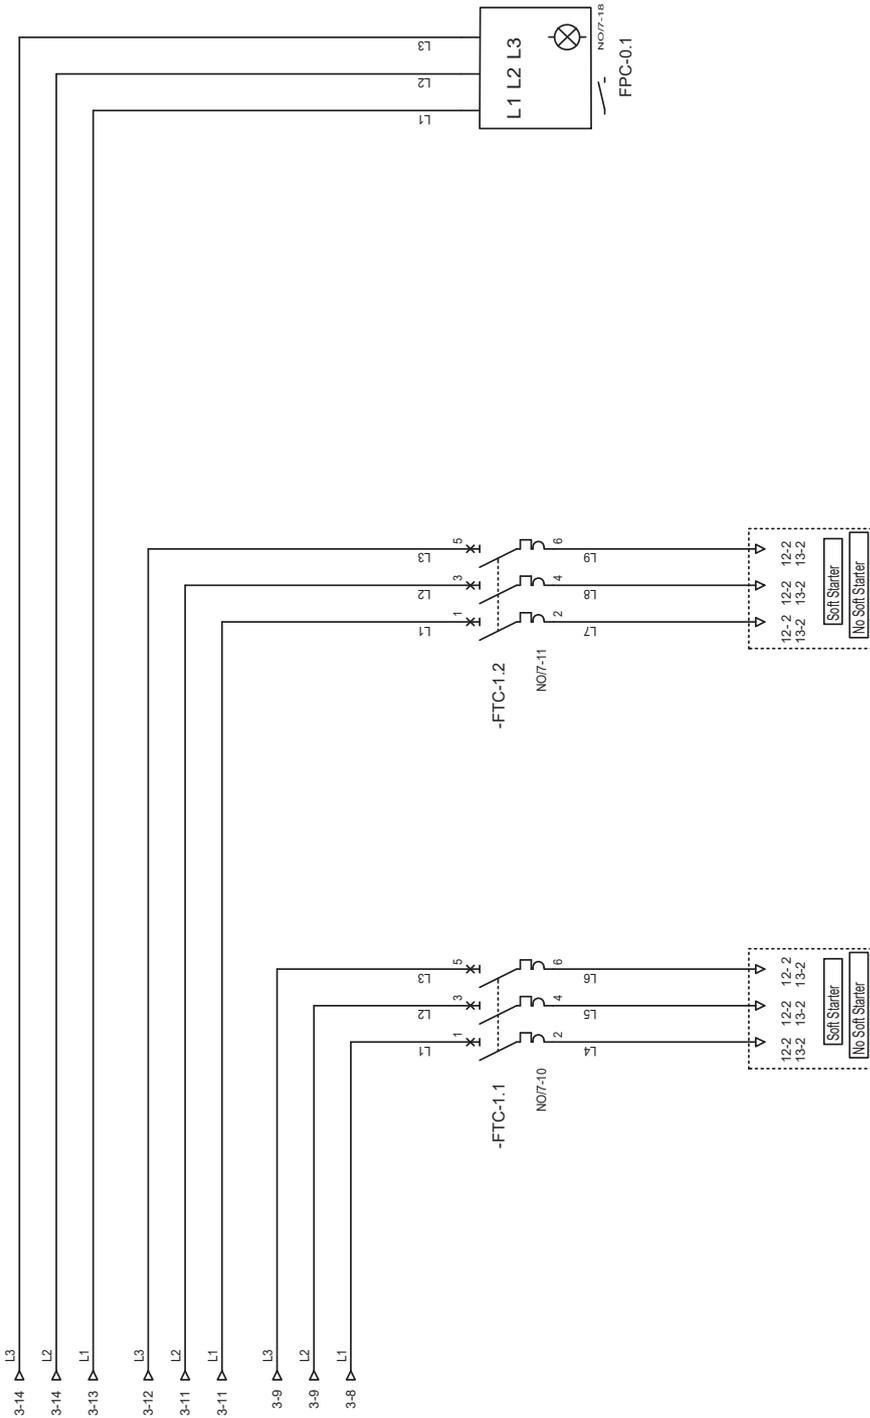

Panasonic corporate's property, All rights reserved	DRAWING NO:	SP	Project:	N° 1838	Doc ID:	J5816730
	CHECK:	L	5/11/2022	Rev. description	FR	
	DATE OF CHECK:	X	04/03/2022	Address: MFC-01 Fabrics 51, 107, 20	SP	
			FILE	ONE	DIR	MODIFICATION
ELECTRICAL DIAGRAM		Chiller 70 to 130 R32 3P Compressors power Supply		Document no:		SE 4914 Q
SHEET		5		4		6
Logon SEE		5.30				

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----

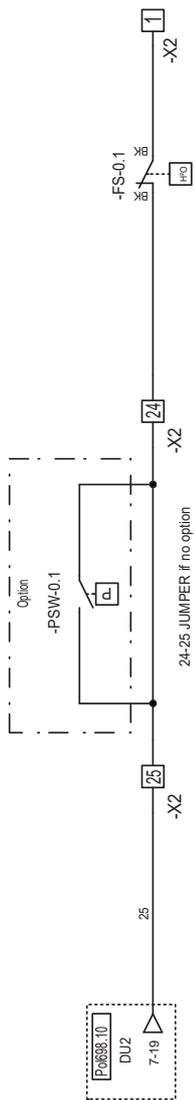

Panasonic corporate's property,
 All rights reserved


DATE OF PUBLISHING: 25/03/2021

DRAWING BY:	SP	Legend:	N°338	Contract:	J5818730
DATE:		M	07/03/2024	Symbol:	FR
		L	19/11/2022	FR	FR
		K	24/03/2022	Address:	Address: MPT-01-Fabrics 151 150/20
		INDEX	ONE	IDENTIFICATION	SP
					ISS

ELECTRICAL DIAGRAM
 Document: nb SE 4914 Q

Chiller 70 to 130 R32 3P
 Hydraulic fault chain


SHEET
 6
 5 7
 Logon SEE 530

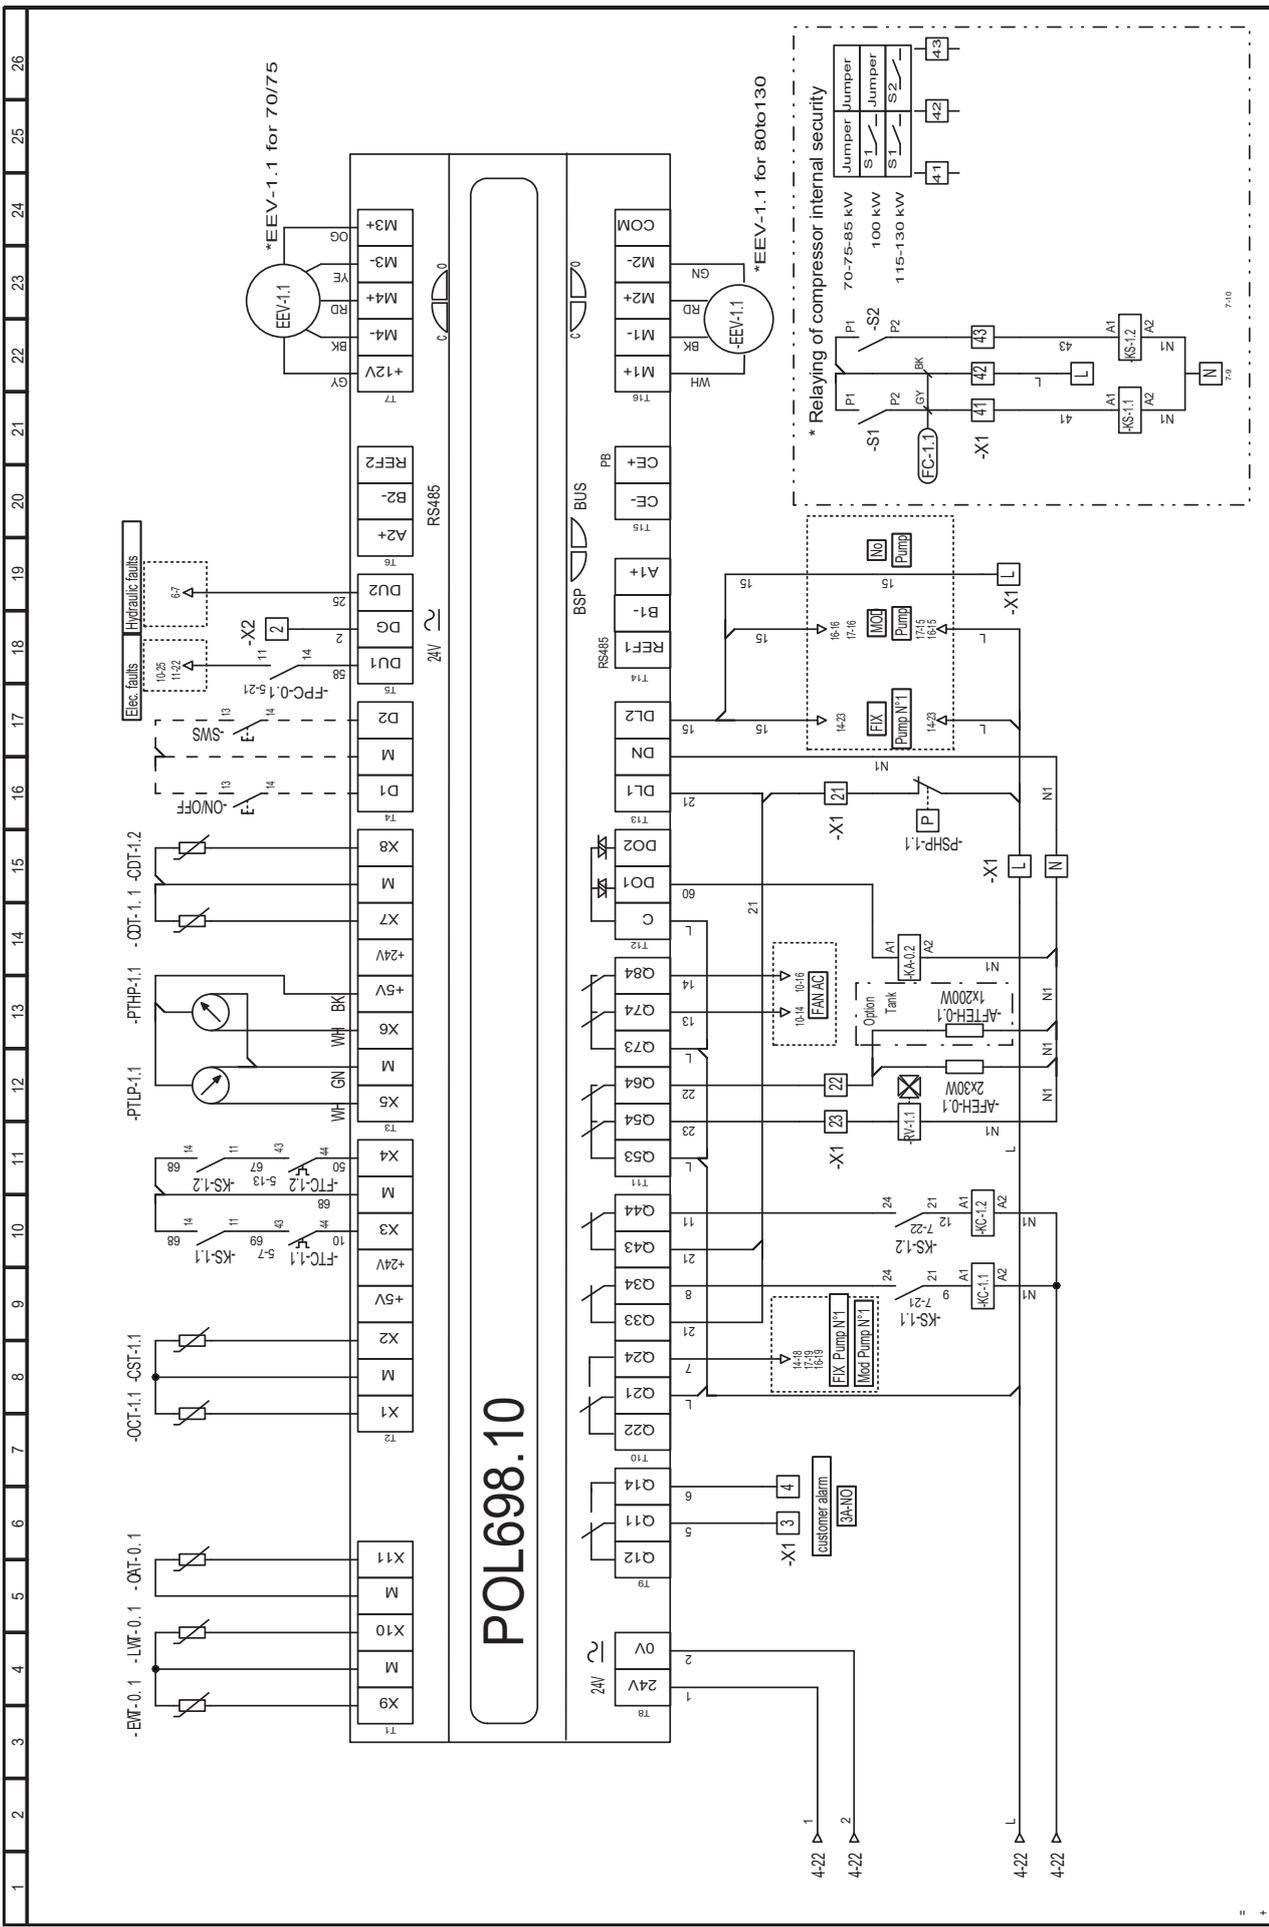

POL698.10

DRAWING NO.: SP		REV. NO.: 05818/30
CHECK:	DATE OF CHECK: 25.03.2021	BY: SP
Panasonic corporate's property, All rights reserved		Document no.: SE 4914 Q
ELECTRICAL DIAGRAM		Chiller 70 to 130 R32 3P POL 698
Legend:	Q: 27/06/2025 Compressor security	RR
	O: 06/06/2024 EEV changed on 70/75	RR
	M: 13/04/2024 Compressor security Added/FFET for Outdoor unit	SP
	INDEX: DIE	US
SHEET 7		Logon SEE 530

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----

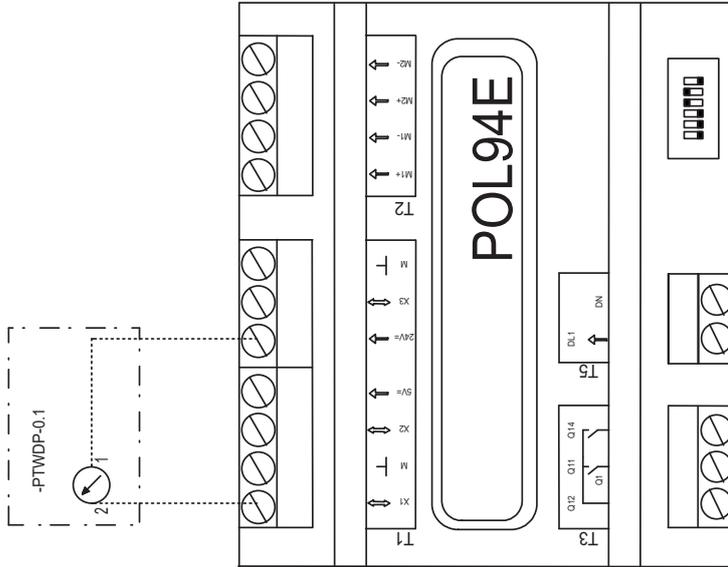


Panasonic corporate's property, All rights reserved	DRAWING NO.:	N° 638	Doc ID:	J5816730	ELECTRICAL DIAGRAM	Chiller 70 to 130 R32 3P Extension POL 94E	SHEET 9
	CHECK:	0	03/03/2024	PTWDP-01 - New wiring			
	DATE OF CHANGE:	25/03/2021	DATE:	21/05/2024	Address: F&B Extension POL 94E (PTWDP-01) (Colon)	Document nb.:	SE 4914 Q
							Logon SEE 5 30

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26

POWER

COMMAND

ELEC.CHAIN

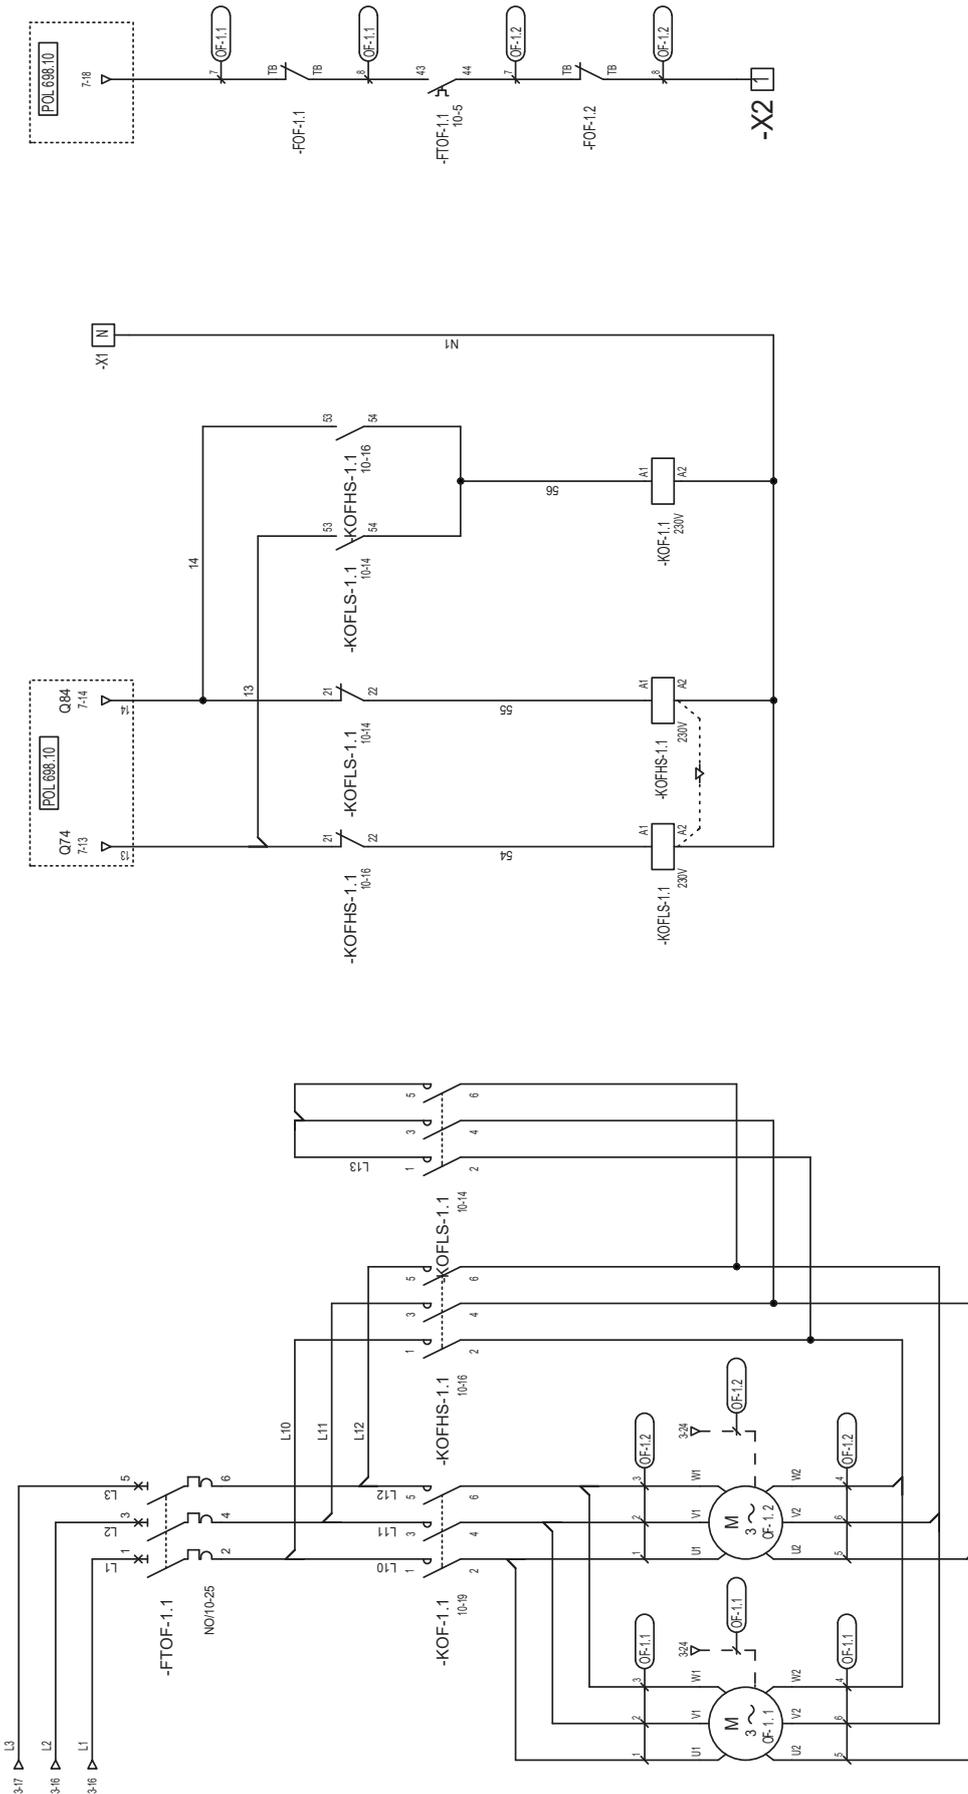

= +

Panasonic corporate's property,
 All rights reserved

DRAWING NO: SP
 CHECK: RR
 DATE OF CHECK: 23/03/2021

Legend:	N 1538	Doc No:	J5816730
L	5/11/2022	Rev	001
K	03/03/2022	Author	MFC-01 Fans 51 10 20
INDEX	DATE	DES	MODIFICATION

ELECTRICAL DIAGRAM
 Document no: SE 4914 Q

Chiller 70 to 130 R32 3P
 Fans AC

SHEET
 10
 11
 Logon SEE 5 30

26

25

24

23

22

21

20

19

18

17

16

15

14

13

12

11

10

9

8

7

6

5

4


3

2

1

ELECTRICAL FAULT CHAIN

POWER

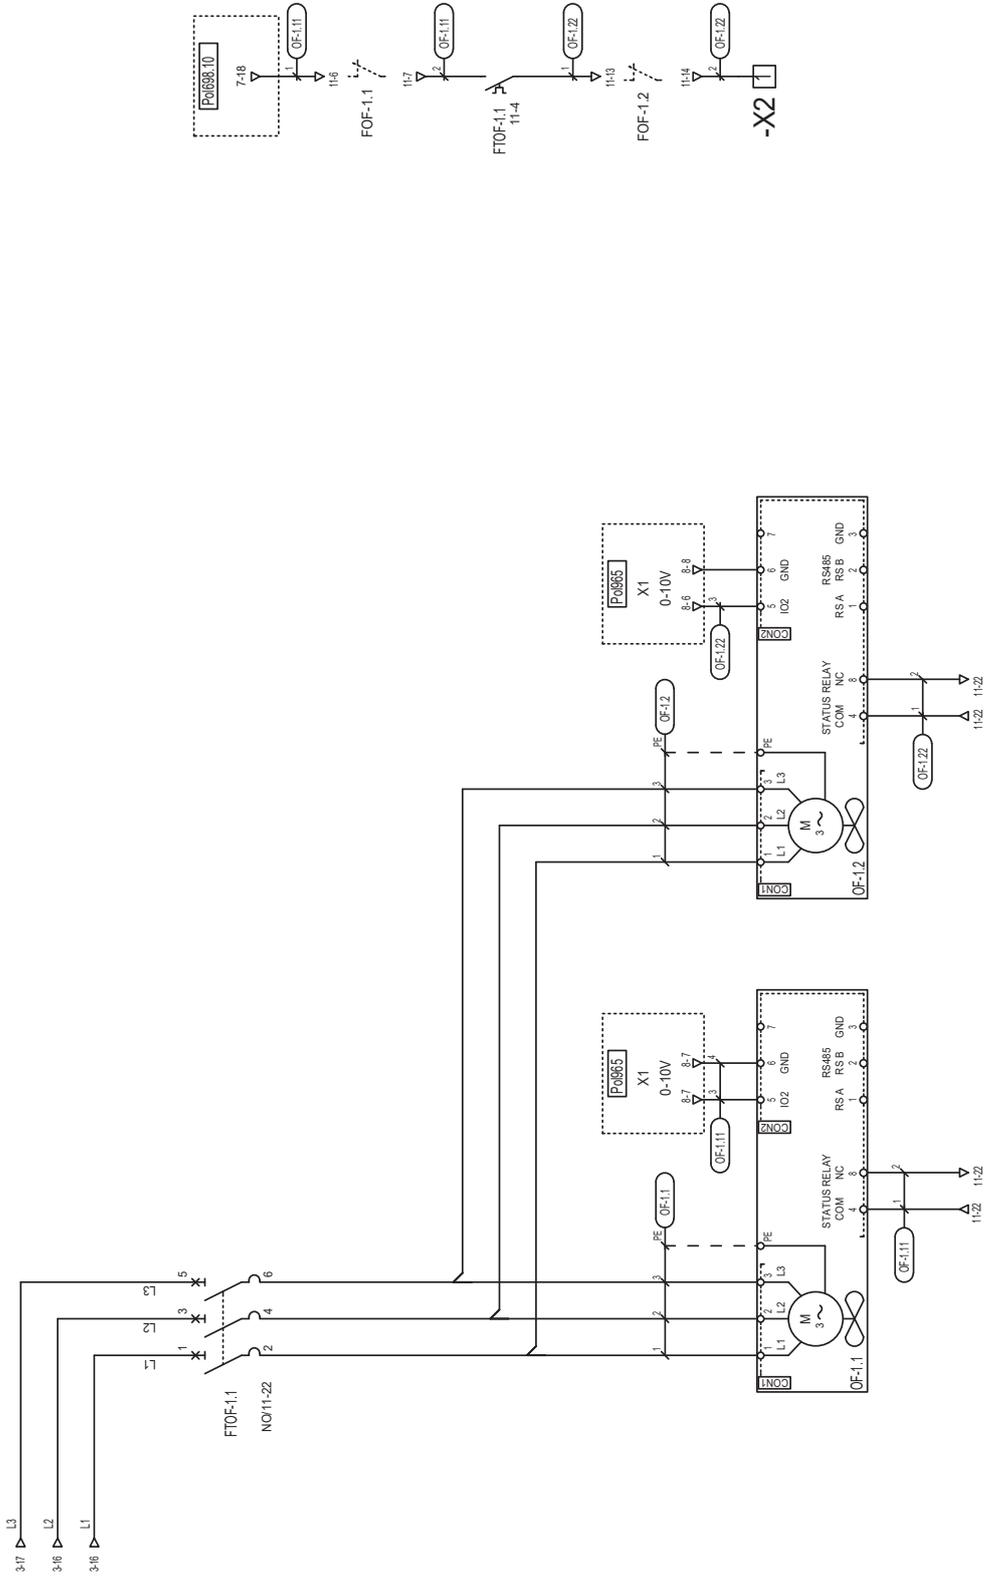

Chiller 70 to 130 R32 3P
 Fans EC - HFP SLN

ELECTRICAL DIAGRAM

Document no: SE 4914 Q

Drawn by:	N' 638	Drawn by:	J5816730
Checked:	Q 27/09/2025	Checked:	RR
Date of creation:	03/03/2024	Date of creation:	RR
Version:	1	Version:	RR
Revision:	1	Revision:	RR
Date of change:	25/03/2021	Date of change:	RR
Author:		Author:	RR
Editor:		Editor:	RR
Reviewer:		Reviewer:	RR
Approver:		Approver:	RR



Panasonic corporate's property,
 All rights reserved

Sheet 11 of 12
 Logon SEE 5.30

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26

POWER

COMMAND

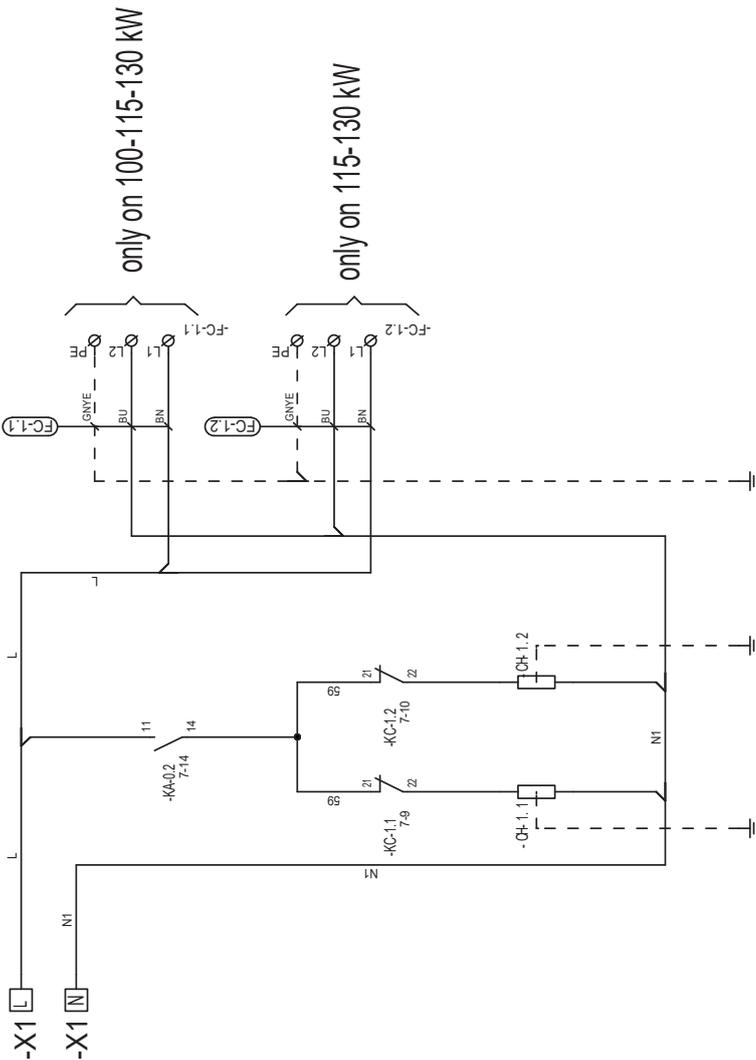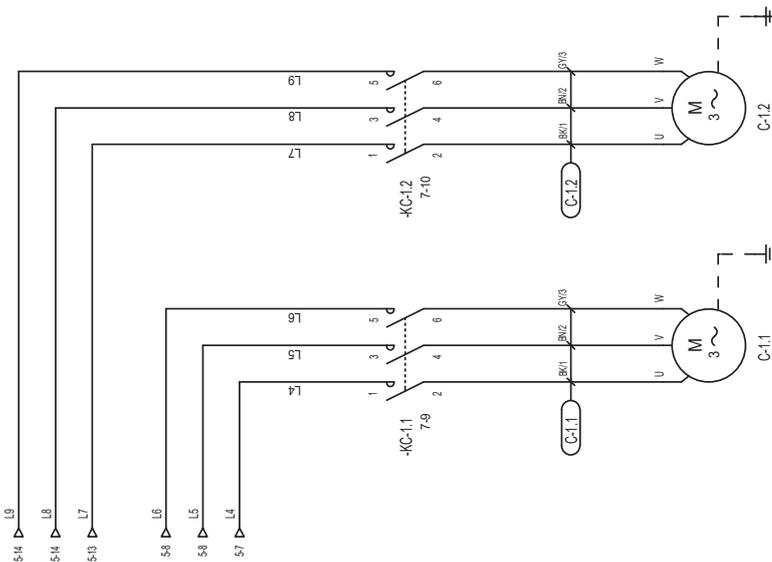

= +

Panasonic corporate's property,
 All rights reserved

DRAWING NO:	SP	Legend:	N 038	Doc No:	J5816730
CHECK:		M	07/03/2024	Graphic:	new caption
DATE OF CHECKING:	25/03/2021	L	05/11/2022	Address:	IPF-OUT Factory 65110, 20
		K	04/03/2022	DATE	14/01/2024
		INDEX		DES	

ELECTRICAL DIAGRAM
 Document no: SE 4914 Q


Chiller 70 to 130 R32 3P
 Compressors Without Soft-Starter

SHEET	12
Loggia SEE	5/30
	11
	13

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26

POWER

COMMAND

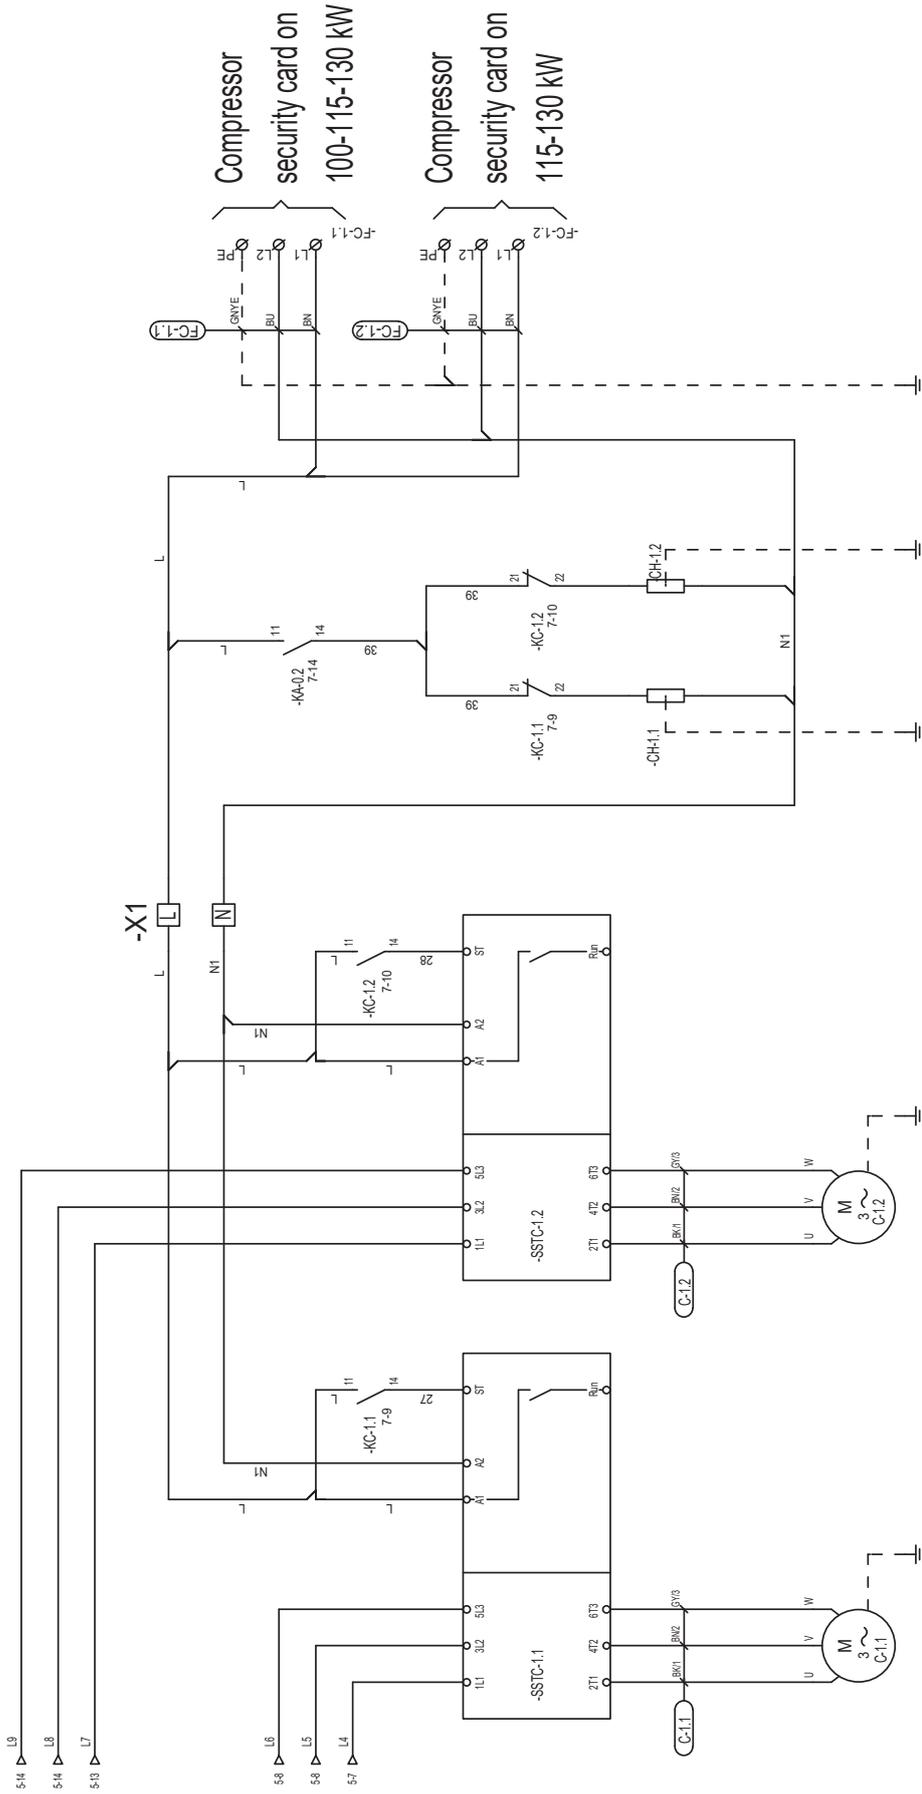

Panasonic corporate's property,
 All rights reserved

DRWNG/REV:	SP	Doc No.:	J5816730
CHECK:		Q	27/09/2025
DATE OF CHECK:	25/03/2021	L	03/10/2022
		K	04/03/2022
		INDEX	ONE
			ADDRESS: VIA F.lli FERRI 51, 10120 MODIF/ORDIN:

ELECTRICAL DIAGRAM
 Document no: SE 4914 Q



Chiller 70 to 130 R32 3P
 Compressors With Soft-Starter

SHEET
 13
 12 14
 Loggia SEE 5 30

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26

POWER

COMMAND

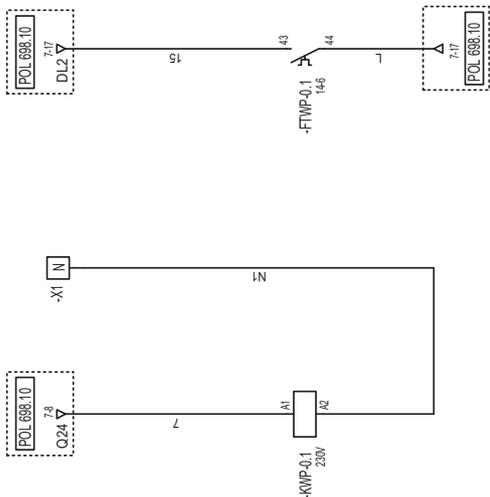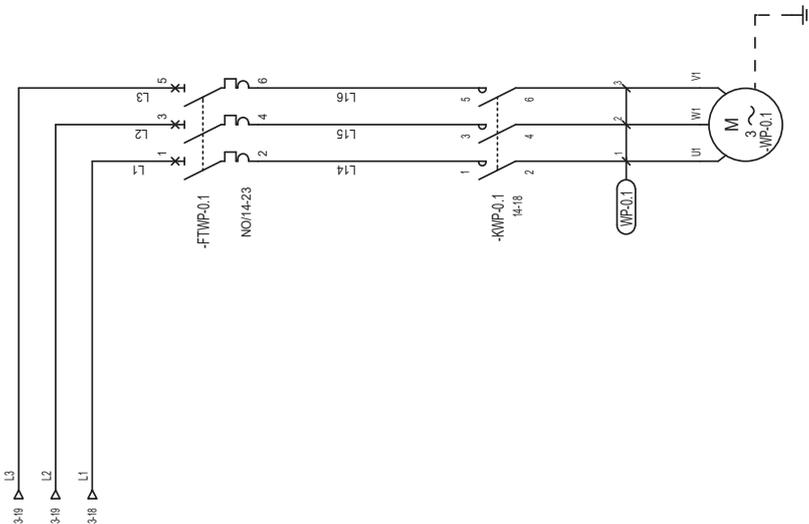

= +

Panasonic corporate's property,
 All rights reserved

DRAWING: SP
 CHECK:
 DATE OF CHECK: 25/03/2021

Legend:	N 638	Doc ID:	J5816730
M	07/03/2024	Graphic:	RR
L	15/10/2022	New symbols:	RR
K	08/03/2022	Address MFC-01 Fases 51 107 20	SP
INDEX	DATE	MODIFICATION	DES

ELECTRICAL DIAGRAM
 Document nb: SE 4914 Q



Chiller 70 to 130 R32 3P
 FIX Pump N°1

SHEET
 14
 ◀ 13 15 ▶
 Logon SEE 4 5 30

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----

POWER

COMMAND

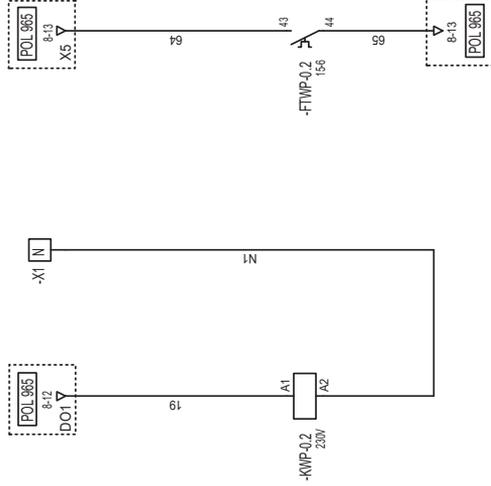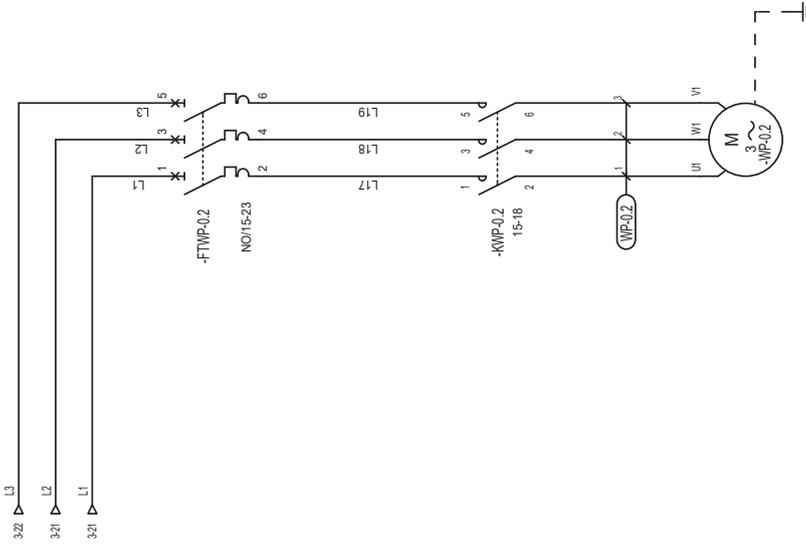

= +

Panasonic corporate's property,
 All rights reserved

DRAWING NO.: SP
 CHECK: _____
 DATE OF CHECKING: 25/03/2021

Legend:	N° 1538	Doc ID:	J5816730
M	07/03/2024	Graphic:	RR
L	15/11/2022	New catalogue	RR
X	08/03/2022	Address MPT-OUT Fiches 61, 107, 20	SP
INDEX	DATE	MODIFICATION	DES

ELECTRICAL DIAGRAM
 Document nb: SE 4914 Q


Chiller 70 to 130 R32 3P
 FIX Pump N°2

SHEET
 15
 ◀ 14 ▶
 Logon SEE 5 30

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26

POWER

COMMAND

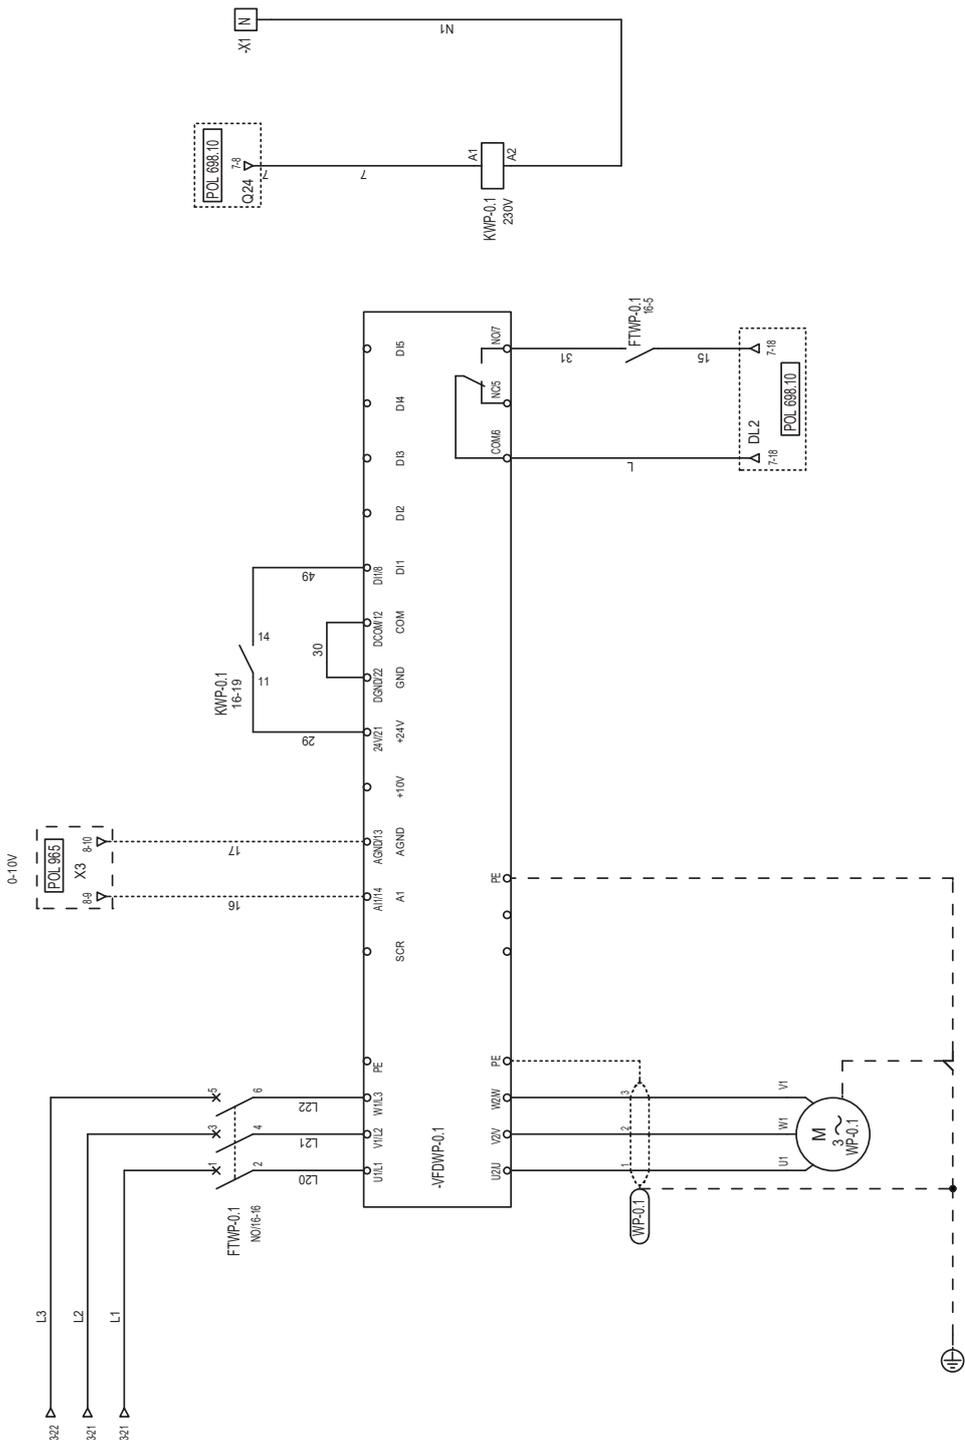

Panasonic corporate's property,
 All rights reserved

DRWNGER:	SP	Legend:	N° 638	Doc ID:	J5816730
CHECK:		P	04/04/2025	ACS180	FR
DATE OF CHECK:	25/03/2021	M	07/03/2024	WPT_EBF	FR
		L	15/11/2022	new package	FR
		INDEX	ONE	MODIFICATION	DES

ELECTRICAL DIAGRAM
 Document nb: SE 4914 Q


Chiller 70 to 130 R32 3P
 Modulating Pump N°1

SHEET
 16
 ◀ 15 17 ▶
 Logon SEE 5 30

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----

POWER

COMMAND

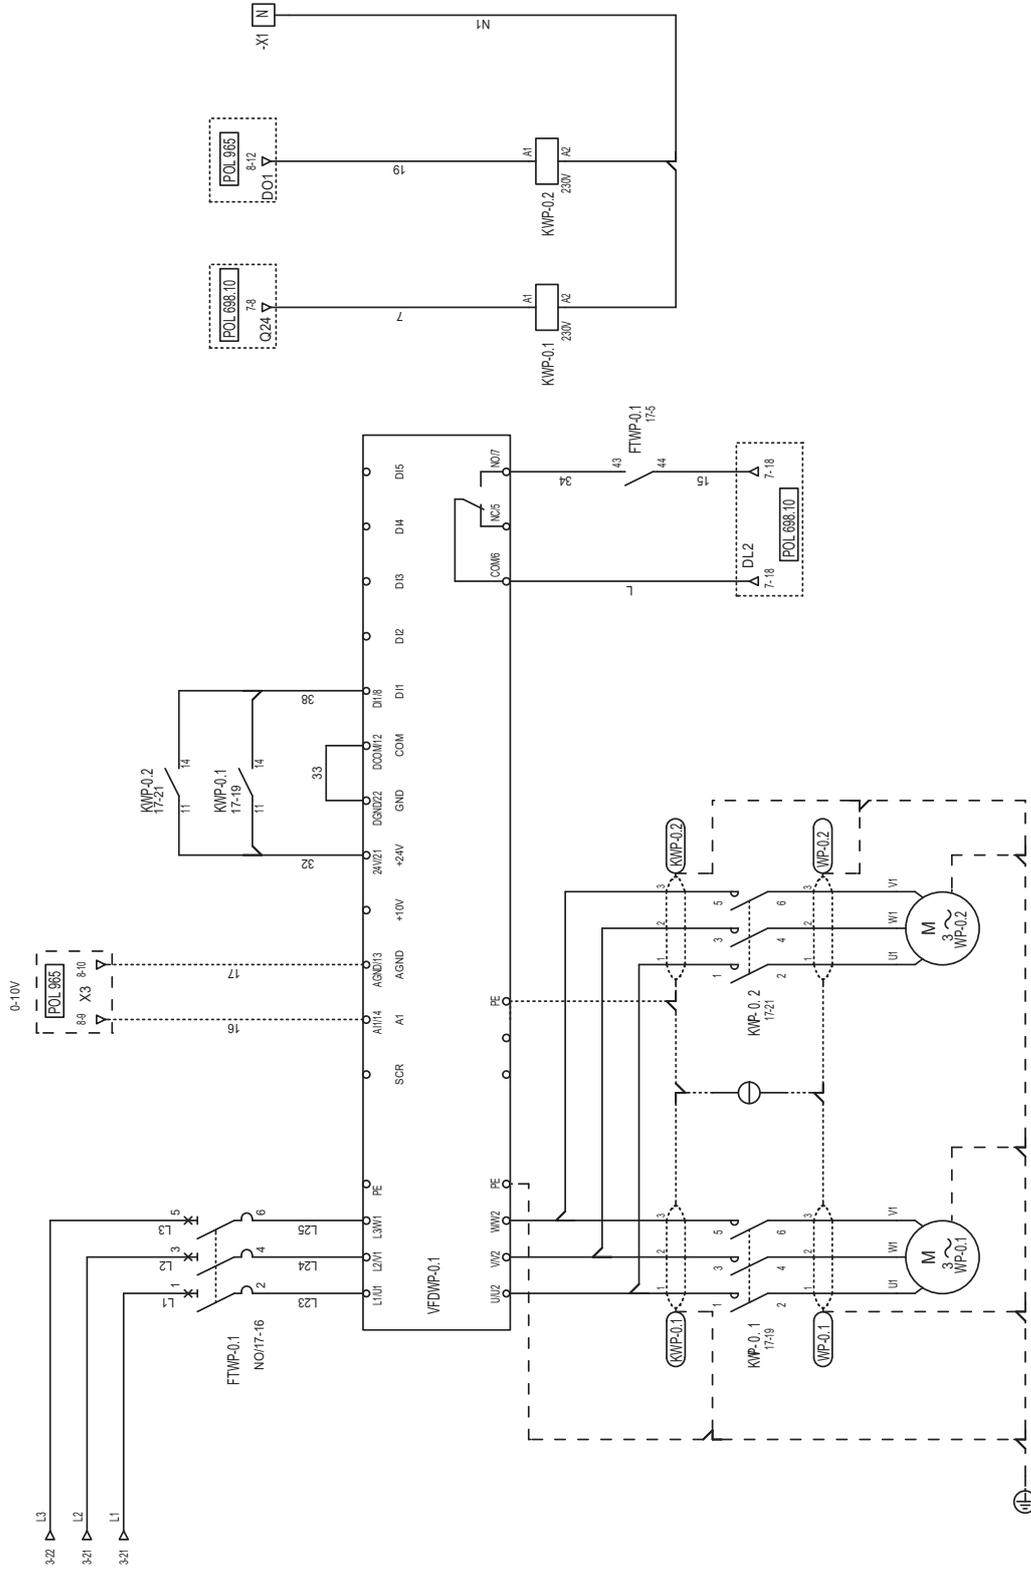

Panasonic corporate's property,
 All rights reserved


DRWING: SP	DATE: 25/03/2021
CHECK: RR	DATE OF CHECK: 25/03/2021
DATE OF CHECK: 25/03/2021	DATE OF CHECK: 25/03/2021
DATE OF CHECK: 25/03/2021	DATE OF CHECK: 25/03/2021

ELECTRICAL DIAGRAM
 Document nb: SE 4914 Q

Chiller 70 to 130 R32 3P
 Modulating Pumps N°1 & 2

SHEET	17
16	18
Logon SEE	5 30

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----

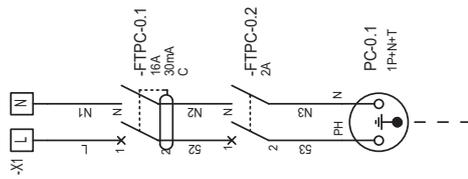

3-24 \triangle REF

Panasonic corporate's property, All rights reserved	DRWINGEER: SP	Legent: N 1538	Doc ID: J5816730	SHEET 19	
	CHECK: L	Q 27/09/2025	Graphic: New caption	18	20
DATE OF CHECK: 25/03/2021	TYPE: SP	L 15/10/202	Address: PFC.T. Falso 51. 10. 20	18	20
		X 04/03/2022	ADDITION:	Logon SEE	5 30
ELECTRICAL DIAGRAM			Chiller 70 to 130 R32 3P Modem 4G		
Document nb: SE 4914 Q					

COMMISSIONING FORM

CUSTOMER INFORMATION:

Order number: Job name:
 Contractor: Installation address:
 Contact: ☎:

INSTALLER INFORMATION:

Company: Address:
 Contact: ☎:

COMMISSIONING INFORMATION:

Company: Address:
 Contact: ☎:

UNIT IDENTIFICATION:

	70	75	85	100	115	130
ECOi-W AQUA-Z C						
ECOi-W AQUA-Z H						

Unit serial number:

	YES	NO
Simple pump	<input type="checkbox"/>	<input type="checkbox"/>
Double pump	<input type="checkbox"/>	<input type="checkbox"/>
Buffer tank	<input type="checkbox"/>	<input type="checkbox"/>

	YES	NO
All seasons kit	<input type="checkbox"/>	<input type="checkbox"/>
HPF	<input type="checkbox"/>	<input type="checkbox"/>

	YES	NO
XLN	<input type="checkbox"/>	<input type="checkbox"/>
Soft Starter	<input type="checkbox"/>	<input type="checkbox"/>

Compressor 1 serial number: Compressor 2 serial number:

INSTALLATION CHECKING:

	YES	NO
Recommended free clearance	<input type="checkbox"/>	<input type="checkbox"/>
Level installation	<input type="checkbox"/>	<input type="checkbox"/>
Unit correctly mounted on supplied dampers	<input type="checkbox"/>	<input type="checkbox"/>
Power supply compatible with unit specifications	<input type="checkbox"/>	<input type="checkbox"/>
State-of-art power cable section and wiring to the unit	<input type="checkbox"/>	<input type="checkbox"/>
Ground cable is wired	<input type="checkbox"/>	<input type="checkbox"/>
Main electrical protection suits the unit	<input type="checkbox"/>	<input type="checkbox"/>
All electrical connections are correctly tightened	<input type="checkbox"/>	<input type="checkbox"/>
Ground continuity on all pipes	<input type="checkbox"/>	<input type="checkbox"/>

	YES	NO
Water connection, cleaning, rinsing, air bleed	<input type="checkbox"/>	<input type="checkbox"/>
Anti-frost protection of the water loop	<input type="checkbox"/>	<input type="checkbox"/>
Installation thermal load reaches at least 50%	<input type="checkbox"/>	<input type="checkbox"/>
Mesh filter at the inlet of the unit	<input type="checkbox"/>	<input type="checkbox"/>
Minimum water flowrate available	<input type="checkbox"/>	<input type="checkbox"/>
Flowswitch cut-out checked	<input type="checkbox"/>	<input type="checkbox"/>
Crankcases heaters are energized since 12 hours	<input type="checkbox"/>	<input type="checkbox"/>

OBSERVATIONS:

.....

INSTALLATION MEASUREMENTS:

Ambient temperature: Ambient humidity:

ELECTRICAL MEASUREMENTS:

Voltage L1-N: Voltage L1-L2:

Voltage L1-L3: Voltage L2-L3:

YES NO

Voltage unbalance less than 2 %

Never start the unit if the voltage unbalance is over 2 %. Please, contact your electricity supplier for help.

	VOLTAGE			NOMINAL CURRENT		
	L1-L2	L1-L3	L2-L3	L1	L2	L3
Comp. 1						
Comp. 2						
Fan 1						
Fan 2						
Pump 1						
Pump 2						

THERMODYNAMICS MEASUREMENTS:

% of capacity	%	%	%	%
Evaporating pressure	bar	bar	bar	bar
Evaporating temperature	°C	°C	°C	°C
Suction temperature	°C	°C	°C	°C
Condensing pressure	bar	bar	bar	bar
Condensing temperature	°C	°C	°C	°C
Liquid line temperature	°C	°C	°C	°C
Discharge temperature	°C	°C	°C	°C
High pressure switch cut-out	bar	bar	bar	bar

HYDRAULICS MEASUREMENTS:

Inlet temperature	°C
Outlet temperature	°C
BPHE inlet pressure	kPa
BPHE outlet pressure	kPa
Glycol type & contents	%

Vmax (VARIABLE PRIMARY FLOW)	%
Vmin (VARIABLE PRIMARY FLOW)	%
Vstdby (VARIABLE PRIMARY FLOW)	%
Water pressure setpoint	bar

REMARKS:

.....

The installer certifies that the system has been installed in accordance with the design requirements, and reports that the safety and control devices have been adjusted in accordance with the manufacturer's recommendations.

Date:
TECNICIAN:
Name:
Sign-in:

Date:
CLIENT:
Name:
Sign-in:

Panasonic Heating & Ventilation Air-Conditioning France SAS

Route de Verneuil
27570 Tillières-sur-Avre
FRANCE

☎ : +33 (0)2 32 60 61 00

☎ : +33 (0)2 32 32 55 13

www.aircon.panasonic.eu



IMM ECOi-W AQUA-Z 02-N-2EN

Part number : **J581976EN**

September 2025

Supersedes : **IMM ECOi-W AQUA-Z 02-N-1EN**